

SPECIFICATIONS

· Horizontal (0°) Load Capacity	: 52.9 oz. (1.5kg)
· 30° Angle Load Capacity	: 35.3 oz. (1.0kg)
· Vertical (90°) Load Capacity	: 28.2 oz. (0.8kg)
· Inverted (180°) Load Capacity	: 52.9 oz. (1.5kg)
· Battery Capacity	: 1200mAh
· Battery Charging Voltage	: 12 VDC, 1A
· Battery Charge Time	: About 4 hours
· Operating Time	: Up to 6 hours with a 1kg load
· Motor Type	: Stepper motor
· Operating Temperature	: +14 ~ +113°F (-10 ~ +45°C)
· Dimensions	: 3.6" x 2.5" (92 x 64 mm)
· Weight	: 16.2 oz. (460g)

MONOPRICE®



360° PANORAMIC ROTATOR

PID **12508**

USER's MANUAL

MONOPRICE® | www.monoprice.com

▲ Product pictures are for reference only.
▲ Specifications described herein are subject to change without prior notification.
▲ All trademarks are the sole property of their respective companies.
▲ Copyright © 2015 Monoprice, Inc. All rights reserved.

SAFETY WARNINGS and GUIDELINES

Please read and follow the instructions in this user's manual, pay particular attention to these safety warnings and guidelines.

- Handle the unit with care. Do not drop it or otherwise subject it to extreme shocks or vibrations.
- Do not attempt to turn the platter by hand. Doing so can damage the motor and/or gearing inside the device.
- Do not exceed the rated load limit for any given angle of operation. Note that the load limit decreases as the platter is angled from horizontal to vertical. Please refer to the specifications for the various load limits.
- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For particularly stubborn deposits, moisten the cloth with warm water.
- Do not expose this device to water or moisture of any kind. If exposed to moisture, immediately turn the device off and allow it to fully dry out before reapplying power.
- Do not expose this device to excessively high temperatures. Do not place it in, on, or near heat sources, such as a fireplace, stove, radiator, etc. Do not leave it in direct sunlight.
- Charge the battery before first use and at least once every three months.

INTRODUCTION

Thank you for purchasing this 360° Panoramic Rotator from Monoprice!

This light-weight rotator features a 1/4"x20 threaded mounting point, making it compatible with all standard tripods and other photo/video accessories. It allows you to automatically create smooth panning and precise time-delay photos and videos. You can set the number of degrees to pan, the speed at which the panning will take place, and the direction of the pan (clockwise or counterclockwise). The rotator can support up to 52.9 oz. (1.5kg) in the horizontal position and up to 28.2 oz. (0.8kg) when in the vertical position.

CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website (www.monoprice.com) during normal business hours (Mon-Fri: 5am-7pm PT, Sat-Sun: 9am-6pm PT) or via email at support@monoprice.com.


PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

- 1 x 360° panoramic rotator
- 1 x AC power adapter
- 1 x User's manual

PRODUCT OVERVIEW

1. Angle (Duration) Indicator
2. Rotation Time Indicator
3. Direction Indicator
4. Duration Button
5. R.T. Button
6. Start / Stop Button
7. Direction Change Buttons (Duration + R.T.)

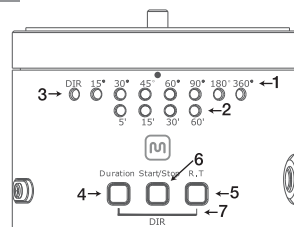

CHARGING

This device contains a built-in, 1200mAh rechargeable battery. The battery should be charged before the first use and the four Rotation Time Indicators are blinking, which indicate the battery level is low. Charge the battery at least once every 3 months, even if the device has gone unused for that length of time. The Charge LED indicator will glow red during charging and will change to green when charging is complete.

OPERATION

1. Screw the rotator onto a tripod or other 1/4"x20 mounting device.
2. Attach the camera to the 1/4"x20 mounting point on the rotator.
3. Angle the camera as desired. Note that angles other than horizontal result in a diminished load capacity. Do not exceed the load capacity for the angle used.
4. Slide the Power switch to the ON position. The DIR, 15°, and 5' indicators will illuminate to indicate that the rotator is operating properly.
5. Press the Duration button to change the amount of rotation you want to achieve. You can select 15°, 30°, 45°, 60°, 90°, 180°, or 360° rotation.

6. Press the R.T. button to change the amount of time that the rotator will take to achieve the angular change set in the previous step.
7. By default, the rotator rotates in a clockwise direction (pan from left to right). If you want it to rotate in a counterclockwise (pan from right to left), press both the Duration and R.T. buttons at the same time. The DIR indicator will be off when set for counterclockwise rotation and on when set for clockwise rotation.
8. Press the Start/Stop button to begin the pan/rotation. The Rotation Time indicator will flash, indicating that the rotator is operating.
9. Press the Start/Stop button at any time to halt the pan/rotation or if you wish to change the Duration and/or Rotation Time.
10. When finished using the rotator, slide the Power switch to the OFF position, then remove your camera and remove the rotator from the mounting point.

TROUBLESHOOTING

- Q1: The rotator's various indicator LEDs are all off, even though the power switch is in the ON position.
- A1: The internal battery needs charging. Please fully recharge the battery and try again.
- Q2: The Rotation Time indicators are all blinking.
- A2: The battery is low. Please fully recharge the battery and try again.
- Q3: The angle markings on the platter are not lined up to start.
- A3: DO NOT MANUALLY ROTATE THE PLATTER!! Instead, set the Duration for 360° and the Rotation Time for 5', then press the Start / Stop button to rotate the platter quickly. Press the Start / Stop button when the 360/0° mark lines up with the dot on the body.
- Q4: The Rotation Time indicator is blinking, but the platter does not appear to be moving.
- A4: You might have the platter set to move very slowly. Try changing the Duration to 360° and the Rotation Time to 5', to verify that the platter rotates as it should.

TECHNICAL SUPPORT

Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website (www.monoprice.com) during regular business hours, 7 days a week. You can also get assistance through email by sending a message to tech@monoprice.com.