


# MONOPRICE

Portable Mini-Melody Bluetooth Speaker

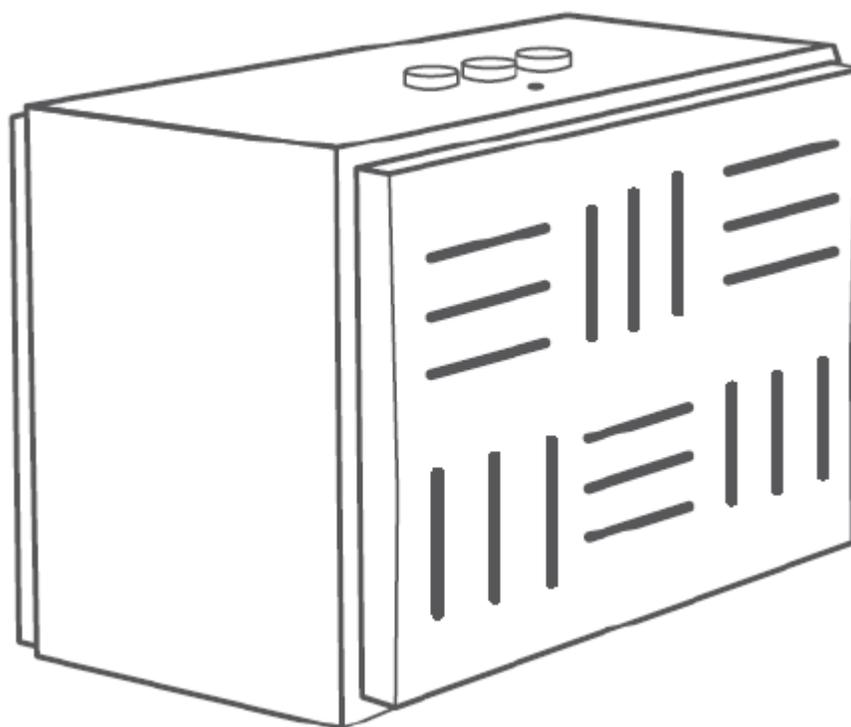

PID 13264

**User's Manual**

## **SAFETY WARNINGS AND GUIDELINES**

- This device is not waterproof. Do not expose it to water or moisture of any kind.
- If using this device in a humid environment, ensure that no condensation occurs. Condensation can damage the speaker driver and/or short the internal electronics.
- Fully charge this device prior to use.
- If left unused for a long period of time, the battery should be charged at least once every three months to ensure that it remains capable of holding a full charge.
- This device has no user serviceable parts. Do not open the case or otherwise attempt to modify this device.

## **INTRODUCTION**

Thank you for purchasing this Portable Mini Melody Bluetooth Speaker!

This compact speaker features a wireless Bluetooth connection with a range of up to 32 feet (10 meters). It also includes a physical 3.5mm wired connection for ultimate flexibility and convenience. The built-in microphone allows you to use this as a speakerphone for making and receiving telephone calls using your Bluetooth-enabled phone.

## **FEATURES**

- Wireless Bluetooth connection
- Up to 32 feet (10 meters) wireless range
- 3.5mm auxiliary input
- Built-in microphone for use as a speakerphone
- Internal rechargeable battery

## CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website [www.monoprice.com](http://www.monoprice.com) during normal business hours (Mon-Fri: 5am-7pm PT, Sat-Sun: 9am-6pm PT) or via email at [support@monoprice.com](mailto:support@monoprice.com)


## PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

- 1x Portable Mini-Melody Bluetooth Speaker
- 1x Micro-USB charging cable
- 1x User's manual

## PRODUCT OVERVIEW

1. Volume - button
2. Multifunction  button
3. Volume + button
4. Microphone
5. Power switch
6. Micro-USB Charging port
7. 3.5mm AUX port

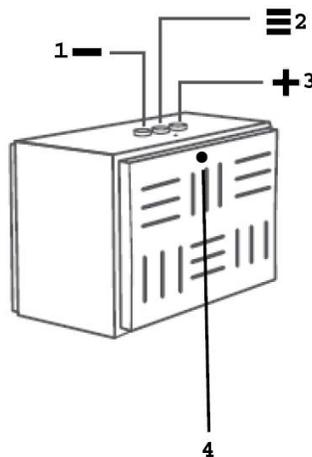


## CHARGE LEVEL INDICATION

The LED indicator will begin flashing red when the battery charge level is low. When it does, charge the speaker by following the instructions in the *Charging* section below.

Depending on your device, a battery level icon may appear on screen.

 The icon will have a short, red bar when the charge level is low.



## CHARGING

This speaker features a built-in battery, which can be charged from any USB power source. Perform the following steps to charge the speaker's battery:

1. Plug the USB Micro-B end of the included charging cable into the **Micro-USB Charging** port (6) on the speaker.
2. Plug the other end of the cable into a USB power source, such as a computer's USB port or an AC adapter/wall charger.
3. The LED will change color while charging is in progress:
  - If the speaker is **ON** during charging and you are using a Bluetooth connection, the LED will glow pink/purple while charging and then will return to the normal blue color when charging is complete.
  - If the speaker is **ON** during charging and you are using a direct connection, the LED will blink pink/purple while charging and then will return to the normal blinking blue color when charging is complete.
  - If the speaker is **OFF** during charging, the LED will glow red while charging, then will turn off when fully charged.

*Note: The battery should be fully charged at least once every three months, even if the speaker has gone unused during that time.*

## BLUETOOTH PAIRING

Perform the following steps to pair the speaker with your phone or other Bluetooth device:

1. Slide the **Power** switch (5) to the **ON** position. The speaker will beep and the LED indicator will begin to blink blue, indicating that the speaker is in Bluetooth Pairing Mode.

*Note: If the speaker is already paired to a device, the LED will instead glow blue continuously. To unpair the speaker from the other device, press and hold the **Multifunction**  button (2) for about 3 seconds. The speaker will beep and the LED will begin blinking blue, indicating that the speaker is ready to be paired with another device.*

2. Open the Bluetooth settings on your device and search for nearby Bluetooth devices.
3. Locate and select the **MP-13264** entry. If prompted for a passcode, enter 0000 (four zeroes). The speaker will beep and the LED indicator will stop blinking and begin to glow blue continuously.

## PAIRING WITH ANOTHER DEVICE

Although the speaker can be paired with multiple devices, it can only be paired with one at a time. Perform the following steps to pair the speaker with a different device:


1. Slide the **Power** switch (5) to the **ON** position.
2. Press and hold the **Multifunction**  button (2) for about 3 seconds. The speaker will beep and the LED will begin blinking blue, indicating that the speaker is ready to be paired with another device.
3. Follow the instructions in the *Bluetooth Pairing* section above.

## DIRECT CONNECTION

If you cannot use a Bluetooth connection, you can use the speaker for audio playback by connecting it to your device using a 3.5mm stereo audio cable (not included). Perform the following steps to make a direct connection:

1. Plug one end of a 3.5mm stereo audio cable (not included) into the **AUX** port (7) on the speaker.
2. Plug the other end of the cable into the headphone output jack on your audio device.

*Note that when using a direct connection, the volume control buttons on the speaker are non-operative. Use the volume controls on your audio device to control the volume level.*

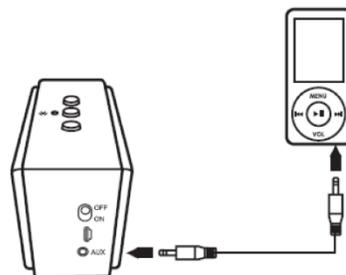

## TELEPHONE CALLS

If you are using a Bluetooth connection with your phone, the speaker can be used as a speakerphone for incoming and outgoing calls.

### Incoming Calls

When you receive an incoming call, audio playback will automatically pause. You will hear your phone's normal ringtone and the speaker will beep to indicate that an incoming call has been received.

- To answer the call, press the **Multifunction**  button (2) once.
- To reject the call, press and hold the **Multifunction**  button (2) for about 2 seconds.
- Once the call has been completed, press the **Multifunction**  button (2) once to terminate the call. Audio playback will automatically resume.

## Outgoing Calls

You can use the speaker as a speakerphone when initiating a telephone call.

- Use your phone as normal to initiate the call.
- Use the speaker and the built-in microphone as a speakerphone during the call.
- Press the **Multifunction**  button (2) once to terminate the call.

## AUDIO PLAYBACK CONTROL

When using a Bluetooth connection, the following buttons control audio playback:

- **Volume - (1)**: Press to decrease the volume level.
- **Multifunction**  **(2)**: Press to pause/resume playback.
- **Volume + (3)**: Press to increase the volume level.

## TROUBLESHOOTING

**Q1:** I slide the Power switch to the ON position, but the LED remains off.

**A1:** Recharge the battery.

**Q2:** The volume is too low, even with the volume level set to maximum.

**A2:** Increase the volume level on your audio source device. For best results, set the volume level on your source device to near maximum, then use the volume controls on the speaker to adjust to a comfortable listening level.

**Q3:** The volume controls on the speaker have no effect.

**A3:** The volume controls on the speaker are non-operative when using a direct connection. Switch to a Bluetooth connection to use the volume controls on the speaker.

## TECHNICAL SUPPORT

Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website [www.monoprice.com](http://www.monoprice.com) during regular business hours, 7 days a week. You can also get assistance through email by sending a message to [tech@monoprice.com](mailto:tech@monoprice.com)

## REGULATORY COMPLIANCE

### Radio Notice for FCC

Caution 

This FCC Part 15 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Radio Notice for Industry Canada

### Caution

This IC RSS-210 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with IC RSS-210. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## EU Conformity with Applicable Directives



This equipment complies with the essential requirements listed below:

- EMC Directive 2004/108/EC
- Low Voltage Directive 2006/95/EC
- R&TTE Directive 1999/5/EC
- RoHS Directive 2011/65/EU
- WEEE Directive 2011/65/EU
- Packaging & Packaging Waste Directive 94/62/EC
- Batteries Directive 2006/66/EC