

# MONOPRICE

## Enthusiast Full-Sized Backlit Mechanical Keyboard

Models 13788 / 13790

### User's Guide

#### FN Key Functions

While holding the **FN** key, press one of the following keys to perform the indicated functions:

- F1** Skips ahead to the next track in the media player
- F2** Play/Pause playback in the media player
- F3** Skips back to the previous track in the media player
- F4** Stop playback in the media player
- F5** Mute/Unmute the Windows master volume level
- F6** Decrease the Windows master volume level
- F7** Increase the Windows master volume level
- F8** Switch backlit mode (auto switch)
- F9** Customize backlit recording area 1
- F10** Customize backlit recording area 2
- F11** Customize backlit recording area 3
- PrtSc** Breathing backlit
- ScrLk** Marquee backlit
- Pause** Backlit shear switch
- Ins** Single point each key backlit
- Home** Full backlit
- PgUp** Flow backlit
- Del** Snake marquee backlit
- End** Backlighting off
- PgDn** Ripple backlit
- LWin** Locks/Unlocks the Windows Start Menu and Right Click keys (the **Gaming** LED will illuminate when locked)
- / \_** Decrease backlit speed
- = / +** Increase backlit speed

## FN Key Functions (cont)

↑	Increases the brightness of the LED backlighting
↓	Decreases the brightness of the LED backlighting
←	Backlit direction from right to left
→	Backlit direction from left to right
Esc	Restore factory default settings

## User Defined Modes

The keyboard features three customizable backlighting modes, with which you can specify which keys will be backlit. This is particularly useful for gaming, where particular keys are used while other are not.

- To use an already defined custom setting, simply press **FN+ F9, F10, or F11**.
- To record your own custom backlit design, activate one of the custom settings as described in the previous sentence. Then press **FN+ F9, F10, or F11** a second time. The **Gaming** LED will start blinking, indicating that the keyboard is in recording mode. Now, press individual keys to toggle the backlighting on or off, as desired. When you are finished configuring your custom backlighting, press **FN+ F9, F10, or F11** a third time. The **Gaming** LED will stop blinking.

## Specifications

**Number of Keys:** 104

**Interface:** USB

**Key Throw Distance:** 4.0mm

**Key Activation Force:** 60±10g (Blue switches) or 45±10g (Red switches)

**Working Voltage:** 5 VDC, < 200mA

**Dimensions:** 17.5" x 6.8" x 1.6" (445 x 172 x 40 mm)

**Weight:** 2.9 lbs. (1.3 kg)

**OS Compatibility:** Windows 98SE or later