



## TrueWireless™ Earphones

P/N 42010

## User's Manual

## **SAFETY WARNINGS AND GUIDELINES**

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- The earphones are rated IPx6, which means that they can resist high pressure water jets. This makes them safe for use in the rain or around splashing water. However, they are not fully waterproof and should not be immersed in water or other liquids.
- Do not subject the product to extreme force, shock, or fluctuations in temperature or humidity.
- Do not use this device while operating a motor vehicle, heavy equipment, walking in traffic, or any other situation in which situational awareness is a key to safety.
- Avoid prolonged exposure to excessive volume levels, which could cause hearing damage. Reduce the volume to minimum before wearing these earphones, then increase the volume to a comfortable listening level.
- This device contains a Lithium battery. Dispose of this device only in accordance with local, state, or federal regulations for electronic waste.
- Charge the battery before first use and at least once every three months to keep it fresh and capable of holding a full charge.

- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.
- This device has no user serviceable parts. Do not attempt to open, service, or modify this device.
- This device contains small parts that could pose a choking hazard to small children. Keep this device and its parts out of reach of small children.

## ONLINE SUPPORT

Monoprice is pleased to provide free online support. For order related issues, contact the Customer Service department through the Live Chat link on our website **[www.monoprice.com](http://www.monoprice.com)** or via email at **[support@monoprice.com](mailto:support@monoprice.com)**

For technical issues, contact the Technical Support department through the online chat button on our website **[www.monoprice.com](http://www.monoprice.com)** or by sending an email to **[tech@monoprice.com](mailto:tech@monoprice.com)**

Check the website for support times and links.

## PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

1x Pair TrueWireless™ Earphones with Medium Eartips

1x Charging Case

 
1x Micro USB Charging Cable

2x Pairs Replacement Eartips (Small and Large)


1x User's Manual

## PRODUCT OVERVIEW

### Earphones



## Charging Case

 

## CHARGING

Note: Fully charge the earphones and the charging case before first use and at least once every 3 months to keep the batteries fresh and capable of holding a full charge.

To charge the earphones, insert them into the charging case. The **Status LEDs** will illuminate while charging is in progress and will extinguish when charging is complete.

When the earphones are placed in the case, the case will illuminate its **Battery Status LEDs** for 8 seconds to indicate its battery charge level. When no LEDs or only a single LED illuminates, the case should be charged. To charge the case, plug one end of the included USB charging cable into the **Micro USB Charging Port** on the case, then plug the other end into an available USB power source, such as a wall charger or computer port (not included).

While charging is in progress, the LEDs will illuminate to show the current charge level. When charging is complete, all four LEDs will be illuminated.

A full charge for the earphones takes about 1.5 hours and will allow up to 6 hours of call/playback time at 80% volume level. A full charge on the charging case takes about 2 hours and is sufficient to allow an additional 14 hours of call/playback time. Charging the earphones for about 20 minutes will provide a sufficient charge for up to 2 hours of call/playback time.

## GETTING STARTED

 
1. Open the cover on the charging case and remove the earphones. They will automatically power on and pair with each other. The earphones will say **Power on.**



2. If the earphones have not yet been paired with Bluetooth® device, they will say **Please pair to your device.**
3. Open the Bluetooth settings on your mobile device and scan for available Bluetooth connections. Locate and select the **MP42010** entry. If prompted for a passcode, enter **0000** (four zeros).

4. Once the connection is established, the earphones will say **Connected**.

Note: If the earphones have already been paired with a device and that device is in range, steps 2-3 above will be skipped.

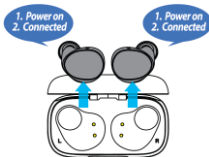

## OPERATION

### Power

Remove the earphones from the charging case to power them on. Insert the earphones into the charging case to power them off.

Note: If the earphones are not able to establish or maintain a connection for 5 minutes, they will automatically power off. To power them back on, insert them into the charging case, then remove them.

## Playback Control

Double tap either earphone to play or pause audio playback. The earphones have no other playback controls, so use your connected device to adjust the volume level and to skip tracks.

 


## Phone Calls

Double tap either earphone when an incoming call is received to answer the call. When the call is complete, double tap either earphone to hang up.

## TROUBLESHOOTING

If you experience any interconnectivity issues between the earphones or Bluetooth® pairing/connectivity issues, the simple solution is to insert the earphones into the charging case and close the lid. Wait at least 15 seconds, then open the lid and remove the earphones.





## REGULATORY COMPLIANCE

### Notice for FCC



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which

can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **Radio Notice for FCC**

### **Caution**

This FCC Part 15 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **Notice for Industry Canada**

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## **Radio Notice for Industry Canada**

### **Caution**

This IC RSS-210 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with IC RSS-210. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

*Monoprice™ and all Monoprice logos are trademarks of Monoprice Inc.*

*Qualcomm® is a trademark of Qualcomm Incorporated, registered in the United States and other countries. TrueWireless™ is a trademark of Qualcomm Technologies International, Ltd. Qualcomm® TrueWireless™ is a product of Qualcomm Technologies International, Ltd.*

*The Bluetooth® word mark and logos are registered trademarks of Bluetooth SIG, Inc.*