

## Introduction

Thank you for purchasing these Monoprice Active Speakers!

For best results, please read this manual completely before attempting to install or use these speakers. Pay extra attention to the Safety Tips and Warnings below to ensure both your own personal safety and the long-term service from of these speakers.

## Safety Tips and Warnings

Do not expose these speakers to water or moisture of any kind. They are not waterproof and exposure could result in fire, electrical shock, and damage to the speakers and surrounding property.

Take care to ensure that the power cords do not become worn or damaged. Inspect the power cord for damage prior to plugging it into a live electric circuit. If the cord is damaged replace it with a standard PC power cord (IEC 60320 C13 plug to NEMA 5-15 plug).

When plugging or unplugging the power cord, grip the connector head and not the cord itself. Pulling on the cord can result in damage to the cord, which could in turn lead to an electric short and/or fire.

Never touch the power cord or speaker with wet hands or when standing in water. Doing so could lead to electric shock.

Avoid installing or using the speakers in a humid or dusty environment.


MONOPRICE®

## 2-Way Active Wall Mount Speakers (Pair)-25W



**7495/7496**

## DIMENSION

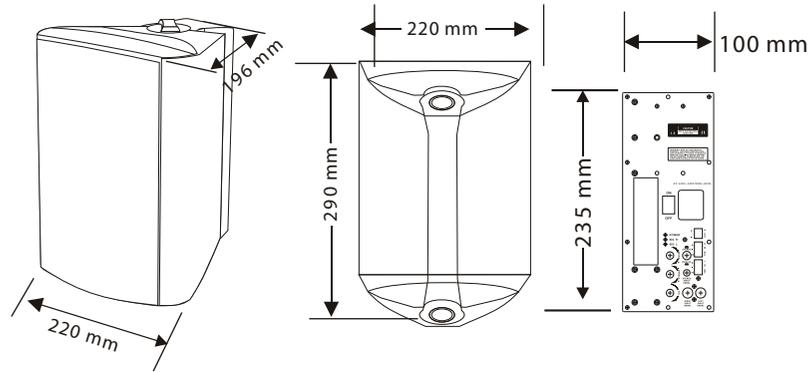

## SPECIFICATIONS

MODEL	MPA-25-BK
RMS	25Wx2@8Ω
OUTPUT SENSITIVITY	0.7V
FREQUENCY RESPONSE	20Hz~20KHz/1W, ±0.5db
AC POWER SUPPLY	AC120V/50Hz~60Hz
TREBLE CONTROL	±10db
BASS CONTROL	±10db
DIMENSION(mm)	220X196X290
GROSS WEIGHT	10.1Kg

## INSTALLATION

