

Pen Tablet Functions

After installing the device driver, your pen tablet features have got the following functions:

- 1.) Tapping ~ before you use the digital pen Before you use the digital pen, or after not using it for several minutes, tap the pen on any surface of the tablet to “wake” it up from the standby mode.
 - 2.) Direct pointing – You can move the cursor to any location on the screen by hovering the digital pen tip over the tablet’s surface.
 - 3.) Three-buttons mouse commands - Your pen tablet provides all functions of a three-buttons’ mouse by using its pen tip and two buttons.
 - 4.) Pen scrolling – You can scroll documents and Web pages by pressing the middle button of the digital pen over the tablet’s working area.
 - 5.) Pressure sensitivity – This feature allows you to emulate various brushes and pencils and you can press down the pen tip harder, lighter, stronger or thicker, and subtle pencil lines you will receive.
 - 6.) Double tapping ~ When you double tap with the digital pen (equivalent to a double click with a mouse), try to keep the pen tip away from the tablet’s surface, or at least try to lift the pen tip as fast as possible before the second tap.
 - 7.) Using a pen without an ordinary mouse ~ You may install the digital pen, digital mouse, and normal mouse in your computer at the same time and you can also remove them to different computer as well. However, only one device is able to work in the meantime.
- * Please do not use more than two devices at the same time in case the screen cursor is jittering or not moving.

Verifying Hardware and Driver Functionality

Problem:

The instructions say the green LED is supposed to be on when the unit is turned on, and that there is a switch to turn the unit on and off. I can’t find the switch, how do I turn the tablet on?

The Instructions:

The green LED light on the tablet is the main indicator for hardware operation and depending on your pen tablet model may be located at a different place that shown in the above diagram. This LED normally stays off, and will only turn it on or off in response to various conditions. Watch the state of the LED on the tablet as you go through these test steps:

1. Tap on any surface with the tip of the pen, or press the left button of the mouse, to “wake it up” if it has gone into standby mode. A built-in power saving function may have forced the pen or mouse into the standby mode if either of them is not used for a period of time.
2. As soon as the pen tablet itself activates, the LED will be light briefly, and will then go and stay off again.
3. When the tablet detects the presence of the digital pen or mouse, the LED will be blinked slowly. This happens either when pen tip is hovering or placing within the working area which above the tablet.
4. When you press a button on the pen barrel, or click on a mouse button, the LED will be lighted up.

5. Hovering and moving the pen or the mouse in the working area will cause the cursor on the screen to move accordingly.

The Solution:

There is no switch on this item to turn it on and off. Basically, as long as it is plugged in, it is turned on. Please verify that the green LED flashes once when you plug in the USB cable into your computer. If it does not flash, you may want to try a different USB port.

Otherwise, the LED stays off except when you tap the pen against the tablet. If it does not flash when the pen is tapped against the tablet, there are a few things you may want to try.


- 1) Replace the battery. Verify that your positive connection is up, and the battery lead is making good contact with the battery. Tap the pen against the tablet and see if the LED flashes.
- 2) Sometimes the battery lead does not make a good connection. Please double-check that the battery lead is in full contact with the battery, and that if necessary, bend the lead down to make better contact with the battery terminal. Tap the pen against the tablet and see if the LED flashes.
- 3) If the pen is still not responding, please try changing the pen tip with one of the spares that was provided. Tap the pen against the tablet and see if the LED flashes.

To Store the Pen:

To store the Digital pen, make sure that the tip does not touch anything, especially, do not let the pen stand in a cup or penholder with the tip down. Pressure applied to the pen tip will cause a constant drain on the pen's battery, it is recommended to place the pen in a pen holder or store it with the pen tip pointing upward, or place it horizontally with the pen tip free of any other objects.

To Change the Pen Battery:


Pull the upper barrel out of the pen and insert the battery.

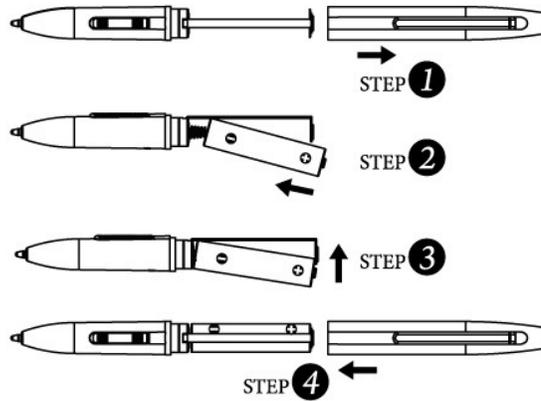


Caution Do not twist the upper barrel!

To Change the Pen Tip:

A.) Pull out the pen tip from the pen by using the included Pen Clip Penholder and the Pen Clip, as seen in the image below:

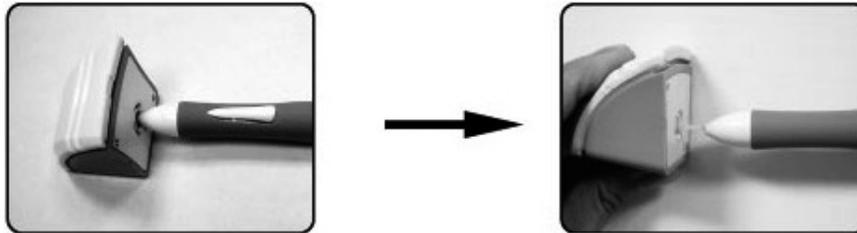

B.) Insert the new pen tip with the pen clip

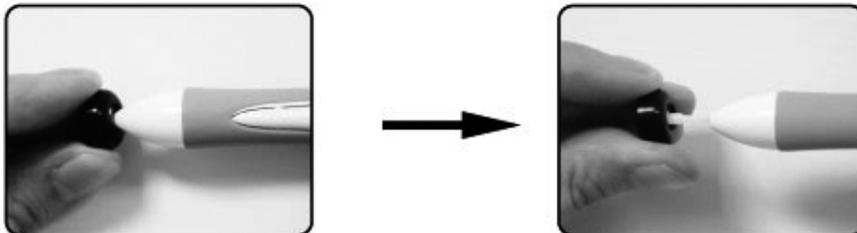

C.) Push the pen tip into the pen

