




6 Zone Home Audio Multizone Controller and Amplifier Kit (P/N 10761)

Fuse Replacement Guide

This 6-zone amplifier now includes a fuse holder with both an active fuse and a spare. In the event that the amplifier does not power on, the fuse should be replaced before attempting to return the amplifier to Monoprice.

The spare fuse is located within the fuse holder, outlined in red in the image to the right. The fuse specification is: **10A/250V 5*20mm LAG (slow-melting) C-UL PSE**

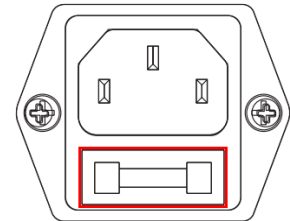

Perform the following steps to replace the fuse:

1. Power off and unplug the amplifier from its power source.
2. Using your fingernail or a small, flat-blade screwdriver, loosen the fuse holder, then remove it.
3. Remove the active fuse, as shown in the first image to the right.
4. Push the spare fuse out of its holder, as indicated by the blue arrow in the second image to the right, then install it into the active fuse slot.
5. Install the fuse holder with the replacement fuse into the amplifier.
6. Plug in and power on the amplifier. Verify that the amplifier powers on and operates as normal.

