


# MONOPRICE

## Portable Melody Bluetooth Speaker

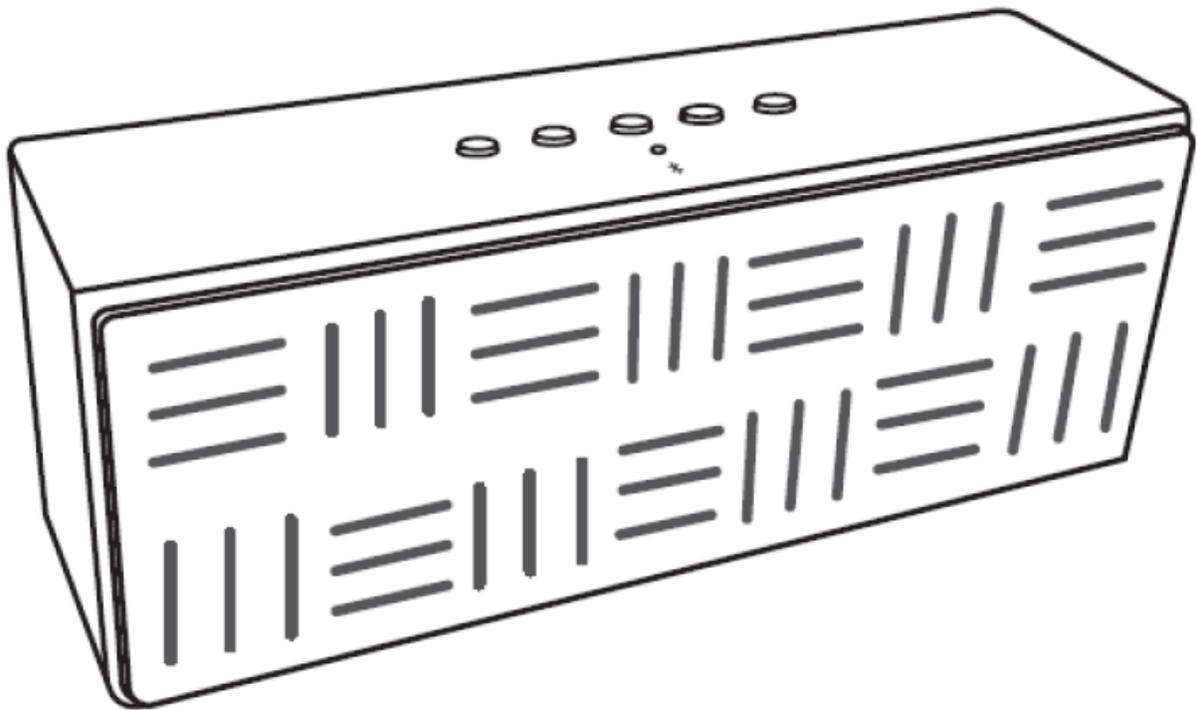

PID 13271

## User's Manual

## **SAFETY WARNINGS AND GUIDELINES**

- This device is not waterproof. Do not expose it to water or moisture of any kind.
- If using this device in a humid environment, ensure that no condensation occurs. Condensation can damage the speaker driver and/or short the internal electronics.
- Fully charge this device prior to use.
- If left unused for a long period of time, the battery should be charged at least once every three months to ensure that it remains capable of holding a full charge.
- This device has no user serviceable parts. Do not open the case or otherwise attempt to modify this device.

## **INTRODUCTION**

Thank you for purchasing this Portable Mini Melody Bluetooth Speaker!

This compact speaker features a wireless Bluetooth connection with a range of up to 32 feet (10 meters). It also includes a physical 3.5mm wired connection for ultimate flexibility and convenience. The built-in microphone allows you to use this as a speakerphone for making and receiving telephone calls using your Bluetooth-enabled phone.

## **FEATURES**

- Wireless Bluetooth connection
- Up to 32 feet (10 meters) wireless range
- 3.5mm auxiliary input
- Built-in microphone for use as a speakerphone
- Internal rechargeable battery

## **CUSTOMER SERVICE**

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website **[www.monoprice.com](http://www.monoprice.com)** during normal business hours (Mon-Fri: 5am-7pm PT, Sat-Sun: 9am-6pm PT) or via email at **[support@monoprice.com](mailto:support@monoprice.com)**


## PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

- 1x Portable Melody Bluetooth Speaker
- 1x Micro-USB charging cable
- 1x Quick user's guide

## PRODUCT OVERVIEW

1. Volume - button
2. Previous Track < button
3. Multifunction ≡ button
4. Volume + button
5. Next Track > button
6. Microphone
7. Power switch
8. Micro-USB Charging port
9. 3.5mm AUX port

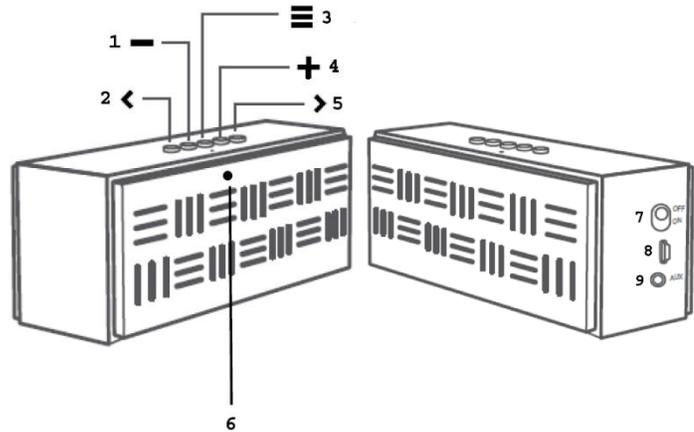

## CHARGE LEVEL INDICATION

The LED indicator will begin flashing red when the battery charge level is low. When it does, charge the speaker by following the instructions in the *Charging* section below.

Depending on your device, a battery level icon may appear on screen. The icon will have a short, red bar when the charge level is low.



## CHARGING

This speaker features a built-in battery, which can be charged from any USB power source. Perform the following steps to charge the speaker's battery:

1. Slide the **Power** switch (7) to the **OFF** position.
2. Plug the USB Micro-B end of the included charging cable into the **Micro-USB Charging** port (8) on the speaker.
3. Plug the other end of the cable into a USB power source, such as a computer's USB port or an AC adapter/wall charger.
4. The LED will blink red while charging, then will turn off when fully charged.

*Note: The battery should be fully charged at least once every three months, even if the speaker has gone unused during that time.*

## BLUETOOTH PAIRING

This speaker can be paired to a Bluetooth-enabled device either manually or automatically, using NFC.

### Manual Pairing

Perform the following steps to manually pair the speaker with your phone or other Bluetooth device:

1. Slide the **Power** switch (7) to the **ON** position. The speaker will beep and the LED indicator will begin to blink blue, indicating that the speaker is in Bluetooth Pairing Mode.

*Note: If the speaker is already paired to a device, the LED will instead glow blue continuously. To unpair the speaker from the other device, press and hold the **Multifunction**  button (3) for about 3 seconds. The speaker will beep and the LED will begin blinking blue, indicating that the speaker is ready to be paired with another device.*

2. Open the Bluetooth settings on your device and search for nearby Bluetooth devices.
3. Locate and select the **MP-13271** entry. If prompted for a passcode, enter 0000 (four zeroes). The speaker will beep and the LED indicator will stop blinking and begin to glow blue continuously.

## NFC Pairing

Perform the following steps to automatically pair the speaker with your phone or other Bluetooth device using NFC:

1. Slide the **Power** switch (7) to the **ON** position.
2. Ensure that both Bluetooth and NFC are enabled on your device.
3. Touch your device to the **NFC** logo on the top left side of the speaker.
4. Your device may prompt you to affirm the connection. If so, click the **Yes** option.
5. The speaker will automatically establish a Bluetooth connection with your device. When the process is completed, the speaker will beep and the LED will cease blinking and begin to glow blue continuously.



## PAIRING WITH ANOTHER DEVICE

Although the speaker can be paired with multiple devices, it can only be paired with one at a time. Perform the following steps to pair the speaker with a different device:


1. Slide the **Power** switch (7) to the **ON** position.
2. Press and hold the **Multifunction**  button (3) for about 3 seconds. The speaker will beep and the LED will begin blinking blue, indicating that the speaker is ready to be paired with another device.
3. Follow the instructions in the *Bluetooth Pairing* section above.

## DIRECT CONNECTION

If you cannot use a Bluetooth connection, you can use the speaker for audio playback by connecting it to your device using a 3.5mm stereo audio cable (not included).

Perform the following steps to make a direct connection:

1. Plug one end of a 3.5mm stereo audio cable (not included) into the **AUX** port (9) on the speaker.
2. Plug the other end of the cable into the headphone output jack on your audio device. The LED will glow red when using a direct connection.

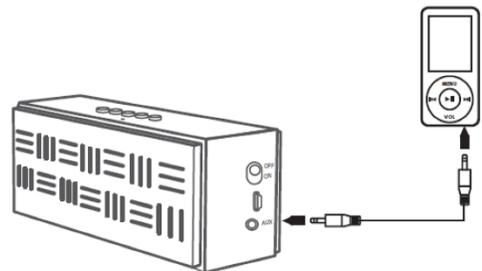

*Note that when using a direct connection, the volume control buttons on the speaker are non-operative. Use the volume controls on your audio device to control the volume level.*

## TELEPHONE CALLS

If you are using a Bluetooth connection with your phone, the speaker can be used as a speakerphone for incoming and outgoing calls.

### Incoming Calls

When you receive an incoming call, audio playback will automatically pause. You will hear your phone's normal ringtone and the speaker will beep to indicate that an incoming call has been received.

- To answer the call, press the **Multifunction**  button (3) once.
- To reject the call, press and hold the **Multifunction**  button (3) for about 2 seconds.
- Once the call has been completed, press the **Multifunction**  button (3) once to terminate the call. Audio playback will automatically resume.

### Outgoing Calls

You can use the speaker as a speakerphone when initiating a telephone call.

- Use your phone as normal to initiate the call.
- Use the speaker and the built-in microphone as a speakerphone during the call.
- Press the **Multifunction**  button (3) once to terminate the call.

## AUDIO PLAYBACK CONTROL

When using a Bluetooth connection, the following buttons control audio playback:

- **Previous < (2)**: Press to skip back to the beginning of the current track. If already at the beginning, press to skip back to the beginning of the previous track.
- **Volume - (1)**: Press to decrease the volume level.
- **Multifunction**  **(3)**: Press to pause/resume playback.
- **Volume + (4)**: Press to increase the volume level.
- **Next > (5)**: Press to skip ahead to the beginning of the next track.

## SLEEP MODE

If the speaker is powered on and no audio signal is present for about 4 minutes, it will go into Sleep mode. Press the **Multifunction**  button (3) once to exit Sleep mode.

## **TROUBLESHOOTING**

**Q1:** I slide the Power switch to the ON position, but the LED remains off.

**A1:** Recharge the battery.

**Q2:** The volume is too low, even with the volume level set to maximum.

**A2:** Increase the volume level on your audio source device. For best results, set the volume level on your source device to near maximum, then use the volume controls on the speaker to adjust to a comfortable listening level.

**Q3:** The volume controls on the speaker have no effect.

**A3:** The volume controls on the speaker are non-operative when using a direct connection. Switch to a Bluetooth connection to use the volume controls on the speaker.

## **TECHNICAL SUPPORT**

Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website **[www.monoprice.com](http://www.monoprice.com)** during regular business hours, 7 days a week. You can also get assistance through email by sending a message to **[tech@monoprice.com](mailto:tech@monoprice.com)**

# REGULATORY COMPLIANCE

## Radio Notice for FCC

### Caution

This FCC Part 15 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Radio Notice for Industry Canada

### Caution

This IC RSS-210 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with IC RSS-210. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## EU Conformity with Applicable Directives



This equipment complies with the essential requirements listed below:

- EMC Directive 2004/108/EC
- Low Voltage Directive 2006/95/EC
- R&TTE Directive 1999/5/EC
- RoHS Directive 2011/65/EU
- WEEE Directive 2011/65/EU
- Packaging & Packaging Waste Directive 94/62/EC
- Batteries Directive 2006/66/EC