MONOPRICE

Melody Large Bluetooth® Speaker

Model 14447

User's Manual

SAFETY WARNINGS AND GUIDELINES

- This device is intended for indoor use only.
- Do not expose this device to water or moisture of any kind. Do not place drinks or other containers with moisture on or near the device. If moisture does get in or on the device, immediately unplug it from the power outlet and allow it to fully dry before reapplying power.
- Do not touch the device, the power cord, or any other connected cables with wet hands.
- If operating this speaker in a humid environment, ensure that no condensation occurs. Condensation could cause damage to the speaker cone and could cause a short in the amplifier, which in turn could cause fire or severe electric shock.
- Do not expose this device to excessively high temperatures. Do not place it in, on, or near heat sources, such as a fireplace, stove, radiator, etc. Do not leave it in direct sunlight.
- Do not subject the product to extreme force, shock, or fluctuations in temperature or humidity.
- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.
- This device has no user serviceable parts. Do not attempt to open, service, or modify this device.
- Keep away from corrosive materials.
- Charge the battery before first use and at least once every three months.
- This device contains a Lithium-ion battery. Dispose of this device only in accordance with local, state, or federal regulations for electronic waste.

INTRODUCTION

Thank you for purchasing this Bluetooth® Speaker!

This speaker features a Bluetooth radio, allowing for wireless connections with your mobile devices. It features a 6500mAh internal rechargeable battery, which is capable of powering the speaker for up to 15 hours of audio playback. A built-in microphone allows it to be used as a hands-free communication device for making and receiving phone calls.

FEATURES

- Built-in stereo 8-watts RMS/10-watts peak power per channel amplifier driving two 2.5" speakers
- Bluetooth radio with A2DP and AVRCP profiles
- Up to 10 meters (32 feet) wireless range
- 3.5mm auxiliary input for wired connections
- Built-in rechargeable Lithium-ion battery for up to 15 hours of audio playback
- USB charging port
- 90Hz ~ 20kHz frequency response

CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website **www.monoprice.com** during normal business hours (Mon-Fri: 5am-7pm PT, Sat-Sun: 9am-6pm PT) or via email at **support@monoprice.com**

PACKAGE CONTENTS


Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

1x LeThump 20-Watt Bluetooth® speaker

1x 12VDC AC power adapter

1x User's manual

PRODUCT OVERVIEW

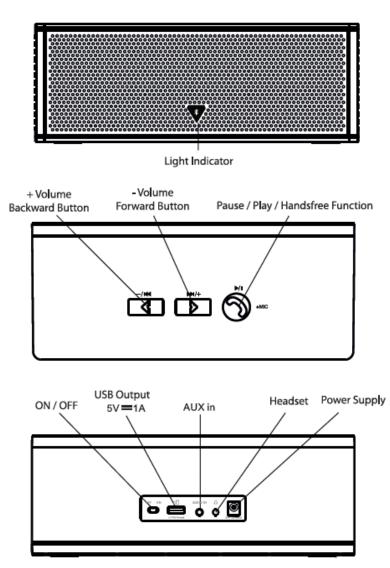

CONTROLS

S	Pause, Play, Phone Call Control
4	Decrease Volume, Previous Track
\triangleright	Increase Volume, Next Track

- Press the \mathfrak{I} button to start or stop audio playback.
- When an incoming call is received, press the $\, \Im \,$ button to answer the call.
- When an incoming call is received, press and hold the \Im button for several seconds to reject the call.
- While a call is in progress, press the \Im button to terminate the call.
- During audio playback, press the \checkmark button to skip back to the beginning of the current track. If already at the beginning, it will skip back to the beginning of the previous track.
- Press and hold the \triangleleft button to decrease the volume level.
- During audio playback, press the \triangleright button to skip to the beginning of the next track.
- Press and hold the button to increase the volume level.

CHARGING

This device contains a rechargeable Lithium-ion battery, which can provide up to 15 hours of audio playback. The battery should be fully charged prior to initial use and at least once every 3 months.

When battery power is low, the speaker will begin to beep. When it does, turn the speaker off and charge the battery. Perform the following steps to charge the battery in this speaker.

- Insert the DC barrel connector on the included AC power adapter into the INPUT 12V 1A port on the rear of the speaker, then plug the adapter into a nearby AC power outlet. An LED indicator next to the power socket glows red whenever power is applied.
- 2. When charging is complete, unplug the AC adapter from the AC power source, then unplug the DC connector from the rear of the speaker.

Note that audio playback time will be greatly reduced when the USB charging port is used.

POWER

- To power the speaker ON, slide the ON/OFF switch to the **ON** position. The speaker will beep
- To power the speaker OFF, slide the ON/OFF switch to the **OFF** position.

BLUETOOTH® PAIRING

Perform the following steps to pair this speaker with your Bluetooth[®] enabled mobile device.

- 1. Power the speaker on. The speaker will beep and the blue LED on the front will begin blinking.
- 2. After a few seconds, the speaker will beep again and the blue LED will continue blinking, indicating that it in Bluetooth[®] pairing mode.

If the speaker has already been paired with a device and that device is powered on and is within range, the speaker will automatically connect with that device, will beep, and the blue LED will stop blinking and glow steadily.

- 3. Open the Bluetooth settings on your mobile device and search for nearby Bluetooth devices.
- 4. Select the **LeThump** entry. If prompted for a passcode, enter **0000** (four zeroes). The speaker will beep and the blue LED will stop blinking and glow steadily. Depending on your device, it will automatically connect. If it does not, select the entry on your mobile device to connect with the speaker.

HANDLING PHONE CALLS

- When an incoming call is received, audio playback will automatically pause and the speaker will sound a ringtone.
- Momentarily press the $\,\,\mathfrak{I}\,$ button to answer the call.
- When the call is completed, momentarily press the $\,\,$ button to terminate the call. Audio playback will automatically resume.
- To reject an incoming call, press and hold the $\,\,\mathfrak{D}\,$ button for several seconds.

AUXILIARY INPUT

To use the speaker with non-Bluetooth[®] enabled devices, you can use a 3.5mm audio cable (not included) to connect the headphone output of your device to the auxiliary input on the speaker.

Using a 3.5mm audio cable (not included), plug one end into the **AUDIO IN** jack on the rear of the speaker, then plug the other end into the headphone output on your mobile device. The Bluetooth radio is disabled whenever a cable is plugged into the speaker's auxiliary input and the LED indicator on the front panel changes from blue to red.

HEADPHONE OUTPUT

This speaker features a 3.5mm stereo headphone output on the rear panel, allowing you to enjoy music playback in private. To use the headphone output option, plug the 3.5mm TRS plug on a pair of headphones (not included) into the headphone output on the rear panel.

USB CHARGING

This speaker features a USB charging port on the rear panel. You can use this as a USB power source for charging or powering your USB powered mobile devices. To use the USB charger, plug your USB charging cable (not included) into the **OUTPUT 5V 1A** port on the rear panel.

TECHNICAL SUPPORT

Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website **www.monoprice.com** during regular business hours, 7 days a week. You can also get assistance through email by sending a message to **tech@monoprice.com**

Model	14447
Drivers	Two 2.5" drivers
Amplifier	8-watts RMS/10-watts peak per channel
Frequency Response	90Hz ~ 20kHz
Bluetooth [®] Version	3.0
Bluetooth Profiles	A2DP and AVRCP
Bluetooth Range	Up to 10 meters (32 feet)
Built-in Battery	6500mAh Lithium-ion
Full Charge Playback Time	Up to 15 hours
Power Source	12 VDC, 1A AC power adapter
Dimensions	10.2" x 4.3" x 3.8" (258 x 108 x 96 mm)
Weight	2.7 lbs. (1.2 kg)

SPECIFICATIONS

REGULATORY COMPLIANCE

Radio Notice for FCC



Caution

This FCC Part 15 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio Notice for Industry Canada



Caution

This IC RSS-210 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with IC RSS-210. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The Bluetooth[®] word mark and logos are registered trademarks of Bluetooth SIG, Inc.