

34197 Alpha In-Ceiling Speakers 6.5in Carbon Fiber 2-Way with 15° Angled Drivers (pair)

34198 Alpha In-Ceiling Speakers 8in Carbon Fiber 2-Way with 15° Angled Drivers (pair)

34199 Alpha In-Wall Speakers 6.5in Carbon Fiber 3-Way (pair)

34200 Alpha In-Wall Speakers 8in Carbon Fiber 3-Way (pair)

User's Manual

SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- This speaker is intended for indoor use only.
- Do not expose this speaker to water or moisture of any kind.
- If operating this speaker in a humid environment, ensure that no condensation occurs. Condensation could cause damage to the speaker cones and voice coils.
- Power off and unplug all Audio/Video components when making wired connections. Only apply power after all connections have been made.
- Double-check all connections prior to applying power to ensure that speaker polarity is properly made and that there are no stray wire strands, which could short the connections, either on the back of the speaker or the AV receiver/amplifier.
- Do not use full volume until after the speaker has been fully broken-in.
- If you hear distortion, reduce the volume until the distortion is no longer audible. Distortion can sound like a buzzing, scratching, or hammering sound. Distortion can damage or destroy the delicate speaker coils.
- Do not use cleaning fluids, solvents, or other chemicals to clean the speaker frame or grille.
- Do not use excessive volume when listening to this speaker. If you experience pain, discomfort, or dizziness, reduce volume immediately. Prolonged exposure to excessive volume can cause permanent hearing damage.
- Do not disassemble or attempt to service this speaker.
- You must use speaker wire rated for in-wall use.
- When checking for the presence of objects behind the wall, do not try to force the wire past obstructions.
- Do not attempt to install this speaker near power outlets, wall switches, or ceiling fixtures. These objects indicate the presence of AC power lines within the wall or ceiling and should be avoided. Extreme care should be exercised when working near AC power lines.

INTRODUCTION

Thank you for purchasing these In-Wall/In-Ceiling Speakers! In-wall and In-Ceiling speakers are the ideal combination of sound quality and styling. Rather than cluttering the room with large box speakers trailing speaker wires, the speakers are virtually invisible, yet still fill the room with high fidelity audio. Featuring removable and paintable magnetic grilles, these speakers use carbon fiber drivers for superior bass and mid-range reproduction, and silk dome tweeters for sweet and smooth high frequencies.

FEATURES

- 8" carbon fiber woofer (34198 and 34200 only)
- 6.25" carbon fiber woofer (34197 and 34199 only)
- 3.5" carbon fiber mid-range (34199 only)
- 4" carbon fiber mid-range (34200 only)
- 1" silk dome tweeter
- 8-ohms nominal impedance
- Removable and paintable magnetic grille

CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website www.monoprice.com during normal business hours (Mon-Fri: 5am-7pm PT, Sat-Sun: 9am-6pm PT) or via email at support@monoprice.com

PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

2x In-wall or In-Ceiling speakers with magnetic grilles

1x Installation template

1x User's manual

SPEAKER BREAK-IN

In the same way that a new car requires a break-in period before it can be safely operated at high engine RPMs, speakers require a break-in period before they can be safely operated at maximum volume levels. Proper break-in ensures that the moving parts of the speaker (the cone and cone suspension) are allowed to flex and soften, losing the initial stiffness and allowing the speaker to move through its full intended range. After the break-in period, the speakers will produce richer and fatter sounding lows, warmer and smoother sounding mids, and cleaner and more accurate highs, without any hint of distortion.

The best way to break-in speakers is simply to play normal music or watch movies at moderate volume levels. The amount of time required for speaker break-in varies based on the operating environment, but is typically in the area of 50~80 hours. It will take a bit longer in a cold or dry environment and a little less time in a warm or humid environment.

Note that the break-in period does not have to be continuous.

SPEAKER WIRE PREPARATION

Before attempting to make any connections it is best to look at the situation, get all the necessary materials together, and then make all the connections at once.

First, look at the back of your amplifier or receiver to determine what options it offers for making connections. Amplifiers and receivers typically employ either 5-way binding posts, spring-loaded terminals, or push terminals for the speaker connections.

A 5-way binding post can accept bare speaker wire, spade plugs, pin plugs, and banana plugs, while spring loaded terminals and push terminals can accept either bare speaker wire or pin plugs. Refer to the documentation that came with your amplifier or receiver to determine the maximum size/gauge speaker wire the speaker terminals can accept.

This speaker features push terminals, which can accept pin plugs or bare wire up to 14AWG. If your amplifier can accept it, you should use 14AWG speaker wire. Using pin plugs is highly recommended for several reasons. Plugs are easier to connect, don't run the risk of stray wire strands shorting the connections, allow for use of heavier gauge speaker wire in most cases, and it is much easier to identify the polarity from a color coded ring on a plug than from a subtle marking along the length of a wire.

Because the speaker wires will necessarily be run through your walls, you must use in-wall rated wire. This is required by fire safety codes and ensures that the wire jacket will not act as an accelerant in the event of a fire.


Rather than using fixed length speaker wires, it is best to get a roll and cut the wires to the length you will need them. This ensures that there is a minimum amount of excess wire. However, even if your amplifier is off-center, the lengths of wire used for each speaker pair should be identical. This keeps the impedance on each channel the same, which ensures that the volume levels, frequency ranges, and tonalities are identical. Any excess wire should be snaked back and forth, not coiled, to avoid creating an inductor/antenna for stray radio signals.

Before making the actual connections, cut each length of wire to size. Note the markings on the wire that differentiate between each conductor. Sometimes the marking clearly identifies a positive and negative side. Some common clearly positive and negative markings or identifiers are:

Positive	Negative
Red	Black
Copper	Silver
+ + +	- - -

In many cases, the mark is a single stripe on the jacket of one of the connectors. In this case the side with the stripe is generally considered the positive side, but it really does not matter as long as you are consistent and always use the stripe as positive or always use it as negative.


When you are ready to prepare your speaker wires, first separate about 4" of wire, then strip about 1/4" (6mm) insulation from the end and twist it to prevent stray strands. If you plan to use banana or pin plugs (highly recommended), install the plugs on the wire.

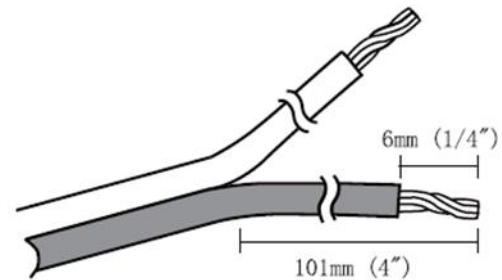

PAINTING

The grille and frame can be painted to match your walls or ceiling, making the speaker even less noticeable. Perform the following steps to safely paint them without damaging the speaker.

1. Completely remove the grille by lifting the edge to pull it off the speaker body.
2. Paint the speaker grille. It is best to use spray paint to avoid paint clogging the holes in the grille.
3. Allow the paint to completely dry before proceeding with installation.

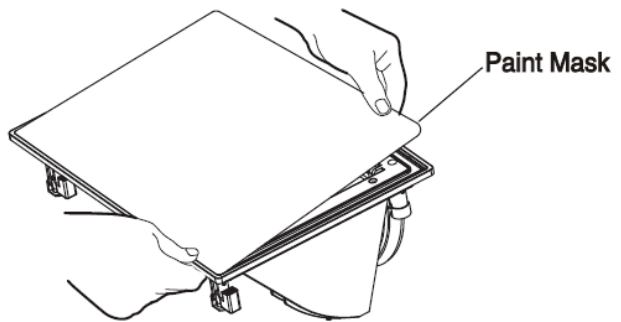


Ensure that the holes in the grille are not blocked by paint.

INSTALLATION

The following steps provide detailed instructions for installing the speaker onto a wall or ceiling composed of drywall. The speaker can be mounted to a drywall wall or ceiling that is between 3/8" and 1-1/4" thick, with sufficient depth clearance for the model being installed. If installing to a drop ceiling, use of a mounting bracket is required. Monoprice carries mounting brackets for drop ceiling installations.

1. Determine where you will be installing the speaker. Use a stud finder to ensure that there is sufficient space between the desired location and the adjacent studs. Be sure and check for framing members that run perpendicular to the main studs, as well. Use a pencil to mark the edges of the adjacent studs.
2. If you have not already done so, remove the center portion of the cardboard installation template.
3. Position the installation template against the wall or ceiling at the installation location.
4. For wall installations, use a carpenter's level to ensure that the template is level.
5. Use a pencil to mark the cut line on the wall.
6. Remove the template from the wall/ceiling and set it aside.
7. For wall installations, use the level again to check the cut lines to ensure that they are level. Repeat steps 3-6 as necessary until the cut lines are level.
8. Drill a small hole in the middle of the cutout area. If the proposed installation location is not clear, you can more easily repair the small hole than if you cut without checking and find one or more obstructions.
9. Take a stiff piece of wire, such as a hanger, and bend it 90° about 8" from the end. Insert the wire past the bend, then rotate the wire 360° to check for hidden obstructions behind the wall. Push it in to ensure that there is sufficient clearance behind the wall or ceiling.

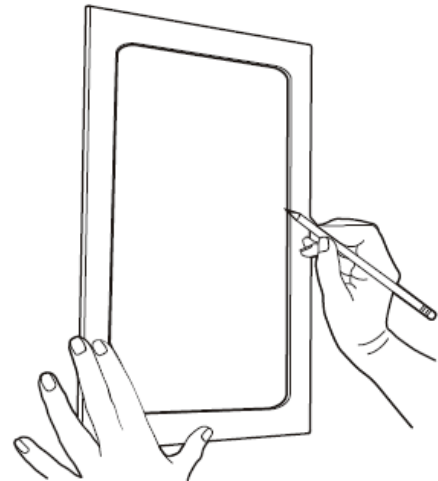

10. Once you know your installation location is clear, use a drywall or keyhole saw to cut along the cut lines.
11. If you have not already done so, prepare your speaker wire in accordance with the guidelines in the Speaker Wire Preparation section above.
Important! Because the speaker wire will necessarily be routed through your walls, you must use in-wall rated speaker wire.
12. Route your speaker wire from the back of your amplifier, through the wall or space above the ceiling, to the installation location.
13. If you have not already done so, completely remove the grille, which is held in place with magnets for ease of removal.
14. Depress the positive/red push terminal on the back of the speaker and insert the bare wire lead or pin plug on the positive lead into the hole on the side of the terminal. Release the terminal.
15. Depress the negative/black push terminal and insert the bare wire lead or pin plug on the negative lead into the hole on the side of the terminal. Release the terminal.
16. Give a gentle tug on each lead to ensure that they are securely connected to the terminals.
17. Ensure that the mounting tabs on the speaker assembly are turned inwards.
18. Position the speaker into the hole.
19. Using a #2 Phillips screwdriver, tighten each mounting screw to turn the mounting tabs back outward. Continue tightening until the mounting tabs are firmly against the back of the wall or ceiling and the speaker is secure. Do not over-tighten the screws to avoid damage to the mounting tabs.
20. Replace the grille onto the speaker body.
21. Ensure that your amplifier is powered off and unplugged from the power source.
22. Connect the amplifier end of the speaker wire to one of the speaker level outputs on your amplifier, taking care to match the polarity markings on the speaker wire or plugs.

Congratulations, your speaker is installed and ready for use!

HIGH-FREQUENCY ROLL-OFF

This speaker is equipped with a high-frequency roll-off option, which can be used to attenuate the high-frequency response. If the speaker sounds too "bright", perform the following steps to set the high-frequency roll-off.

1. Pull the edge of the grille to remove it.
2. Using a flat-bladed screwdriver, turn the high-frequency roll-off switch to the -3dB or -6dB position. The default is 0dB (no attenuation).
3. Replace the grille onto the speaker body.

TECHNICAL SUPPORT

Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website **www.monoprice.com** during regular business hours, 7 days a week. You can also get assistance through email by sending a message to **tech@monoprice.com**

SPECIFICATIONS

Model	34197	34198
Type	2-way in-ceiling 15° angled	2-way in-ceiling 15° angled
Woofer	6.5" carbon fiber cone	8" carbon fiber cone
Tweeter	1" silk dome	1" silk dome
Frequency Response	58 Hz ~ 20 kHz	45 Hz ~ 20 kHz
Crossover Frequency	1.9 kHz	1.6 kHz
Nominal Impedance	8 ohms	8 ohms
Power Handling Capacity (RMS)	60 watts	80 watts
Power Handling Capacity (Max)	120 watts	160 watts
Sensitivity	88dB	89dB
Resonant Frequency (Rs)	57.453 Hz	46.478 Hz
DC Resistance (Re)	7.2 ohms	7.2 ohms
Suspension Control (Qts)	0.692	0.692
Air Volume (Vas)	19.512 liters	39.369 liters
Compression (Cms)	690.878 $\mu\text{m/N}$	606.410 $\mu\text{m/N}$
Motor Strength (BL)	6.130 T	9.086 T
Closed/Vented (Fs/Qes) (EBP)	74.81	94.47
Linear Excursion (Xmax)	2.0 mm	3.0 mm
Surface Area (SD)	14.103 cm^2	21.382 cm^2
Overall Dimensions	ø10.1" x 4.9" (ø257 x 124 mm)	ø12.1" x 5.9" (ø308 x 150 mm)
Cutout Dimensions	ø8.66" x 4.57" (ø220 x 117 mm)	ø10.43" x 5.63" (ø265 x 143 mm)
Weight (each)	4.0 lbs. (1.8 kg)	7.2 lbs. (3.3 kg)

Model	34199	34200
Type	3-way in-wall	3-way in-wall
Woofer	6.5" carbon fiber cone	8" carbon fiber cone
Mid-range	3.5" carbon fiber cone	4" carbon fiber cone
Tweeter	1" silk dome	1" silk dome
Frequency Response	58 Hz ~ 20 kHz	45 Hz ~ 20 kHz
Crossover Frequencies	490 Hz and 4.4 kHz	490 Hz and 4.6 kHz
Nominal Impedance	8 ohms	8 ohms
Power Handling Capacity (RMS)	80 watts	100 watts
Power Handling Capacity (Max)	160 watts	200 watts
Sensitivity	89dB	89dB
Resonant Frequency (Rs)	55.562 Hz	44.269 Hz
DC Resistance (Re)	7.2 ohms	7.2 ohms
Suspension Control (Qts)	0.506	0.457
Air Volume (Vas)	14.857 liters	40.187 liters
Compression (Cms)	631.844 $\mu\text{m/N}$	619.008 $\mu\text{m/N}$
Motor Strength (BL)	7.628 T	9.059 T
Closed/Vented (Fs/Qes) (EBP)	99.21	88.02
Linear Excursion (Xmax)	2.5 mm	3.0 mm
Surface Area (SD)	12.868 cm^2	21.382 cm^2
Overall Dimensions	12.1" x 8.7" x 3.6" (308 x 222 x 91 mm)	14.2" x 10.2" x 4.0" (361 x 258 x 102 mm)
Cutout Dimensions	10.84" x 7.34" x 3.38" (275 x 186 x 86 mm)	12.81" x 8.80" x 3.80" (325 x 224 x 97 mm)
Weight (each)	5.6 lbs. (2.5 kg)	8.1 lbs. (3.7 kg)