

188.75 mm

121.3 mm

ON-THE-FLY CUSTOMIZATION

FN+Backspace

Enters On-the-Fly Custom Backlight Recording mode:

This keyboard has the ability to record an on-the-fly custom backlighting effect without the use of software. All backlighting will turn off designating the keyboard is in record mode. (NOTE: Record mode will timeout after 10 sec).

- Once in recording mode, select the desired keys to be lit. Press each key repeatedly to cycle through possible colors.
- Once the desired backlighting effect has been achieved press FN+Backspace to save the recording.

Use FN+END to select recorded Custom Backlight effect at any time.

FN+F11

Enters On-the-Fly Macro Key Recording mode:

This keyboard has the ability to record on-the-fly macros for the Y, U, I, O, and P keys without the use of software. The Y, U, I, O, and P keys will be backlit in white while all three LED indicators flash repeatedly designating the keyboard is in record mode. (NOTE: Record mode will timeout after 10 sec).

- Once in recording mode, select any of the Y, U, I, O, and P keys to begin recording the macro for that respective key. (After selecting the desired key, the white backlighting will turn off designating the keyboard is now recording the macro for that key).

- Next, make the desired keystrokes for this macro then press FN+F11 to save the recording. (Each keystroke of the macro will light up white then subsequently turn off after saving).

- Repeat the steps above to program the remaining keys.

Use FN+Y to toggle Macro Keys On/Off at any time.

Thank you for your order!

For additional information about this product, please go to www.monoprice.com and enter **37988**, **37989**, or **37990** into the search field. We are fully dedicated to **100% satisfaction** on our products and customer service. We would like to invite you to **Share Your Experience**. If you are happy with the product, please write a review online.



P/N **37988, 37989, 37990**

HOT KEYS

FN+ESC

Long Press (5 sec) to restore to factory default configuration.
(NOTE: This will permanently erase any custom recorded macros and animations).

FN+ Left WIN Key

Toggles Windows Key On/Off. (Left WIN key will be backlit white when disabled).

FN+F12

Locks/Unlocks All Keys.

FN+F1

Opens the current system default music player.

FN+F2

Decreases system volume.

FN+F3

Increases system volume.

FN+F4

Mutes incoming audio.

FN+Pause

Cycles foreground color of current animation effect.*

FN+ScrLK

Cycles background color of current animation effect.*

FN+PrtSc

Changes color of current animation effect to RGB.*

FN+ Up/Down Arrow Keys

Increases/decreases backlight brightness, respectively.

FN+Left/Right Arrow Keys

Decreases/increases animation speed, respectively.

FN+PgDn

Changes the direction of current animation effect.*

FN+PgUp

Static Backlighting effect.

FN+Home

Breathing animation effect.

FN+Del

Cycles through 4 All-Key animation effects (Wave, Rain, Side, and Scrolling).

FN+Ins

Cycles through 6 Reactive animation effects (Single Key, Gunshot, Laser Cannon, Ripples, Runout, and Intensity).

*Only available on select animation effects.

If you have had any issues with the product or our service, please email us at support@monoprice.com or tech@monoprice.com.

We will promptly work with you to resolve your issue, provide replacement product, or even facilitate a return.