



Cordless Stick Vacuum Cleaner

P/N 38423

User's Manual

CONTENTS

SAFETY WARNINGS AND GUIDELINES	3
CUSTOMER SERVICE.....	4
PACKAGE CONTENTS	4
PRODUCT OVERVIEW	5
ASSEMBLY	6
USING THE WALL BRACKET	7
CHARGING.....	7
OPERATION.....	8
USING AS A HAND VACUUM	8
CLEANING THE FILTER	9
TROUBLESHOOTING	11
SPECIFICATIONS.....	11
REGULATORY COMPLIANCE	12
Notice for FCC	12
Notice for Industry Canada.....	12

SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- This device is intended for indoor use only. It should be stored in a cool, dry place.
- Do not expose this device to water or moisture of any kind.
- This appliance is intended for domestic, dry vacuum cleaning only. Do not use it to pick up liquids or on wet surfaces.
- Do not use on concrete, asphalt, or other rough surfaces.
- Do not touch the appliance, charger, or the charger cord with wet hands.
- This device ventilates excessive heat through the slots and openings in the case. Do not block or cover these openings.
- This appliance is not intended for use by children aged 10 years and younger. Older children should be closely supervised during use.
- Use only the accessories and attachments that are included with this appliance. Use of other accessories or attachments may present a risk of personal injury.
- Keep the appliance and accessories away from hot surfaces.
- Take care to prevent damage to the charger cord. Inspect the charger, cord, and appliance for damage before use. Do not use if damaged.
- This device contains a Lithium-polymer battery. Dispose of this device only in accordance with local, state, or federal regulations for electronic waste.
- Charge the battery before first use and at least once every three months to keep it fresh and capable of holding a full charge. Do not allow the battery to become fully discharged.
- Do not use this appliance to vacuum flammable materials.
- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.
- This device has no user serviceable parts. Do not attempt to open, service, or modify this device, the battery, or the charger.

CUSTOMER SERVICE


The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website www.monoprice.com or via email at support@monoprice.com. Check the website for support times and links.

PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.


- 1x Metal Pole
- 1x Dust Cup
- 1x Battery/Handle
- 1x Power Brush
- 1x Bristle Brush
- 1x Long Crevice
- 1x Mini Power Brush
- 1x Wall Hanger
- 1x Charger
- 1x User's Manual

PRODUCT OVERVIEW

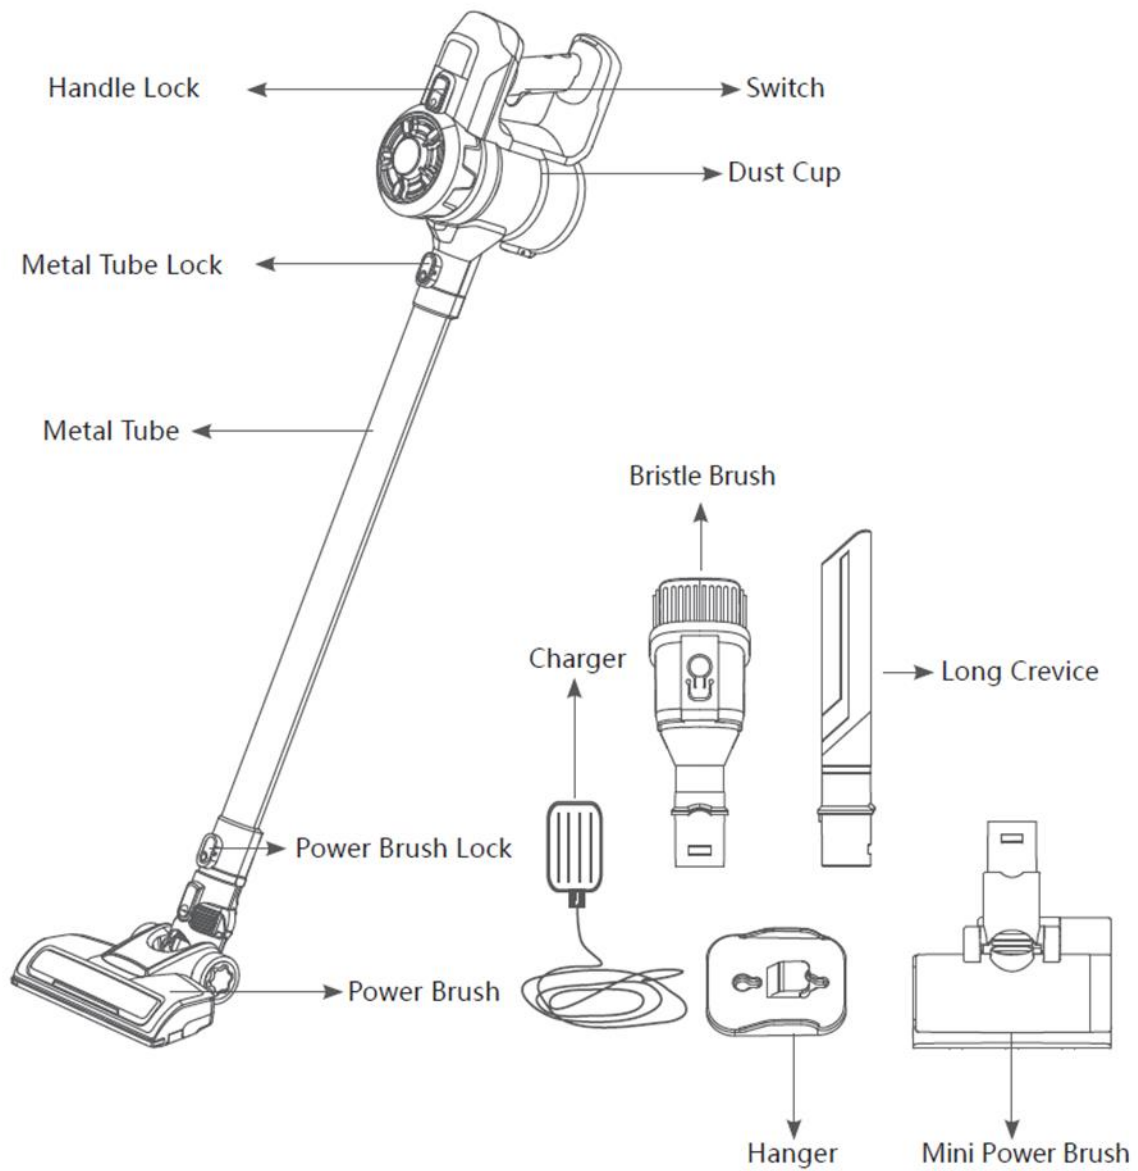


ASSEMBLY


1. Attach the **Battery/Handle** to the **Dust Cup**. Ensure that the **Battery Bolt Head** is inserted into the **Dust Cup Slot**, as shown in the image below.

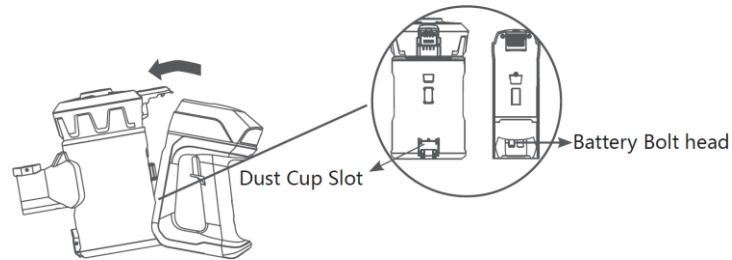

2. Insert the **Metal Tube** into the **Dust Cup** assembly until the lock clicks in place.

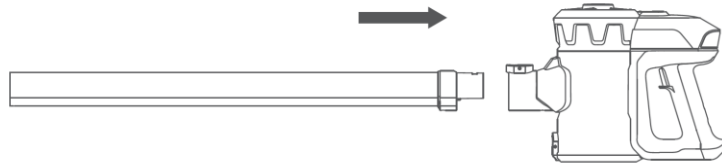


3. Insert the **Power Brush** into the **Metal Tube** until the lock clicks in place.

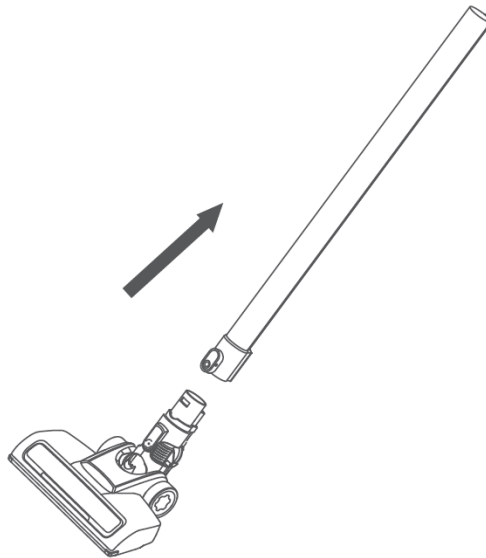

USING THE WALL BRACKET

This vacuum includes a wall bracket for convenient storage when not in use. Perform the following steps to install the wall bracket.


1. Locate a section of wall with a nearby AC power outlet for convenient charging. Ensure that this location is not near heat sources and not in direct sunlight.
2. Using two screws or double sided adhesive tape (not included), secure the **Wall Bracket (Hanger)** to the wall. Ensure that the height is sufficient to keep the appliance off the floor.
3. Hang the vacuum on the **Bracket** by the **Handle**, as shown in the image to the right.

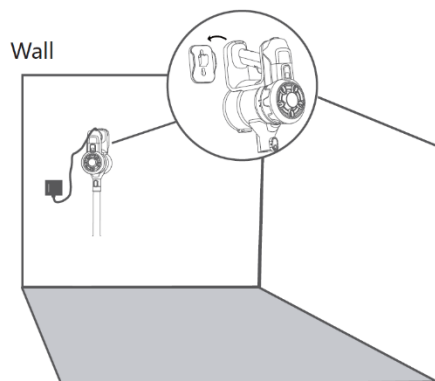

CHARGING


This device uses a Lithium-ion battery. The battery should be charged before first use and at least once every three months to keep the battery fresh and capable of holding a full charge. Do not allow the battery to fully discharge.

1. The three **LED Indicators** on the **Handle** show the battery charge level. When only one indicator is flashing green, stop using the vacuum and charge the battery.
2. Plug the DC barrel connector on the **Charger** into the **Charging Port** on the **Handle**, then plug the charger into a nearby AC power adapter.
3. When the three **LED Indicators** are solid green, the **Battery** is fully charged. A full charge takes about 4-5 hours.
4. Unplug the **Charger** from the wall outlet, then unplug it from the **Handle**.

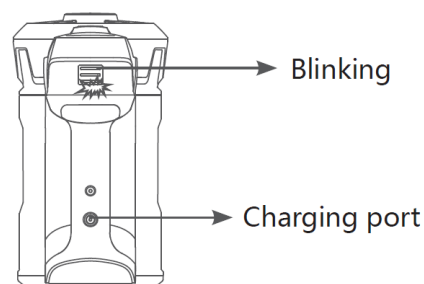


OPERATION

Press the **Switch** to start the vacuum in low speed mode. Press it a second time to switch to high speed mode. Press it a third time to turn the vacuum off.

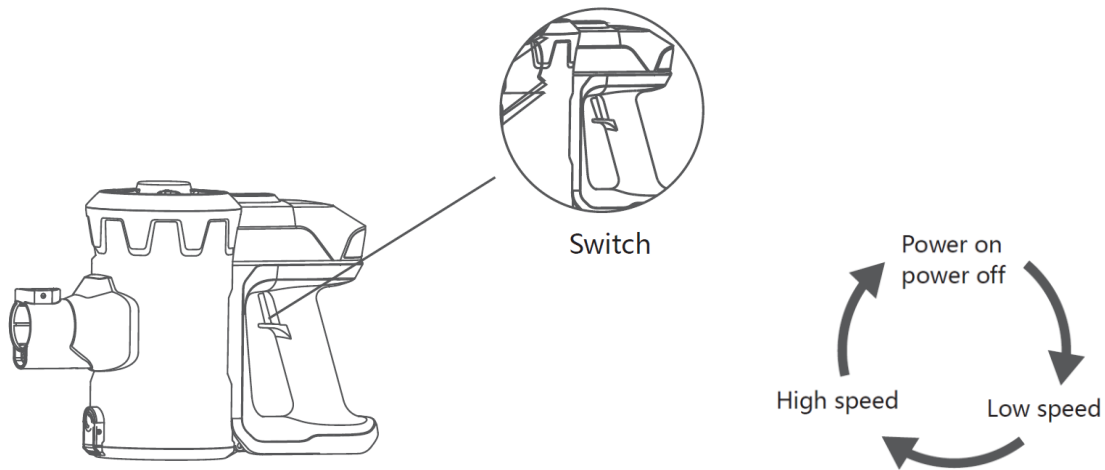

USING AS A HAND VACUUM


1. Press the **Metal Tube Lock** on the **Dust Cup** assembly, then pull the **Metal Tube** out of the **Dust Cup** assembly.
2. Insert the **Bristle Brush**, **Long Crevice**, or **Mini Power Brush** into the **Dust Cup** assembly until the lock clicks in place.

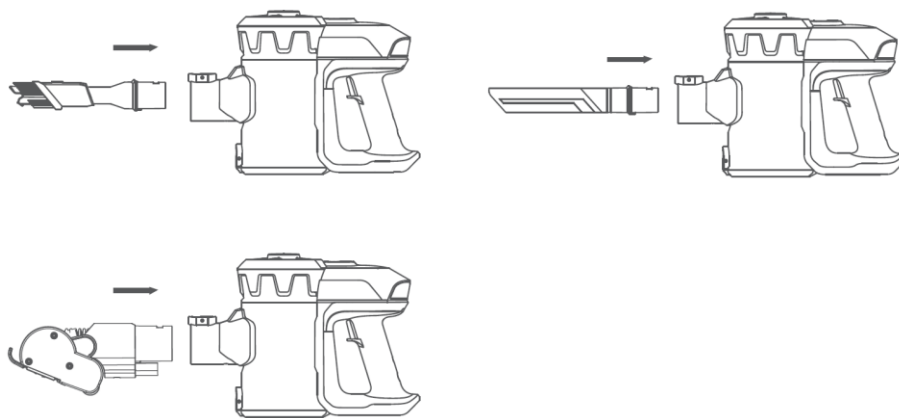


CLEANING THE FILTER

Perform the following steps to clean the filter. The filter should be cleaned after each use.


1. Press the **Handle Lock** to remove the **Handle** from the **Dust Cup**.

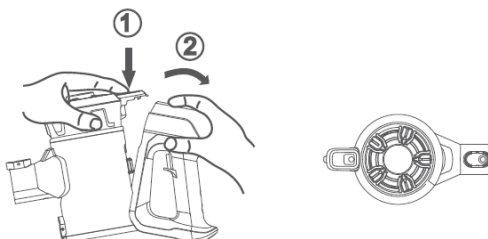


2. Twist counterclockwise to remove the **Top Cover**.

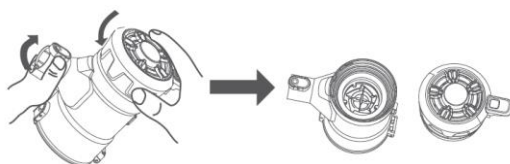


3. Take out the **Filter Case**, then remove the **Filter** from the **Case**.

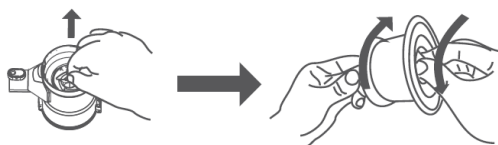


4. Thoroughly wash the **Filter** and **Filter Case** in warm water.

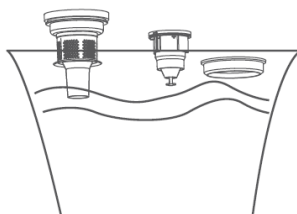


5. Fully dry the **Filter** and **Filter Case**.

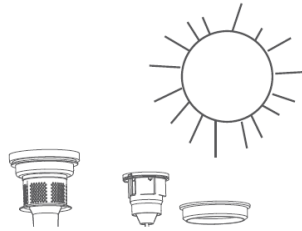


6. Insert the **Filter** back into the **Filter Case**.

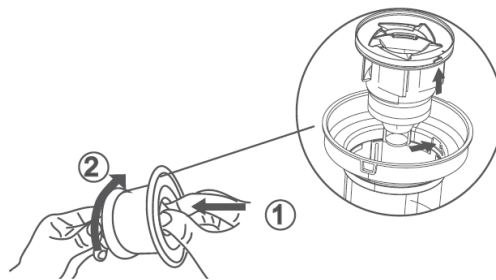

7. Insert the **Filter Case** into the **Dust Cup**.

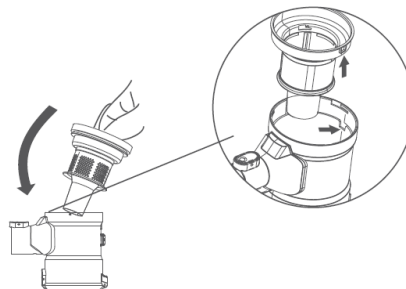

8. Assemble the **Top Cover** onto the **Dust Cup**, then twist clockwise to secure it in place.

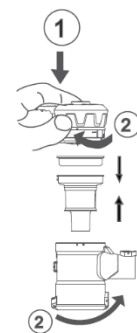

TROUBLESHOOTING

Q1: The suction is weak.

A1: Empty the **Dust Cup**. Ensure that the **Dust Cup** is installed correctly. Ensure that the **Filter Case** and the **Filter** are installed correctly. Clean the **Filter**.

Q2: The vacuum won't power on.

A2: Ensure that the **Battery** is charged. Thoroughly clean the **Roller Brush** and the **Bearing**.

Q3: The **Battery** won't charge.

A3: Ensure that the plug is fully inserted. Ensure that the wall outlet provides power by testing with a lamp or other device.

SPECIFICATIONS

Model	38423
Power	120 watts
Maximum Suction Power	9kPa
Battery Type	Lithium-ion
Battery Capacity	2200mAh
Operating Time	Low Speed: about 45 minutes High Speed: about 25 minutes
Charging Time	about 4-5 hours
Input Power	26 VDC, 0.45A
AC Adapter Input Power	100 ~ 240 VAC, 50/60 Hz, 0.3A

REGULATORY COMPLIANCE

Notice for FCC



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notice for Industry Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Strata Home™ and the Strata Home logo are trademarks of Monoprice Inc.