

Monoprice™
**Recessed Low Voltage Cable Wall Plate
with Recessed Power, White**

P/N 4006
User Manual

SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this product, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- This product is intended for indoor use only.
- For shock protection, this device must be properly grounded.
- Use copper wire only with this device.
- Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
- Do not touch the product or any connected cables with wet hands.
- Do not expose this product to excessively high temperatures. Do not place it in, on, or near heat sources, such as a fireplace, stove, radiator, etc. Do not leave it in direct sunlight.
- Do not place or install this product in an area where it can be exposed to excessive amounts of dust, humidity, oil, smoke, or combustible vapors.
- The indicated color may vary slightly in tone or hue between different production runs and manufacturing facilities. As a result, this device's color may not perfectly match other products, even if labeled with the same color.
- Prior to installation and operation, check the product for physical damage. Do not use if physical damage has occurred.
- Handle all cables with care to prevent damage. Avoid crimping, pinching, stepping on, or tangling them with other cords. Always route cables securely to eliminate potential tripping hazards.
- This product has no user-serviceable parts. Do not attempt to open, service, or modify this device.

TABLE OF CONTENTS

SAFETY WARNINGS AND GUIDELINES.....	2
INTRODUCTION.....	3
FEATURES.....	3
PACKAGE CONTENTS.....	3
IMPORTANT REMINDERS.....	3
INSTALLATION INSTRUCTIONS.....	4
Retrofit Only.....	4
New Construction.....	6
CUSTOMER SERVICE.....	6
TECHNICAL SUPPORT.....	6
DISPOSAL AND RECYCLING INFORMATION.....	7
TEMPLATE FOR CUTOUT.....	7

INTRODUCTION

Use the Recessed Low Voltage Cable Wall Plate with Recessed Power to route low-voltage cables behind your flat panel TV, amplifier, or other audio/video devices. This wall plate can be installed either upright or upside down. Please read all instructions carefully before beginning installation.

FEATURES

- Quick and easy to install
- Can be installed upright or upside down
- ETL listed and complies with UL® 514C standard
- UR rated (UL Recognized Component) and RoHS compliant

PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice™ Customer Service for a replacement.

- 1x Recessed Low Voltage Cable Wall Plate with Recessed Power
- 1x User Manual


IMPORTANT REMINDERS

- Follow local electrical codes and approved installation practices when installing this product.
- This product is not designed to be permanently integrated into a home or commercial building's electrical wiring system.
- If you are not experienced with home wiring systems, consult a qualified electrician or licensed professional for installation.

INSTALLATION INSTRUCTIONS

Retrofit Only


1. Determine the location of your flat panel TV mounting bracket. Using the supplied template (see end of instruction sheet), trace the opening needed.
2. With a drywall knife, cut a hole in the drywall to match the template size. Insert a single-gang retrofit workbox (see Figure 1) and securely fasten it to the wall.

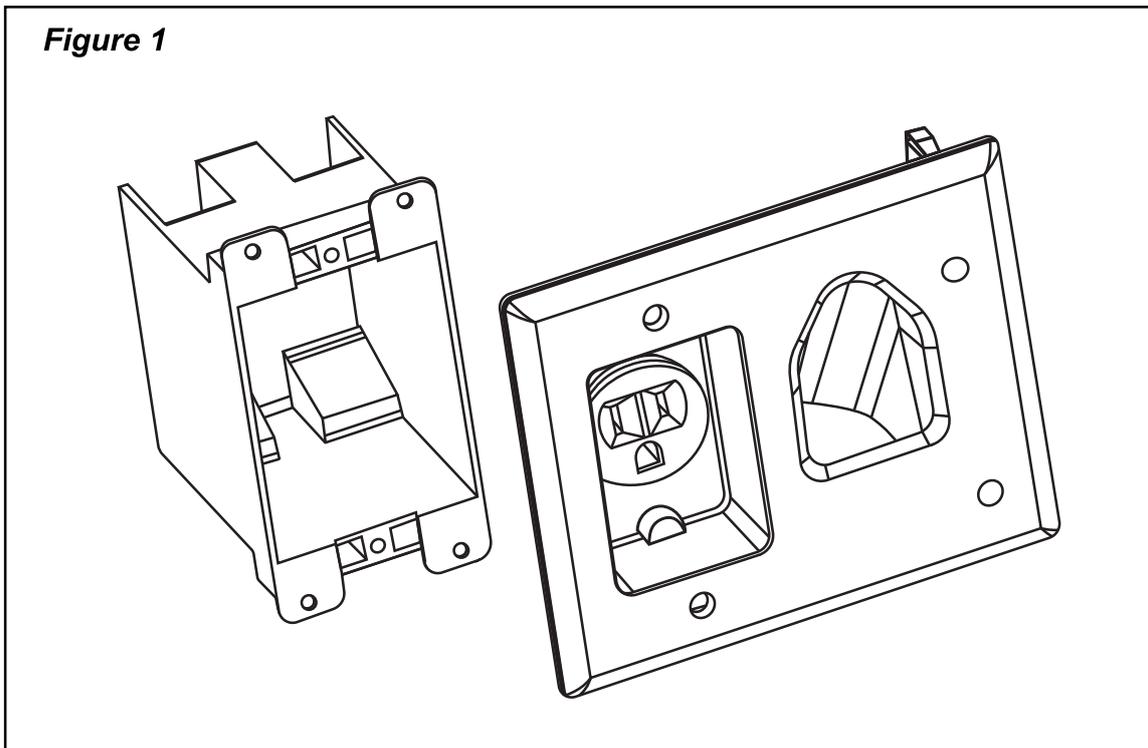

3. Switch OFF the appropriate circuit breaker or remove the fuse(s) before wiring.
4. Run a power source to the workbox.
 - Connect the hot (black) wire to the brass-colored terminal screw.
 - Connect the neutral (white) wire to the silver-colored terminal screw.
 - Connect the ground (green or bare) wire to the green-colored terminal screw (see Figure 2).


Caution: For shock protection, this UR- and UL-recognized receptacle must be properly grounded. Use copper wire only with this receptacle.

Figure 2

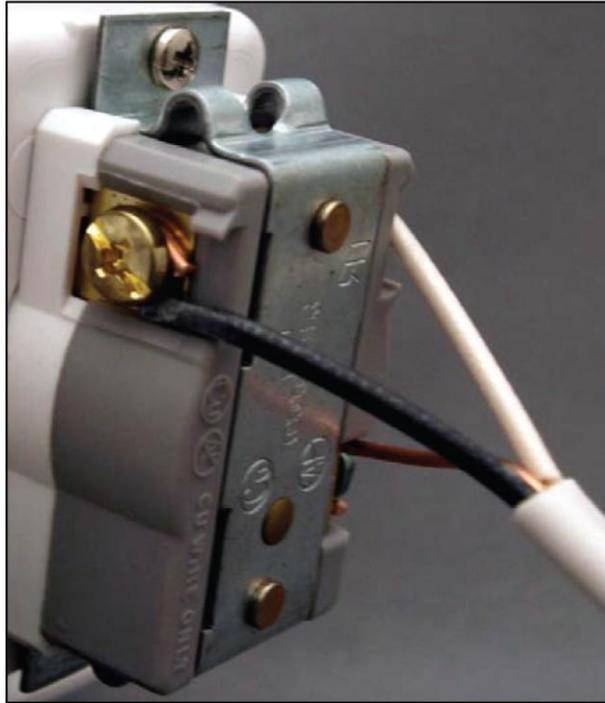

5. Insert the receptacle portion of the wall plate into the workbox (see Figure 3).

Figure 3

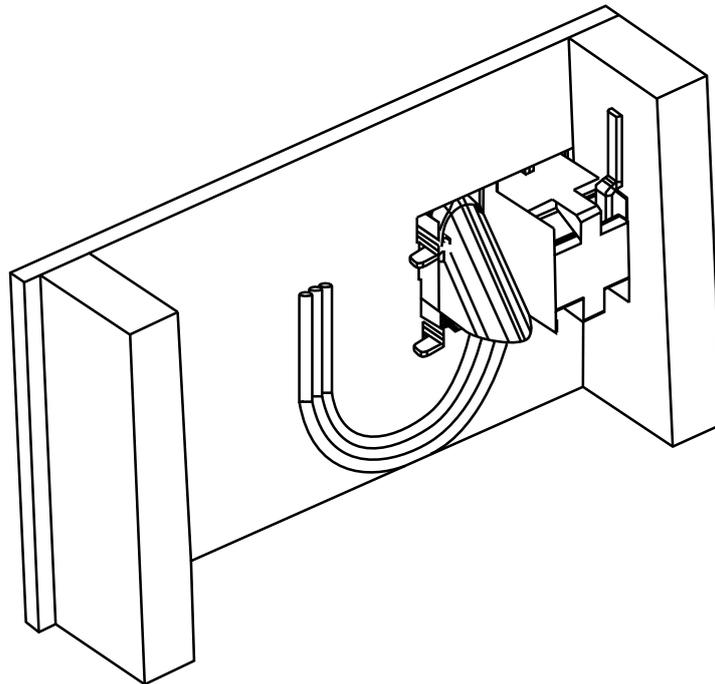

6. When the wall plate is flush with the wall, secure it with the two supplied white screws.
7. Tighten the wing screws so they fasten securely against the back of the drywall.
8. Switch ON the circuit breaker or replace the fuse(s).
9. Route all necessary video and audio cables through the opening.
10. Install your flat panel TV mounting bracket according to the manufacturer's instructions, ensuring all instructions are read and followed.

New Construction

For new construction installations, use a new nail-on box instead of a retrofit workbox, then follow the same wiring and installation steps above.

CUSTOMER SERVICE

The Monoprice™ Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problems with your order, please give us an opportunity to make it right. You can contact a Monoprice™ Customer Service representative through the Live Chat link on our website **www.monoprice.com** or via email at **support@monoprice.com**. Check the website for support times and links.

TECHNICAL SUPPORT

Monoprice™ is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website **www.monoprice.com** or through email by sending a message to **tech@monoprice.com**. Check the website for support times and links.


To download the latest drivers, firmware, manuals, etc., go to **www.monoprice.com** and type **4006** into the search bar. If available, support files are linked at the bottom of the product page.

DISPOSAL AND RECYCLING INFORMATION



The symbol indicates that this product should be disposed of separately from regular household waste streams. It is your responsibility to dispose of this and other electrical and electronics products via designated collection facilities appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. For more detailed information about the disposal of your unwanted product, please contact your local authorities, waste disposal service, or the shop where you purchased the product.

TEMPLATE FOR CUTOUT

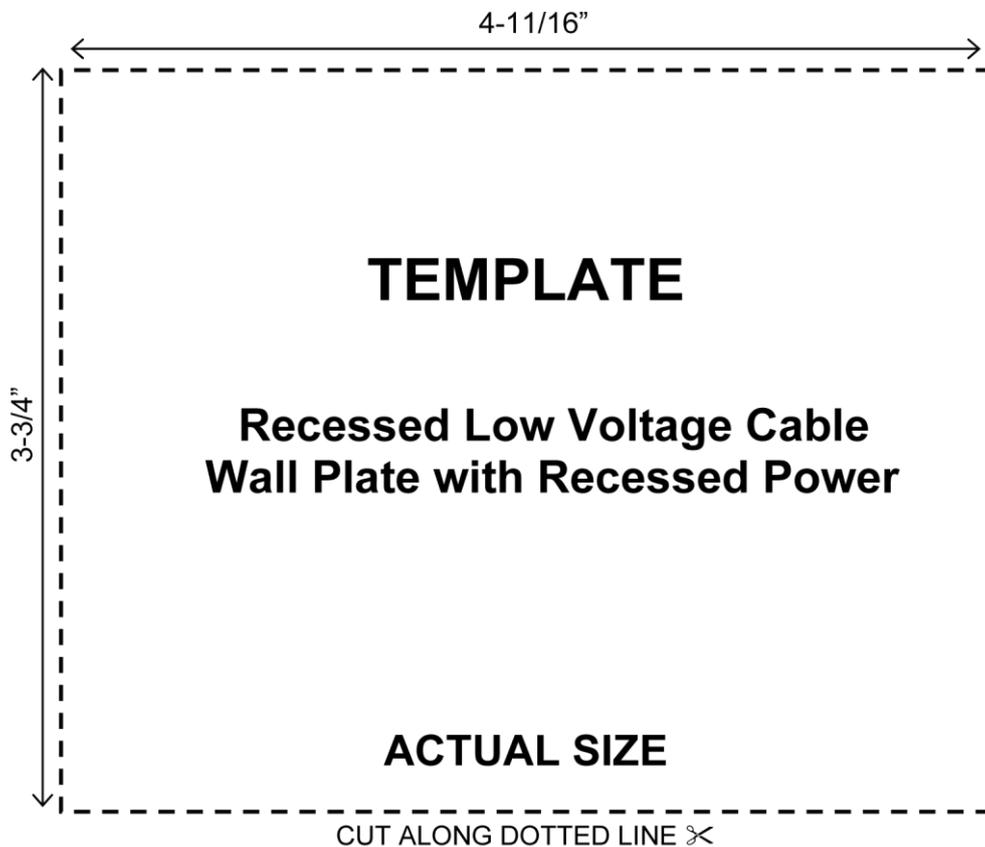

Monoprice™ and all Monoprice logos are trademarks of Monoprice Inc.

Underwriters Laboratories®, UL®, and the UL logo are registered trademarks of UL LLC.



TECHNOLOGY AT PRICES THAT MAKE SENSE

www.monoprice.com

Need Help? We're here for you!

Contact us: www.monoprice.com/contactus

Product pictures are for reference only.

Specifications described herein are subject to change without prior notification.

Monoprice™ and all Monoprice logos are trademarks of Monoprice Inc.

Copyright © 2025 Monoprice, Inc. All rights reserved.

Monoprice, Inc.

1 Pointe Drive, Suite 400

Brea, CA 92821 – USA

www.monoprice.com