



BT-600ANC Bluetooth® Headphones
with Qualcomm® aptX™ HD Audio and Active Noise Cancelling



P/N 4123s2

User's Manual

CONTENTS

CONTENTS.....	2
SAFETY WARNINGS AND GUIDELINES.....	4
CUSTOMER SERVICE.....	5
PACKAGE CONTENTS.....	5
PRODUCT OVERVIEW.....	6
LED INDICATORS.....	7
Left LED.....	7
Right LED.....	7
CHARGING.....	8
POWER.....	9
BLUETOOTH PAIRING.....	10
DISCONNECTING.....	11
ANC MODES.....	11
MULTIFUNCTION TOUCHPAD.....	13
Playback Control.....	13
Skipping Tracks.....	14
Incremental Volume Control.....	15
Continuous Volume Control.....	16
Audio Muting.....	17
Answering an Incoming Call.....	18

Rejecting an Incoming Call.....	19
Terminating a Call.....	19
Voice Assistant.....	20
USING THE AUDIO CABLE.....	20
TECHNICAL SUPPORT.....	21
REGULATORY COMPLIANCE.....	21
Notice for FCC.....	21
Radio Notice for FCC.....	23
Notice for Industry Canada.....	23
Radio Notice for Industry Canada.....	24

SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- These headphones are intended for indoor use only.
- Do not use these headphones while operating a motor vehicle, heavy equipment, walking in traffic, or any other situation in which situational awareness is a key to safety.
- Charge the battery before first use and at least once every three months to keep it fresh and capable of holding a full charge.
- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.
- These headphones have no user serviceable parts. Do not attempt to open, service, or modify the headphones.

CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website

www.monoprice.com or via email at **support@monoprice.com**.

Check the website for support times and links.

PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

1x BT-600ANC Bluetooth® headphones

 
1x Carrying case

1x 3.5mm audio cable

1x USB Type-A to Type-C® charging cable

1x User's manual

PRODUCT OVERVIEW

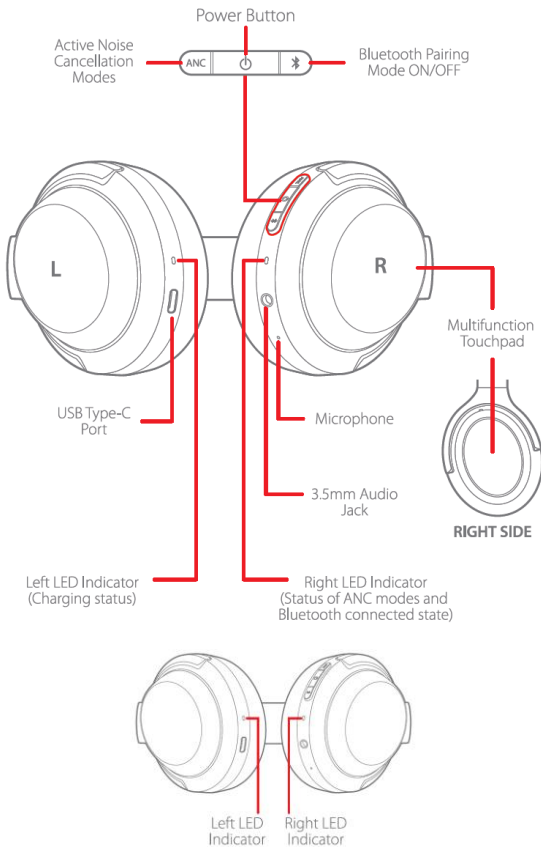

LED INDICATORS

The headphones feature two LED indicators. The LED on the left earcup shows the charging status, while the one on the right earcup shows the Bluetooth®, ANC, and low battery status.

Left LED

- **Solid Red:** Battery is charging.
- **Solid Green:** Battery is fully charged.

 
Right LED

- **Flashes Red and Blue:** The headphones are in Bluetooth® pairing mode.
- **Flashes Blue Once Every 5 Seconds:** Bluetooth is connected.
- **Flashes Blue Once per Second:** Bluetooth is not connected.
- **Solid Green:** Noise Cancelling is on.
- **Solid White:** Ambient Sound is on.
- **Off:** Noise Cancelling and Ambient Sound are both off.
- **Flashes Red Twice Every 5 Seconds:** The battery is low and should be charged.

CHARGING

When the battery is low, the **Right LED** will flash red twice every 5 seconds and a voice prompt saying **Battery Low** can be heard. Note that the battery should be fully charged before first use and at least once every three months to keep it fresh and capable of holding a full charge.

Using the included USB Type-C®, plug one end into the USB-C® port on the left earcup, then plug the other end into a USB power source, such as a wall charger (not included). The **Left LED** will illuminate solid red while charging is in progress and will illuminate solid green when charging is complete. Note that the headphones cannot be powered on or used while charging is in progress.

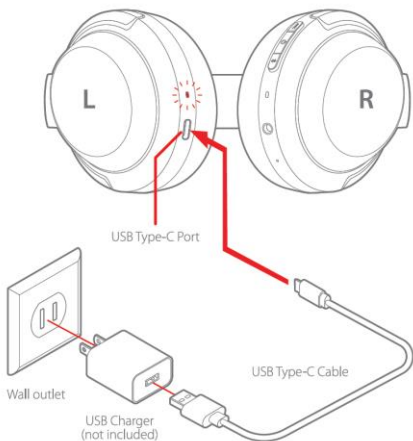


POWER

Press and hold the **Power Button** until the **Right LED** either flashes blue once every 5 seconds and a voice prompt saying **Connected** can be heard or flashes red and blue and a voice prompt saying **Bluetooth Pairing On** can be heard, depending on the Bluetooth® connection status.

To turn power off, press and hold the **Power Button** until the **Right LED** turns off and a voice saying **Power Off** can be heard.

 Note that if Bluetooth is not connected, the headphones will automatically power off after 5 minutes.

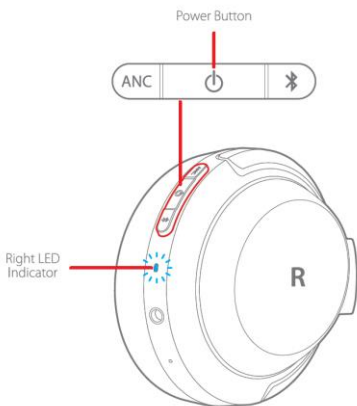


BLUETOOTH PAIRING

Perform the following steps to pair the headphones with your mobile device.

1. Power the headphones on, then press and hold the **Bluetooth Button** until the **Right LED** flashes red and blue. A voice prompt saying **Bluetooth Pairing On** can be heard.

Note: Momentarily press the **Bluetooth Button** to exit Bluetooth® pairing mode.

 2. Open the Bluetooth settings on your mobile device, then scan for nearby Bluetooth devices. Locate and select the **BT-600ANC** entry.
3. Once paired, the **Right LED** will flash blue once every 5 seconds and a voice prompt saying **Connected** can be heard.

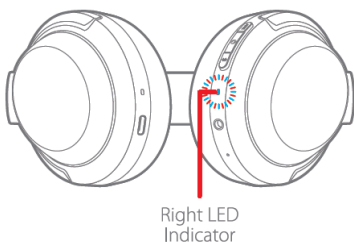

Note that the headphones support the A2DP v1.3, AVRCP v1.6, HFP v1.7, and HSP v1.2 Bluetooth® profiles.

DISCONNECTING

If you want to connect the headphones to a different mobile device, you will need to disconnect the currently paired device.

To disconnect the headphones from a paired device, press and hold the **Bluetooth Button** until the **Right LED** flashes red and blue. A voice prompt saying **Bluetooth Pairing On** can be heard.

The headphones are now ready to be paired to a different device.

 
ANC MODES

The BT-600ANC headphones offer three different listening experiences. Momentarily press the **ANC Button** to cycle through the three modes.

- **Noise Cancelling (NC) Mode:** This mode isolates your listening experience to sounds coming through the headphones and helps block unwanted outside noise. **NC Mode** is automatically selected when the headphones are powered on. When **NC Mode** is selected, the **Right LED** illuminates solid **green** and a voice prompt saying **Noise Cancelling** can be heard.
- **Ambient Sound Mode:** This mode allows you to listen to the sounds around you using the built-in microphones. When **Ambient Sound Mode** is selected, the **Right LED**

illuminates solid **white** and a voice prompt saying **Ambient Sound** can be heard.


- **NC and Ambient Sound NC Modes Off:** The third selection disables both **NC** and **Ambient Sound Modes**, allowing the headphones to operated like ordinary headphones. When this mode is selected, the **Right LED** turns **off** and a voice prompt saying **Ambient Sound and Noise Cancelling Off** can be heard.

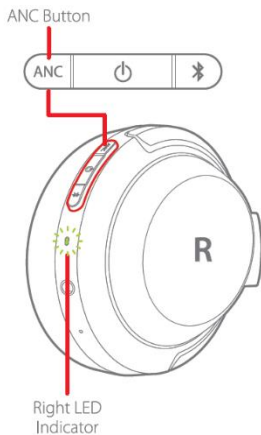

MULTIFUNCTION TOUCHPAD


The headphones feature a unique multifunction touchpad on the right earcup. The following sections describe the gestures used to perform the various functions.

 Playback Control

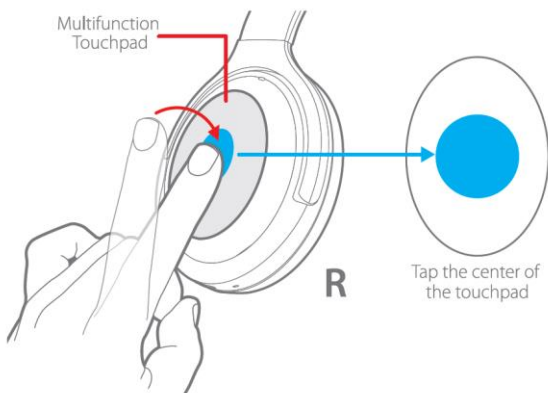


- Quickly tap the center of the touchpad **Two Times** to **Pause** or **Resume** playback.

 Skipping Tracks

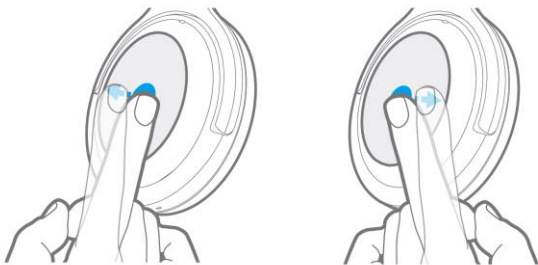

- Place your finger in the center of the **Right** earpad a swipe **Forward** to skip forward to the **Next Track**.
- Place your finger in the center of the **Right** earpad a swipe **Backward** to skip back to the **Previous Track**.

 Incremental Volume Control

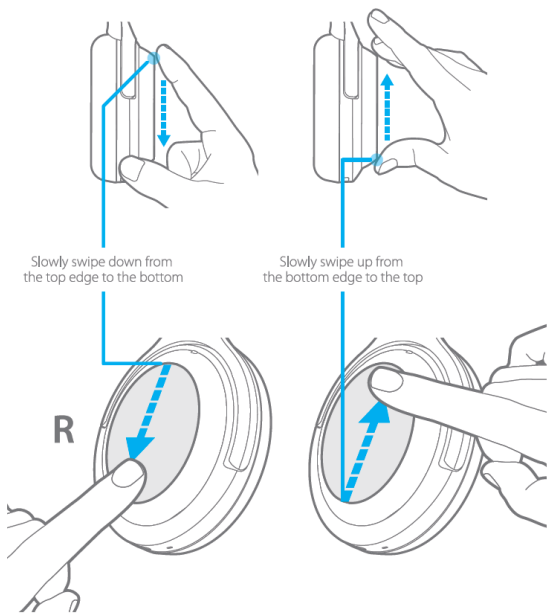


- Place your finger at the top of the right earcup, then slowly swipe down to incrementally **Decrease Volume** one step.
- Place your finger at the bottom of the right earcup, then slowly swipe up to incrementally **Increase Volume** one step.

Continuous Volume Control



Slowly swipe down from the top edge to the center, and **HOLD** your finger at the center of the earcup until the desired volume level is reached

 Slowly swipe up from the bottom edge to the center, and **HOLD** your finger at the center of the earcup until the desired volume level is reached

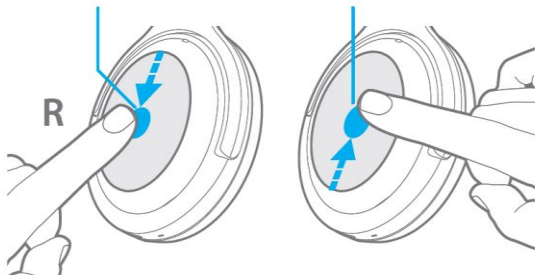

- To continuously **Decrease Volume** to the desired level, place your finger at the top of the right earcup, then slowly swipe down to the middle and hold there until the desired level is reached.
- To continuously **Increase Volume** to the desired level, place your finger at the bottom of the right earcup, then slowly swipe up to the middle and hold there until the desired level is reached.

  
Audio Muting

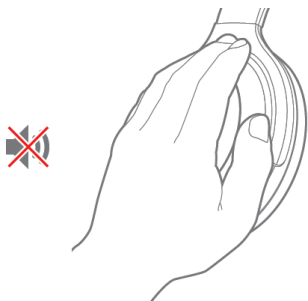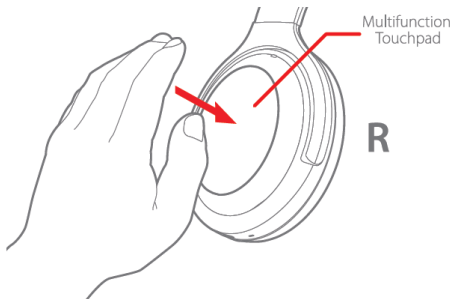

- Place the palm of your hand over the right earcup to mute audio.
- Remove your hand from the right earcup to exit audio muting and resume normal playback.


Answering an Incoming Call

 - When an incoming phone call is received, quickly tap the center of the touchpad **Two Times** to answer the call.

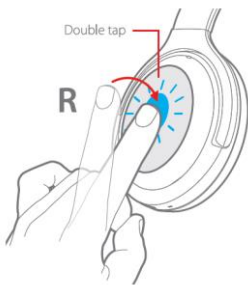


Rejecting an Incoming Call

 - If you want to reject an incoming phone call, press and hold in the center of the touchpad.

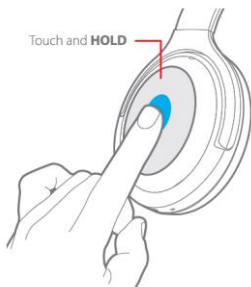


Terminating a Call

 - While a call is in progress, quickly tap the center of the touchpad **Two Times** to terminate the call.

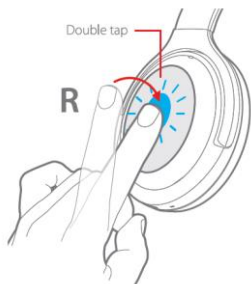

Voice Assistant

 - If your connected device has a voice assistant, you can activate it by pressing and holding the center of the touchpad during normal playback. Press and hold the center of the touchpad again to disable the voice assistant.

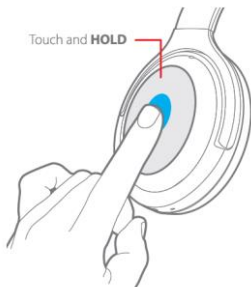

USING THE AUDIO CABLE

If you want to use a wired connection, plug one end of the included 3.5mm audio cable into the 3.5mm jack on the right earcup, then plug the other end into the headphone output of your mobile device. If powered on, the headphones will automatically power off when using a wired audio connection.

TECHNICAL SUPPORT

Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website www.monoprice.com or through email by sending a message to tech@monoprice.com. Check the website for support times and links.

REGULATORY COMPLIANCE

Notice for FCC



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations,

and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radio Notice for FCC

Caution

This FCC Part 15 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice for Industry Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Radio Notice for Industry Canada

Caution

This IC RSS-210 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with IC RSS-210. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Monoprice™ and all Monoprice logos are trademarks of Monoprice Inc.

The Bluetooth® word mark and logos are registered trademarks of Bluetooth SIG, Inc.

Qualcomm® is a trademark of Qualcomm Incorporated, registered in the United States and other countries. Qualcomm® aptX™ HD Audio, Qualcomm® cVc™ Echo Cancelling and Noise Suppression, and the aptX logo are trademarks of Qualcomm Technologies International, Ltd. Qualcomm® aptX™ HD Audio and Qualcomm® cVc™ Echo Cancelling and Noise Suppression are product of Qualcomm Technologies International, Ltd.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum, Inc.