

Bluetooth® Headphones with Active Noise Cancelling

P/N 43251

User's Manual

SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- This device is intended for indoor use only.
- Do not expose this device to water or moisture of any kind.
- Do not expose this device to excessive vibration, extreme force, shock, or fluctuations in temperature or humidity.
- Do not use this device while operating a motor vehicle, heavy equipment, walking in traffic, or any other situation in which situational awareness is a key to safety.
- Avoid prolonged exposure to excessive volume levels, which could cause hearing damage. Reduce the volume to minimum before wearing these headphones, then increase the volume to a comfortable listening level.
- Do not expose this device to excessively high temperatures. Do not place it in, on, or near a heat source, such as a fireplace, stove, radiator, etc. Do not leave it in direct sunlight.
- This device contains a Lithium-ion battery. Dispose of this device only in accordance with local, state, or federal regulations for electronic waste.
- Charge the battery before first use and at least once every three months to keep it fresh and capable of holding the full charge.
- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.
- This device has no user serviceable parts. Do not attempt to open, service, or modify this device.

CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website www.monoprice.com or via email at support@monoprice.com. Check the website for support times and links.

PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.


1x Bluetooth® Headphones with ANC

1x Micro USB Charging Cable

1x 3.5mm Audio Cable

1x User's Manual

PRODUCT OVERVIEW

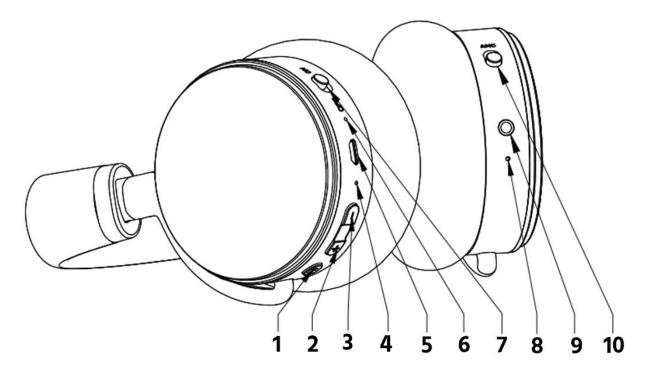

- 1. Multifunction Button (MFB)
- 2. Volume +
- 3. Volume -
- 4. Bluetooth® LED Indicator
- 5. Micro USB Charging Port
- 6. Microphone
- 7. Power Switch
- 8. ANC LED Indicator
- 9. 3.5mm Audio Jack
- 10. ANC Switch

BUTTON OPERATION

Button	Function	Description
Power Switch	Power on	With power off, slide the switch to the ON position. The voice prompt will say Power On .
		If not already paired, the headphones will automatically enter Bluetooth® pairing mode. The Bluetooth LED Indicator will flash red and blue alternately, indicating that it is in Bluetooth pairing mode.
		If already paired and the paired device is within range, the headphones will reconnect to the device.
	Power off	With power on, slide the switch to the OFF position. The voice prompt will say Power Off .
	Play/pause	Momentarily press to pause or resume audio playback.
	Redial last phone call	Double press to redial the last phone number called.
	Voice dialing	Press and hold for 1 second to enable voice dialing.
MFB	Answer a call	When an incoming phone call is received, momentarily press to answer the call.
	Hang up a call	While a call is in progress, momentarily press to terminate the call.
	Reject a call	When an incoming call is received, press and hold for 1 second to reject the call.
	Microphone mute	While a call is in progress, double press to mute/unmute the microphone.

Volume +	Volume increase	Momentarily press to increase the volume level.
	Next track	Press and hold for 1 second to skip forward to the next track.
Volume -	Volume decrease	Momentarily press to decrease the volume level.
	Previous track	Press and hold for 1 second to skip back to the previous track.
ANC On/Off Switch	ANC on	With the headphones powered off, in Bluetooth mode, or using a 3.5mm audio connection, slide the switch to the ON position to turn Active Noise Cancelling on.
	ANC off	With the headphones powered off, in Bluetooth mode, or using a 3.5mm audio connection, slide the switch to the OFF position to turn Active Noise Cancelling off.

LED INDICATIONS

Status	LED Indication
Power on	Bluetooth® LED Indicator flashes blue
	twice.
Power off	Bluetooth® LED Indicator flashes red twice.
Bluetooth® pairing mode	Bluetooth® LED Indicator flashes red and
Bluetooth paining mode	blue alternately.
Connected standby mode / audio playback	Bluetooth® LED Indicator flashes blue once
/ call in progress	every 10 seconds.

Delete pairing record	Bluetooth® LED Indicator flashes red and blue once at the same time.
Low battery	Bluetooth® LED Indicator flashes red.
Charging	Bluetooth® LED Indicator solid red.
Charging Complete	Bluetooth® LED Indicator solid blue.
ANC on	ANC LED Indicator solid green.
ANC off	ANC LED Indicator off.

CHARGING

The internal battery should be charged before first use and at least once every two months to keep the battery fresh and capable of holding a full charge.

- 1. With the headphones powered on, slide the **Power Switch** to the OFF position.
- 2. Plug one end of the included Micro USB Charging Cable into the Micro USB Charging Port on the headphones, then plug the other end into a USB power source, such as a wall charger, power bank, computer, etc. (available separately). The Bluetooth® LED Indicator illuminates solid red, indicating that charging is in progress.
- 3. When charging is complete, the **Bluetooth LED Indicator** illuminates solid blue.

Note that if the headphones are powered on when charging begins, they will power off automatically.

BLUETOOTH PAIRING

- 1. With the Headphones powered off, slide the **Power Switch** to the ON position. If the headphones are not already paired with a mobile device or if the paired device is off or out of range, the headphones will automatically enter Bluetooth® pairing mode. The **Bluetooth LED Indicator** will flash red and blue alternately, indicating that the headphones are in Bluetooth pairing mode.
 - Note: If already paired to a mobile device and that device is powered on and within range, the headphones will automatically reconnect with that mobile device, instead of entering Bluetooth pairing mode. If you want to pair a different mobile device, press and hold the MFB, Volume -, and Volume + buttons at the same time for 5 seconds to delete the pairing record.
- 2. Ensure that your mobile device is within 3 feet of the headphones. Open the Bluetooth® settings on your device and scan for nearby Bluetooth connections.
- 3. Locate and select the MP43251 entry. If prompted for a passcode, enter 0000 (four zeros). Once connected, the Bluetooth LED Indicator will flash blue once every 10 seconds.
- 4. If your mobile device supports the AVRCP Bluetooth profile, you can use the controls on the headphones to answer calls, adjust volume, play/pause playback, and skip tracks.

MULTIPOINT PAIRING

You can pair a second device for streaming audio to the headphones.

- 1. Follow the instructions in the *BLUETOOTH PAIRING* section to pair your first device.
- 2. Open the Bluetooth® settings on your first device and disable Bluetooth.
- With the headphones powered off, slide the Power Switch to the ON position. The Bluetooth LED Indicator will flash red and blue alternately, indicating that they are in Bluetooth pairing mode.

- 4. Open the Bluetooth® settings on your second device, then scan for nearby Bluetooth connections.
- 5. Locate and select the **MP43251** entry. If prompted for a passcode, enter **0000** (four zeros). Once connected, the **Bluetooth LED Indicator** will flash blue once every 10 seconds.
- 6. If your second mobile device supports the AVRCP Bluetooth profile, you can use the controls on the headphones to answer calls, adjust volume, play/pause playback, and skip tracks.
- 7. Open the Bluetooth settings on your first device and turn Bluetooth on. The first device should connect with the headphones.

Note that you can stream audio from only one connected device at a time. If you want to stream from the second device, you must stop playback on the first device.

Note that the selected audio codec is determined by the codecs supported on the two devices. The priority order is aptX[™] Low Latency, aptX[™], AAC, and SBC. If the two devices do not support the same codecs, the SBC codec will be selected.

WIRED CONNECTION

If your audio device does not have Bluetooth® or if you prefer to not use Bluetooth, you can plug the headphones directly into the audio output of your device.

- 1. Plug one end of the included **3.5mm Audio Cable** into the **3.5mm Audio Jack** on the headphones, then plug the other end into the headphones jack on your phone or another 3.5mm audio source.
- 2. Use the audio playback controls on your connected device to control playback. The controls on the headphones do not function without a Bluetooth connection.

ACTIVE NOISE CANCELLING (ANC)

The Active Noise Cancelling (ANC) feature can be used when the headphones are off, during audio playback, and during phone calls. To turn ANC on, slide the **ANC Switch** to the ON position. The **ANC LED Indicator** illuminates green when ANC is on. Note that ANC should not be used when attention to outside sounds is important.

To turn ANC off, slide the **ANC Switch** to the OFF position. The **ANC LED Indictor** turns off when ANC is off.

TECHNICAL SUPPORT

Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website www.monoprice.com or through email by sending a message to tech@monoprice.com. Check the website for support times and links.

To download the latest drivers, firmware, manuals, etc., go to **www.monoprice.com** and type the **P/N** into the search bar. If available, support files are linked at the bottom of the product page.

SPECIFICATIONS

Model	43251
Bluetooth® Version	5
Bluetooth Chipset	Qualcomm [®] QCC3005
Bluetooth Range	Up to 32 feet (10 meters)
Supported Bluetooth Profiles	HSP, HFP, AVRCP, A2DP
Bluetooth Pairing Name	MP43251
Supported Audio Codecs	aptX™ Low Latency, aptX™, AAC, SBC
Battery Type	3.7V Lithium-ion
Battery Capacity	400mAh
Charging Time	About 2.5 hours
Standby Time	About 400 hours
	About 20 hours (50% volume, ANC OFF, BT ON)
Playback/Talk Time	About 10 hours (50% volume, ANC ON, BT ON)
	About 14 hours (50% volume, ANC ON, BT OFF)
Dimensions	8.3" x 6.1" x 3.3" (210 x 155 x 83 mm)
Weight	9.5 oz. (269 g)

REGULATORY COMPLIANCE

Notice for FCC



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radio Notice for FCC

Caution

This FCC Part 15 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice for Industry Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Radio Notice for Industry Canada

Caution

This IC RSS-210 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with IC RSS-210. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Monoprice™ and all Monoprice logos are trademarks of Monoprice Inc.

The Bluetooth® word mark and logos are registered trademarks of Bluetooth SIG, Inc.

Qualcomm® is a trademark of Qualcomm Incorporated, registered in the United States and other countries. $aptX^{m}$, $aptX^{m}$ Low Latency Audio, and the $aptX^{m}$ logos are trademarks of Qualcomm Technologies International, Ltd. Qualcomm® $aptX^{m}$ and Qualcomm® $aptX^{m}$ Low Latency Audio are products of Qualcomm Technologies International, Ltd.