


1. Product Overview

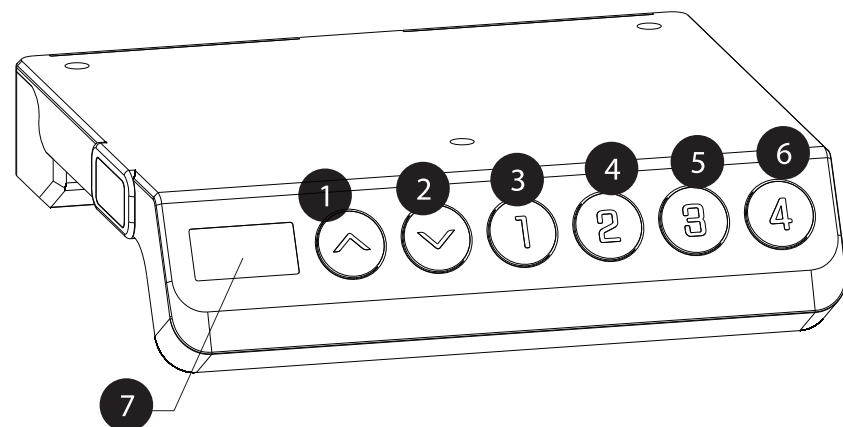

- (1) "▲" : Raise the desk
- (2) "▼" : Lower the desk
- (3) "1" : Position 1, the first user-set and saved height
- (4) "2" : Position 2, the second user-set and saved height
- (5) "3" : Position 3, the third user-set and saved height
- (6) "4" : Position 4, the fourth user-set and saved height
- (7) LED Display

2. Operating Instructions

- Adjusting the Desk's Height:
 1. Press the "▲" button. The desk will rise. Press and hold to continue to lifting. When it rises to the highest point, the LED Display will show "top."
 2. Press the "▼" button. The desk will lower. Press and hold to continue lowering. When at its lowest point, the LED Display will show "bot."
- User-set Saved Heights (Memory Function):

Raise or lower the desk to the desired height. Press and hold the "1" button for 3 seconds. A buzzer will produce an audible prompt, and the LED Display will show "S-1."

You can now press the "1" button to return to this height at anytime.

Repeat the steps above replacing the "1" button with buttons 2, 3, and/or 4 to likewise save heights for those particular buttons.

- Factory Reset
 1. When the height of the device is incorrect or an error code appears, the device needs to be reset and corrected. At the same time, press and hold the "3" and "4" keys for three seconds to enter this function.
 2. After entering the reset function, the display shows "RST". At this time, press and hold the "▼" button to reset the device. When the desktop drops to the lowest height, it starts to rebound and move upwards until it displays "bot", which means the reset is complete.
- 29V DC power supply function:
 1. When the standing desk is not in the reset state, after 30s from running to stopping, the 29V DC power supply function will be turned on, and the 2pin at the back of the control box will output a DC 29V voltage.
- Anti-collision sensitivity adjustment - optional features:
 1. Simultaneously press the "▲" button and "▼" button for three seconds to switch the sensitivity, one operation to switch one gear, divided into 4 gears, A-0, A-1, A-2, A-3
 2. The display shows "A-0" to close the anti-collision function; the display shows "A-3" high sensitivity; the display shows "A-2" Medium sensitivity; the display shows "A-1" Low sensitivity. (Factory default A-2)
 3. When the desk rises or falls, it will rebound immediately when encountering obstacles, which plays a protective role.
- Code processing:
 1. Reset function definition, the LED display shows "RST" or "rst", at this time, press and hold the "▼" button to start the device reset, when the desktop drops to the lowest height, it starts to rebound and run upwards until it displays "bot", that is, the reset is complete.
 2. If "E01" or "E02" appears, please let the table rest for more than 18 minutes before it can be used normally.
 3. If other codes appear and long press the "▼" button does not respond, please confirm that the connection line is not damaged and the connection is normal, and the power is cut for more than 10 seconds, and the power is turned on again, the display "RST" or "rst", then long press "▼" Button to reset.
 4. If you perform the above operations, the desk still does not operate normally, please contact customer service.

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.