



Monolith™ by Monoprice™ M7100X 7x90 Watts Per Channel Multi-Channel Home Theater Power Amplifier with XLR Inputs

P/N 43866
Quick Start Guide

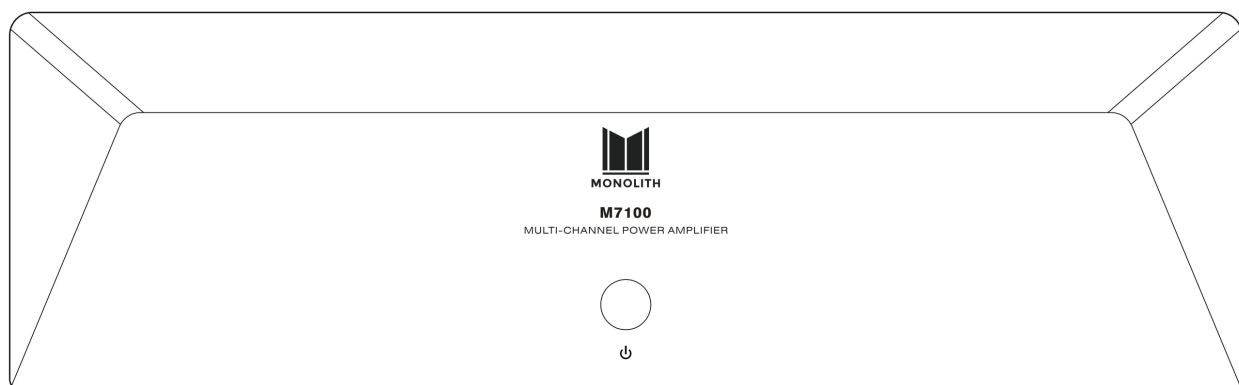

Front Panel

Power Button: When the power switch is depressed, the amplifier begins its turn-on process and the power button will light up. When the amplifier is plugged in and not in use, the power switch will not light up.

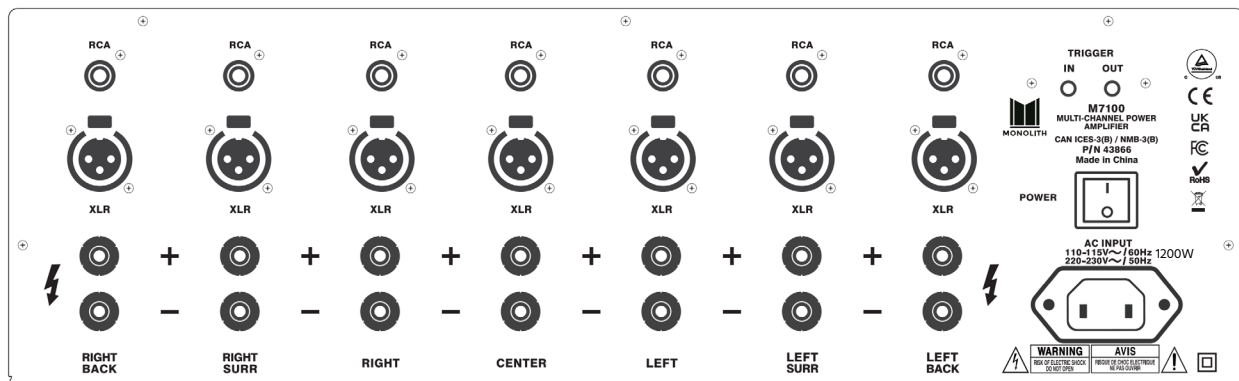

Rear Panel

XLR Audio Inputs: Use the XLR input jacks to connect to the outputs of a preamplifier or other control device with XLR outputs.

RCA Audio Inputs: Use the RCA input jacks to connect to the outputs of a preamplifier, receiver, or other component outfitted with RCA output connections.

Remote Trigger Input: Use the remote trigger input to connect to a compatible preamplifier, source device, or other product with a trigger output.

AC Power Switch: Switches the main AC power to the amp On and Off.

AC Input: Use the included power cord to connect your amplifier to an AC power source.

Speaker Binding Posts: Use the speaker binding posts to connect the amplifier to your speakers. The red post is positive. The black post is negative. Connect to the corresponding +/1 on your speaker terminals

Placement

To ensure the amplifier has a long life, it is necessary to provide adequate ventilation and air flow for the amplifier. The amplifier should be kept away from any external sources of heat and should never be placed with other heat-producing components in an enclosed cabinet or enclosure lacking proper ventilation. Do not stack other components on top of your amplifier.

FCC Statement (US):

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ICES Statement (Canada):

CAN ICES-3 (B) / NMB-3(B)

EU/UK Compliance

This equipment complies with Directives 2014/30/EU, 2014/35/EU, 2011/65/EU with (EU) 2015/863, Electromagnetic Compatibility Regulations 2016, Electrical Equipment (Safety) Regulations 2016 and Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.



Disposal and Recycling Information



The symbol indicates that this product should be disposed of separately from regular household waste streams. It is your responsibility to dispose of this and other electrical and electronics products via designated collection facilities appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. For more detailed information about the disposal of your unwanted product, please contact your local authorities, waste disposal service, or the shop where you purchased the product.

www.monoprice.com

Need Help? We're here for you!

Contact us: www.monoprice.com/contactus

Product pictures are for reference only.

Specifications described herein are subject to change without prior notification.

Monoprice™ and all Monoprice logos are trademarks of Monoprice Inc.

Copyright © 2023 Monoprice, Inc. All rights reserved.

Monoprice, Inc.

1 Pointe Drive, Suite 400

Brea, CA 92821 – USA

www.monoprice.com