

WORKSTREAM™

Bluetooth® + USB Wireless Web Meeting Headphones

P/N 43905

Quick User Guide

ONLINE SUPPORT

Monoprice™ is pleased to provide free online support. For order related issues, contact the Customer Service department through the Live Chat link on our website www.monoprice.com or via email at support@monoprice.com

For technical issues, contact the Technical Support department through the online chat button on our website www.monoprice.com or by sending an email to tech@monoprice.com


Check the website for support times and links.

PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice™ Customer Service for a replacement.

- 1x Headphones
- 1x Wireless USB Transmitter
- 1x Boom Microphone
- 1x Foam Microphone Cover
- 1x 3.5mm Audio Cable
- 1x USB Type-C® Charging Cable
- 1x Quick User's Guide

PRODUCT OVERVIEW

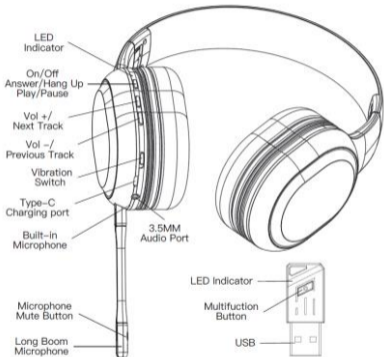

BATTERY CHARGING

The **LED Indicator** will flash green 3 times each second when the battery is low and needs to be charged. Additionally, the battery should be charged before first use and at least once every three months to keep it fresh and capable of holding the full charge.



Perform the following steps to charge the battery.

1. Plug one end of the included **USB Type-C® Charging Cable** into the **Type-C Charging Port** on the headphones, then plug the other end into a USB power source, such as a computer, wall charger, or external battery pack (available separately). If the headphones were powered on, they will automatically power off. The **LED Indicator** illuminates solid red while charging is in progress. A full charge will take approximately 3 hours.
2. When the **LED Indicator** turns off, the battery is fully charged. Unplug the **USB Type-C Charging Cable** from the headphones and from the USB power source.



Note: When wirelessly connected to an iOS® device, the current battery level is displayed in the upper right corner.

OPERATION





Power

- With the headphones powered off, press and hold the  button. The headphones will turn on and the **LED Indicator** will illuminate blue for 3 seconds. If the headphones have already been paired and the paired device is turned on and in range, they will connect with that device. Otherwise, the **LED Indicator** will flash blue and green alternately, indicating that the headphones are in Bluetooth® pairing mode.
- With the headphones powered on, press and hold the  button. The **LED Indicator** will flash blue and green alternately for 2 seconds and the headphones will turn off.





Volume

- Momentarily press the  button to decrease the volume level.
- Momentarily press the  button to increase the volume level.

Playback


- With audio playing, momentarily press the  button to pause playback.
- With audio playback paused, momentarily press the  button to start/resume playback.
- With audio playing, press and hold the  button to skip forward to the next track.
- With audio playing, press and hold the  button to skip back to the previous track.

Phone Calls

- When an incoming call is detected, momentarily press the  button to answer the call.
- When an incoming call is detected, press and hold the  button to reject the call.
- With a call in progress, momentarily press the  button to hang up.
- When using a Bluetooth® connection, double press the  button to redial the last number in your call record.

BLUETOOTH CONNECTION



Perform the following steps to use a Bluetooth® wireless connection.

1. With the headphones powered off, press and hold the  button. The headphones will turn on and the **LED Indicator** will illuminate blue for 3 seconds. If the headphones have already been paired and the paired device is turned on and in range, they will connect with that device. Otherwise,

the **LED Indicator** will flash blue and green alternately, indicating that the headphones are in Bluetooth® pairing mode.

2. Open the Bluetooth settings on your mobile device, then scan for available connections.
3. Locate and select the **MP43905** entry.
4. Once the headphones have connected to your device, the **LED Indicator** will illuminate solid blue. While audio is playing, the **LED Indicator** will slowly blink blue.

Note that if the headphones are moved out of range of a connected device, they will automatically disconnect. If they are moved back in range within 5 minutes, they will automatically reconnect. If the headphones are out of range for more than 5 minutes, they will automatically power off.

If you want to clear the Bluetooth pairing, press and hold the  and  buttons for about 3 seconds. The headphones will then enter Bluetooth pairing mode.

WIRELESS USB TRANSMITTER

In addition to the built-in Bluetooth® radio, the headphones feature the ability to establish a wireless connection with the included **Wireless USB Transmitter**. This allows you to use a wireless connection with a PC that does not have Bluetooth capability.

First Connection

Perform the following steps to establish an initial wireless connection.

1. Plug the included **Wireless USB Transmitter** into an available USB port on your system. It will automatically install the necessary drivers and will enter standby mode.
2. Press and hold the **Multifunction Button** on the Wireless USB Transmitter for 2 seconds to enter pairing mode. The **LED Indicator** on the **Wireless USB Transmitter** will begin flashing green while it automatically pairs with the headphones.

3. Once paired and connected, the **LED Indicator** on the **Wireless USB Transmitter** will illuminate solid green.

Reconnecting

Once the initial pairing has been completed, the headphones will automatically reconnect with the **Wireless USB Transmitter** when they are powered on.

Breaking Connection

Momentarily press the **Multifunction Button** on the **Wireless USB Transmitter** to disconnect from the headphones. The **LED Indicator** on the **Wireless USB Transmitter** will illuminate solid red. You can now plug the **Wireless USB Transmitter** to a different device.

Clear Connection

Press and hold the **Multifunction Button** on the **Wireless USB Transmitter** to clear the connection record. The **LED Indicator** on the **Wireless USB Transmitter** will flash red and green alternately.

Power Off

Unplug the **Wireless USB Transmitter** to turn in off. Plug it in to turn in on.

REGULATORY COMPLIANCE

Notice for FCC



FCC ID: 2AMWY-UG-05

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any

interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the

equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notice for ISED Canada

IC: 24103-43905

This device complies with ISED Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'ISDE Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radio Frequency Exposure

This device meets the ISED Canada requirements for exposure to radio waves and is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy. To comply with Canada RF exposure compliance requirements, this device must not be co-located or operating in conjunction with any other antenna or transmitter.

Monoprice™, Workstream™, the Workstream logo, and all Monoprice logos are trademarks of Monoprice Inc.

The Bluetooth® word mark and logos are registered trademarks of Bluetooth SIG, Inc.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.