



Monoprice™ MakerCraft Craft Cutter Desktop

Quick Setup Guide


1

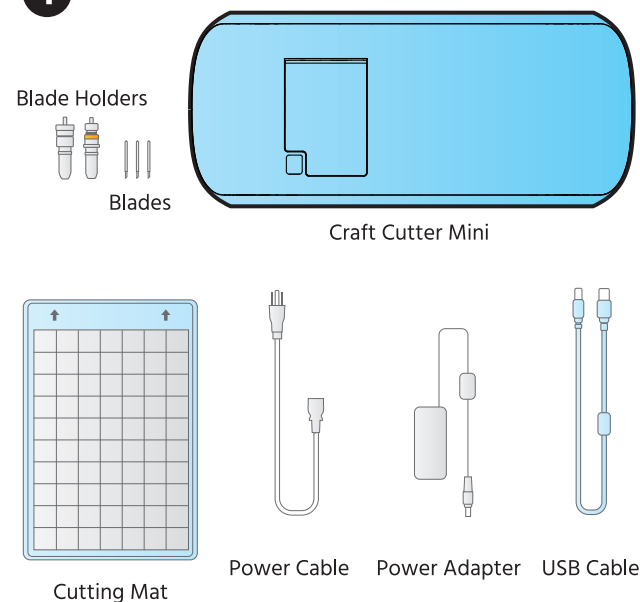


2

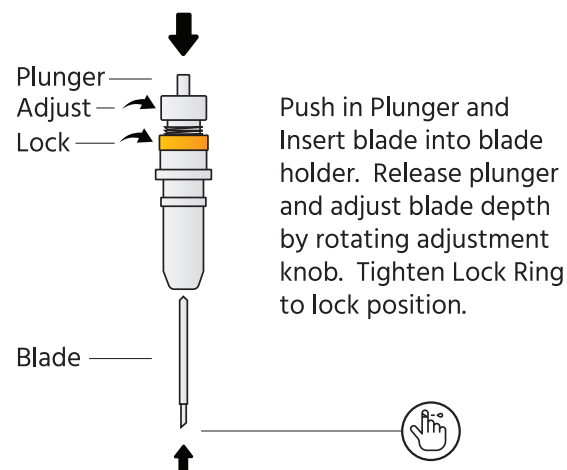

3

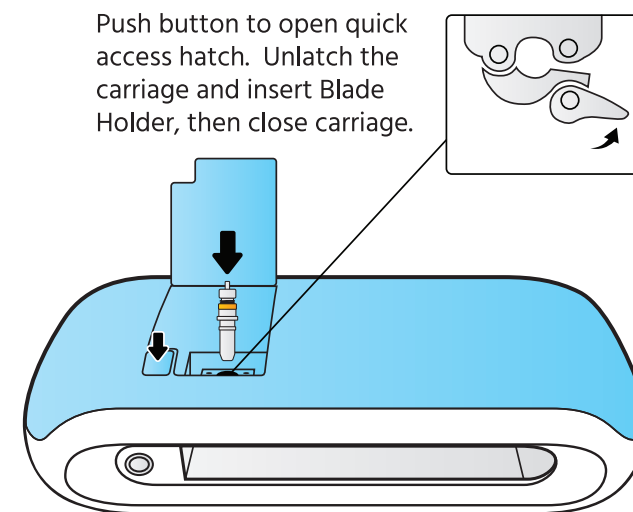


4

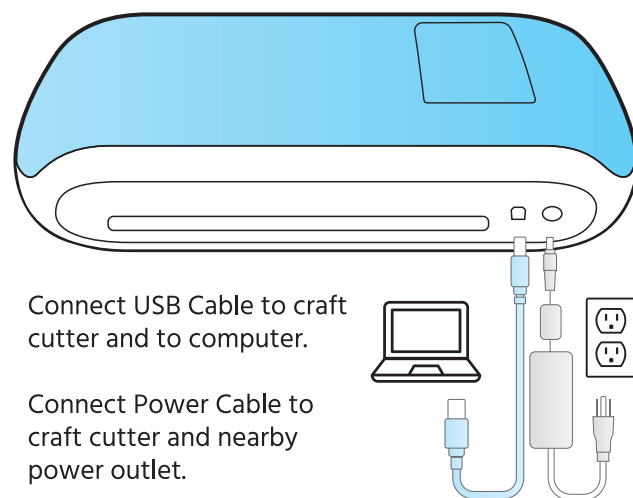

5



6

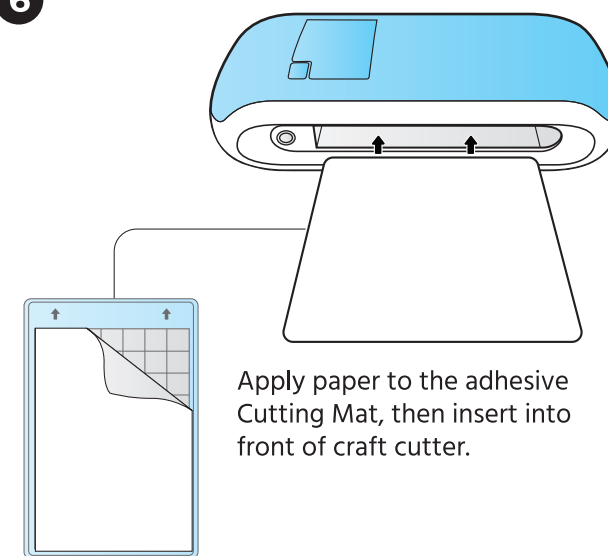



MONOPRICE™

Thank you for your order!

Please scan the QR Code for additional information about this product,
or go to **www.monoprice.com** and enter **44347** into the search field.

We are fully dedicated to **100% satisfaction** on our products and customer service.

We would like to invite you to **Share Your Experience.** If you are happy with the product, please write a review online.

If you have had any issues with the product or our service, please email us at **support@monoprice.com** or **tech@monoprice.com**

We will promptly work with you to resolve your issue, provide replacement product, or even facilitate a return.

Product pictures are for reference only.
Specifications described herein are subject to change without prior notification. Monoprice™
and all Monoprice logos are trademarks of Monoprice Inc.
Copyright © 2023 Monoprice, Inc. All rights reserved.

Monoprice, Inc.
1 Pointe Drive, Suite 400
Brea, CA 92821 - USA
www.monoprice.com
Tel. 877.271.2592

SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- Please keep your hands, hair, loose clothing, jewelry, etc. away from any moving parts.
- Please supervise children around the cutter when it is in use.
- Do not move the Monoprice Craft Cutter or touch any circuitry while it is plugged in.
- Only use the included power adapter. Attempting to use a different model may seriously damage the product. If either the power cable or adapter are damaged, replace with the appropriate parts.
- Do not touch or jam the plotter's track while it is operating. If the cutter is damaged, it is the owner's responsibility.
- Do not shake the cutter while it is operating.
- Do not cut any materials that have staples or other embellishments attached.
- Do not touch the cutter with a magnet. It is safe, however, to cut magnetic materials, such as those used on refrigerators and car exteriors.
- Do not allow any liquids to spill into the cutter.
- Do not allow small items to fall into the cutter.
- Place the Monoprice Craft Cutter on a sturdy and stable table, desk, or trolley. The optional Monoprice Craft Cutter stand can also be used.
- Always turn off the Monoprice Craft Cutter when not in use. Leaving the cutter turned on for extended periods of time can possibly damage the machine.
- Always turn off the Monoprice Craft Cutter before unplugging the power adapter or removing the power cable from the wall outlet or power strip.
- Unplug the Monoprice Craft Cutter from a wall outlet or power strip during an electrical storm or when the cutter will not be used for an extended period of time.
- When transporting the cutter, move the pinch wheel lever into the upward position. Remove the blade from the blade holder and cover the tip with the plastic cap.

REGULATORY COMPLIANCE

Notice for FCC



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radio Notice for FCC

Caution

This FCC Part 15 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice for ISED Canada

CAN ICES-3 (B) / NMB-3(B)

Radio Notice for ISED Canada:

This device complies with ISED Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Le présent appareil est conforme aux CNR d'ISED Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radio Frequency Exposure

This device meets the ISED Canada requirements for exposure to radio waves and is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy. To comply with Canada RF exposure compliance requirements, this device must not be co-located or operating in conjunction with any other antenna or transmitter.

EU/UK Compliance

Hereby, Monoprice Inc. declares that the radio equipment type Bluetooth Headphones is in compliance with Directives 2014/53/EU, 2011/65/EU with (EU) 2015/863, Radio Equipment Regulations 2017 and Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012. The full text of the declaration of Conformity is available at the following internet address: <https://www.monoprice.eu/>.



The information required by EU Radio Equipment Directive / UK Radio Equipment Regulations related to the frequency band(s) and the maximum radio-frequency power transmitted:
Frequency: 2.40 – 2.48 GHz; Max Power: 18.5 dBm

Disposal and Recycling Information



The symbol indicates that this product should be disposed of separately from regular household waste streams. It is your responsibility to dispose of this and other electrical and electronics products via designated collection facilities appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. For more detailed information about the disposal of your unwanted product, please contact your local authorities, waste disposal service, or the shop where you purchased the product.