



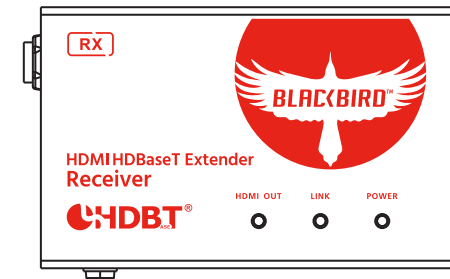

BLACKBIRD™

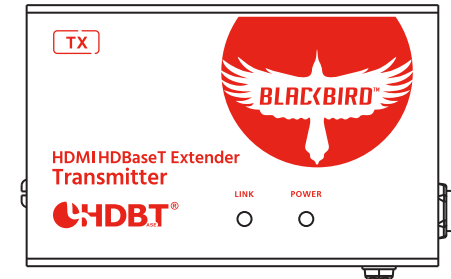

www.monoprice.com

Blackbird™ by Monoprice™
4K60 HDBaseT Extender [TAA]

Need help? We're here for you!
Contact us: www.monoprice.com/contactus


Product pictures are for reference only.
Specifications described herein are subject to change without prior notification.
Monoprice™ and all Monoprice logos are trademarks of Monoprice Inc.
Copyright © 2023 Monoprice, Inc. All rights reserved.

Monoprice Inc.
1 Pointe Drive, Suite 400
Brea, CA 92821 - USA
www.monoprice.com

P/N 44567
Quick Start Guide

Blackbird™ by Monoprice™
4K60 HDBaseT Extender [TAA]

A Hardware Review

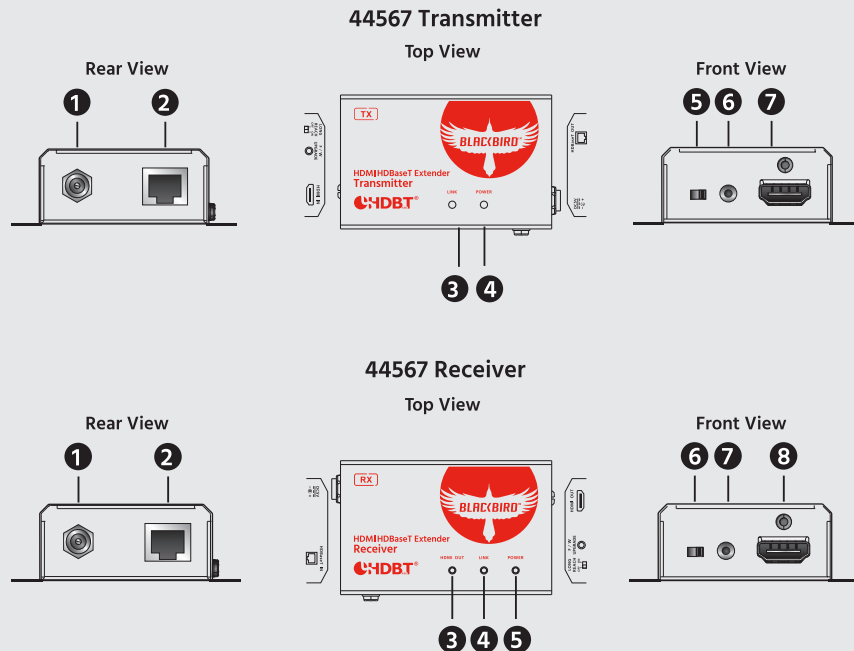

A Hardware Review

Front and Rear View

- ① Power Jack
- ② HDBaseT Output Port
- ③ Link LED
- ④ Power LED
- ⑤ Long Reach Switch
- ⑥ F/W Upgrade Port
- ⑦ HDMI Input Port

Front and Rear View


- ① Power Jack
- ② HDBaseT Input Port
- ③ HDMI Out LED
- ④ Link LED
- ⑤ Power LED
- ⑥ Long Reach Switch
- ⑦ F/W Upgrade Port
- ⑧ HDMI Output Port

Firmware Upgrade

The Firmware Upgrade Port is reserved for tech support only.

If you would like to do the firmware upgrade yourself, please contact tech support.

B Hardware Installation

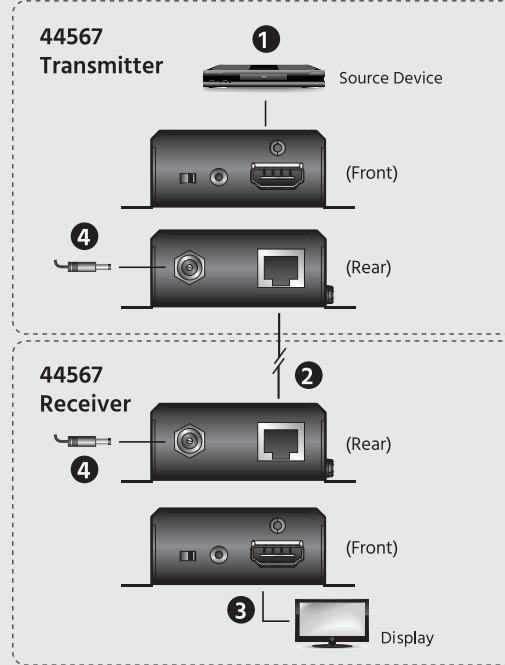

44567 Package Contents

- 1x HDMI HDBaseT Transmitter
- 1x HDMI HDBaseT Receiver
- 2x Power Adapters
- 1x User Manual

Transmitter Package Contents

- 1x HDMI HDBaseT Transmitter
- 1x Power Adapter

Receiver Package Contents

- 1x HDMI HDBaseT Receiver
- 1x Power Adapter

B Hardware Installation

- ① Connect the HDMI Input Port on the 44567 Transmitter to the HDMI Output Port on your video source device using an HDMI cable.
- ② Connect one end of the RJ-45 cable to the output port on the 44567 transmitter. Then connect the other end of the RJ-45 cable to the input port on the 44567 receiver.
- ③ Connect the HDMI Output Port on the 44567 Receiver to the HDMI Input Port on your video display device using an HDMI Cable.
- ④ Connect one power adapter cable into the power jack on the 44567 Transmitter. Connect the other power adapter cable into the power jack on the 44567 Receiver. Plug the power adapters into a nearby power outlet.

Working in Long Reach Mode

The 44567 supports long reach mode. When this mode is applied, the maximum range can be enhanced to 150 meters at resolutions up to 1080p.

SAFETY INSTRUCTIONS

- This product is for indoor use only.
- Read all of these instructions. Save them for future reference.
- Follow all warnings and instructions marked on the device.
- Do not place the device on any unstable surface (cart, stand, table, etc.). If the device falls, serious damage will result.
- Do not use the device near water.
- Do not place the device near, or over radiators or heat registers.
- The device cabinet is provided with slots and openings to allow for adequate ventilation. To ensure reliable operation and to protect against overheating, these openings must never be blocked or covered.
- The device should never be placed on a soft surface (bed, sofa, rug, etc.) as this will block its ventilation openings. Likewise, the device should not be placed in a built-in enclosure, unless adequate ventilation has been provided.
- Never spill liquid of any kind on the device.
- Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- The device should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- To prevent damage to your installation, it is important that all devices are properly grounded.
- Do not allow anything to rest on the power cord or cables. Route the power cord and cables so that they cannot be stepped on or tripped over.
- Position system cables and power cables carefully; Be sure that nothing rests on any cables.
- Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts resulting in a risk of fire or electrical shock.
- Do not attempt to service the device yourself. Refer all servicing to qualified service personnel.
- If the following conditions occur, unplug the device from the wall outlet and bring it to qualified service personnel for repair.
 - The power cord or plug has become damaged or frayed.
 - Liquid has been spilled into the device.
 - The device has been exposed to rain or water.
 - The device has been dropped, or the cabinet has been damaged.
 - The device exhibits a distinct change in performance, indicating a need for service.
 - The device does not operate normally when the operating instructions are followed.
- Only adjust those controls that are covered in the operating instructions.
- Improper adjustment of other controls may result in damage that will require extensive work by a qualified technician to repair.

Notice for FCC



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class A digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Notice for ISED Canada

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.