 


 **MONOPRICE**

88-Key Digital Piano

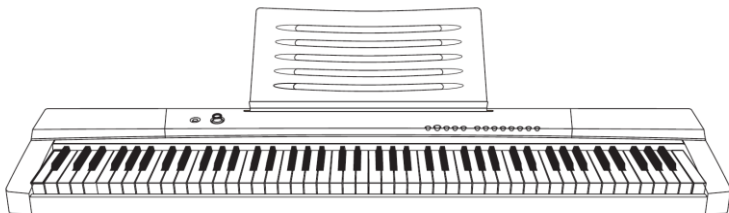

P/N 600043 (without stand)/600044 (with stand)

User's Manual

SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- This device is intended for indoor use only.
- Do not expose this device to water or moisture of any kind. Do not place drinks or other containers with moisture on or near the device. If moisture does get in or on the device, immediately remove it from its power source and allow it to fully dry before reapplying power.
- Do not touch the device, the power cord, or any other connected cables with wet hands.
- Do not install this device on an unstable surface where it could fall and cause either personal injury or damage to the device and/or other equipment.
- Do not expose this device to excessive vibration, extreme force, shock, or fluctuations in temperature or humidity.
- Avoid prolonged exposure to excessive volume levels, which could cause hearing damage.
- Do not expose this device to excessively high temperatures. Do not place it in, on, or near a heat source, such as a fireplace, stove, radiator, etc. Do not leave it in direct sunlight.
- Do not place or install this device in an area where it can be exposed to excessive amounts of dust, humidity, oil, smoke, or combustible vapors.

- Prior to operation, check the unit and power cord for physical damage. Do not use if physical damage has occurred.
- Unplug this device from the power source when not in use.
- Take care to prevent damage to the power cord. Do not allow it to become crimped, pinched, walked on, or become tangled with other cords. Ensure that the power cord does not present a tripping hazard.
- Never unplug the unit by pulling on the power cord. Always grasp the connector head or adapter body.
- Ensure that power is turned off and disconnected before making any electrical connections.
- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.
- This device has no user serviceable parts. Do not attempt to open, service, or modify this device.

CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website www.monoprice.com or via email at support@monoprice.com. Check the website for support times and links.

PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

1x 88-Key Digital Piano

1x Music Sheet Stand

1x Pedal

1x MIDI Cable

1x USB Type-C® Cable


1x AC Power Adapter

1x User's Manual

In addition to the above contents, the 600044 version also includes the following parts for the included Wooden Stand.

2x M5 Screws  (1)

2x Angle Iron Bracket  (2)

4x M6 Short Screws  (3)

4x M6 Hammer Head Nuts  (4)

4x M6 Long Screws  (5)

4x Plastic Head Screws  (6)

1x Iron Box Section  (7)

 
1x Rung  (8)

1x Left Baseboard  (9)

1x Right Baseboard  (10)

PRODUCT OVERVIEW


Top Panel

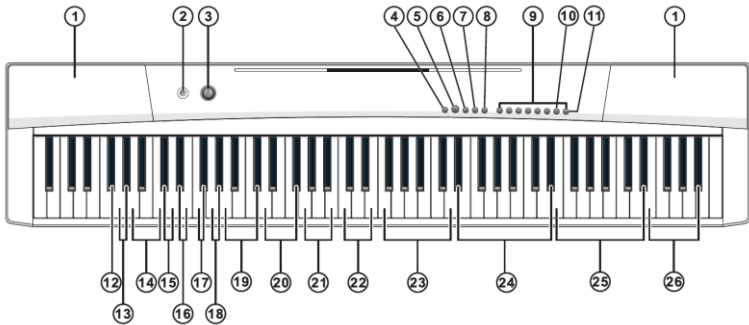

- | | | |
|-----------------|------------------|------------------------|
| ① Speaker | ⑪ GM Timbre | ④+⑳ Upper Volume |
| ② Power Switch | ④+⑫ Click | ④+㉒ Metronome Volume |
| ③ Master Volume | ④+⑬ Record | ④+㉓ Metronome |
| ④ Function | ④+⑭ Touch | ④+㉔ Tempo |
| ⑤ Demo | ④+⑮ Sustain | ④+㉕ Demo Song |
| ⑥ Metronome | ④+⑯ Vibrato | ⑪+㉖ GM Timbre Select |
| ⑦ Lesson | ④+⑰ Transpose | ④+㉗ Udisk Music Player |
| ⑧ Split | ④+⑱ Octave | |
| ⑨ Timbre | ④+⑲ Split Volume | |
| ⑩ Percussion | ④+⑳ Lower Volume | |

Note that when the **Power Switch (2)** is turned on, the first button in the **Timbre (9)** section (**Grand Piano**) illuminates to indicate that power is applied.

 Rear Panel

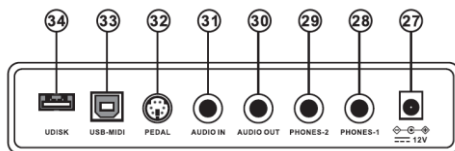


27. **12V:** DC barrel connector for connecting the included AC power adapter.
28. **PHONES-1:** 1/4" TRS stereo headphone jack. When one or more headphones are connected, the built-in speakers are automatically disabled.
29. **PHONES-2:** 1/4" TRS stereo headphone jack. When one or more headphones are connected, the built-in speakers are automatically disabled.
30. **AUDIO OUT:** 1/4" TRS stereo output jack for connecting the piano to an external amplifier or other device.
31. **AUDIO IN:** 1/4" TRS stereo input jack for connecting an external audio source device, such as an mp3 player or CD player.
32. **PEDAL:** 3-in-1 pedal connector for attaching a single sustain pedal (included) or a pedal board with soft, sustain, and damper pedals (not included).
33. **USB-MIDI:** USB Type-B port for connecting the piano to a computer for advanced recording, composing, and editing with software or to input MIDI music from the computer for playback on the piano. You can also connect the piano to a smartphone or tablet using an On-The-Go™ (OTG™) USB adapter (available separately) for use with a third party music teaching/lessons app (not included).

34. **UDISK:** USB Type-A port for connecting a USB flash drive (up to 32GB capacity) with mp3 files for playback using the built-in *Udisk Music Player*.

OPERATION

Most of the following features use the keyboard keys to perform other operations. Most of these require one button to be held down while a key is pressed. This is documented as **Button+Key**.

 Udisk Music Player

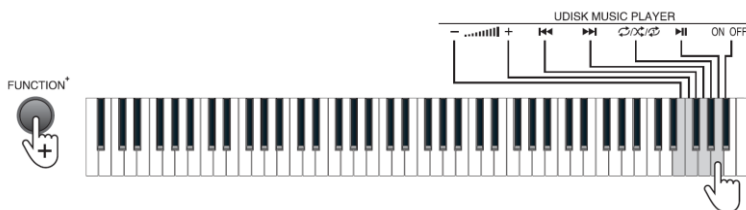

- Plug a USB flash drive with mp3 files (up to 32GB capacity) into the **UDISK** port on the rear panel, then press **Function+ON/OFF** to turn the music player on or off. When turned on, the player will automatically start playing the first mp3 file on the connected flash drive.
- Press **Function+▶||** to pause or resume playback.
- Press **Function+—** to reduce the volume level.
- Press **Function++** to increase the volume level.
- Press **Function+◀◀** to skip back to the previous track.

 
- Press **Function+▶▶** to skip ahead to the next track.
- Press **Function+↻/⌂/⌂** to cycle through the repeat modes for continuous, random, and single play modes.

Key Tone



- By default, an audible "click" sound plays whenever a key is pressed. Press **Function+Click** to turn the "click" sound on or off.


Timbre Selection

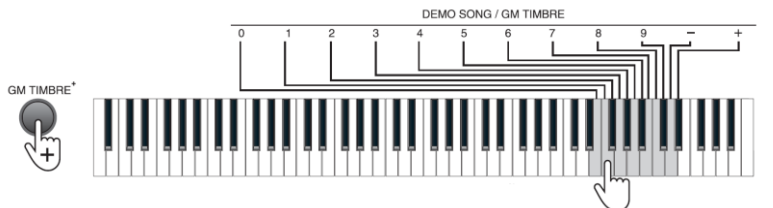

000 Acoustic Grand Piano	035 Fretless Bass	070 Bassoon	105 Banjo
001 Bright Acoustic Piano	036 Slap Bass 1	071 Clarinet	106 Shamisen
002 Electric Grand Piano	037 Slap Bass 2	072 Piccolo	107 Koto
003 Honky-tonk Piano	038 Synth Bass 1	073 Flute	108 Kalimba
004 Rhodes Piano	039 Synth Bass 2	074 Recorder	109 Bagpipe
005 Chorused Piano	040 Violin	075 Pan Flute	110 Fiddle
006 Harpsichord	041 Viola	076 Bottle Blow	111 Shanai
007 Clavichord	042 Cello	077 Shakuhachi	112 Tinkle Bell
008 Celesta	043 Contrabass	078 Whistle	113 Agogo
009 Glockenspiel	044 Tremolo Strings	079 Ocarina	114 Steel Drums
010 Music Box	045 Pizzicato Strings	080 Lead 1 (square)	115 Woodblock
011 Vibraphone	046 Orchestral Harp	081 Lead 2 (sawtooth)	116 Taiko Drum
012 Marimba	047 Timpani	082 Lead 3 (calliope lead)	117 Melodic Tom
013 Xylophone	048 String Ensemble 1	083 Lead 4 (chiff lead)	118 Synth Drum
014 Tubular Bell	049 String Ensemble 2	084 Lead 5 (charang)	119 Reverse Cymbal
015 Dulcimer	050 Synth Strings 1	085 Lead 6 (voice)	120 Guitar Fret Noise
016 Drawbar Organ	051 Synth Strings 2	086 Lead 7 (fifths)	121 Breath Noise
017 Percussive Organ	052 Choir Aahs	087 Lead 8 (bass+lead)	122 Seashore
018 Rock Organ	053 Voice Oohs	088 Pad 1 (new age)	123 Bird Tweet
019 Church Organ	054 Synth Voice	089 Pad 2 (warm)	124 Telephone Ring
020 Reed Organ	055 Orchestra Hit	090 Pad 3 (polysynth)	125 Helicopter
021 Accordion	056 Trumpet	091 Pad 4 (choir)	126 Applause
022 Harmonica	057 Trombone	092 Pad 5 (bowed)	127 Gunshot
023 Tango Accordion	058 Tuba	093 Pad 6 (metallic)	128 Yong Gin
024 Acoustic Guitar (nylon)	059 Muted Trumpet	094 Pad 7 (halo)	129 Zheng
025 Acoustic Guitar (steel)	060 French Horn	095 Pad 8 (sweep)	130 Zhong Ruan
026 Electric Guitar (jazz)	061 Brass Section	096 FX 1 (rain)	131 Pi Pa
027 Electric Guitar (clean)	062 Synth Brass 1	097 FX 2 (soundtrack)	132 Big Souna
028 Electric Guitar (muted)	063 Synth Brass 2	098 FX 3 (crystal)	133 Souna
029 Overdriven Guitar	064 Soprano Sax	099 FX 4 (atmosphere)	134 Er Hu
030 Distortion Guitar	065 Alto Sax	100 FX 5 (brightness)	135 Yue Hu
031 Guitar Harmonics	066 Tenor Sax	101 FX 6 (goblins)	136 Di Zi
032 Acoustic Bass	067 Baritone Sax	102 FX 7 (echoes)	137 Bong Di
033 Electric Bass (finger)	068 Oboe	103 FX 8 (sci-fi)	138 Koto
034 Electric Bass (pick)	069 English Horn	104 Sitar	139 Qu Di


- The piano includes 140 (000-139) built-in timbres for selection.
- Whenever the piano is turned on, it defaults to the **088 Pad 1 (new age)** timbre.
- To change the timbre, press **GM Timbre+XXX**, where **XXX** is the three digit code for the new timbre. Alternatively, you can press **GM Timbre+Y**, where **Y** is either the - or + key, which decrements or increments the currently selected timbre by 1.

 Play Demo Songs

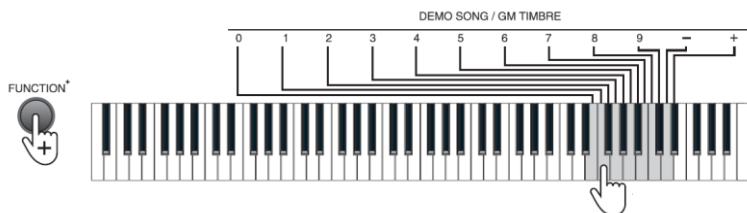

- The piano includes 16 (00-15) built-in Demo Songs.
- Press the **Demo** button to start or stop playback of the currently selected Demo Song.
- To change the currently selected Demo Song, press **Function+XX**, where **XX** is the two digit code for the new song.
- You can change the timbre while a Demo Song is being played. Note that the percussion and dual timbre options are not available while playing a Demo Song.

 
Metronome

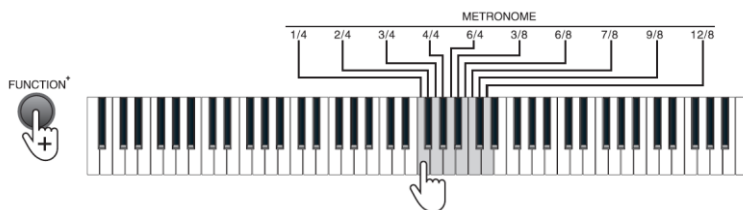

- Press the **Metronome** button to turn the built-in metronome on or off.
- The piano features 10 time signatures for the metronome, from 1/4 to 12/8. To change the time signature of the metronome, press


Function+X, where **X** is the key corresponding to the desired metronome time signature.

 Metronome Volume

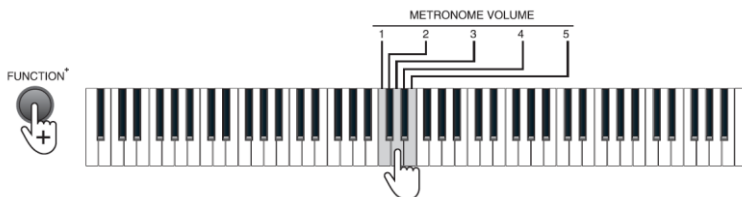

- The piano features 5 different volume levels for the metronome. To change the metronome volume level, press **Function+X**, where **X** is the key corresponding to the desired metronome volume level.

 Tempo

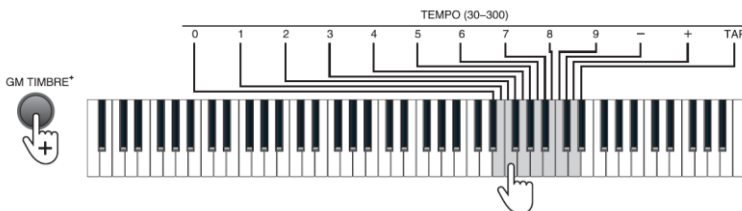


- The piano features 271 different metronome tempos, from 30 to 300 beats per minute (bpm). The default tempo is 120 bpm.
- To change the metronome tempo, press **GM Timbre+XXX**, where **XXX** is 030-300, including the leading 0 for values under 100. Alternatively, you can press **GM Timber+Y**, where **Y** is either the -

or **+** key, which decrements or increments the currently selected metronome tempo by 1.

- To quickly restore the default 120 bpm tempo, press **GM Timber+TAP**.

 Note Effects

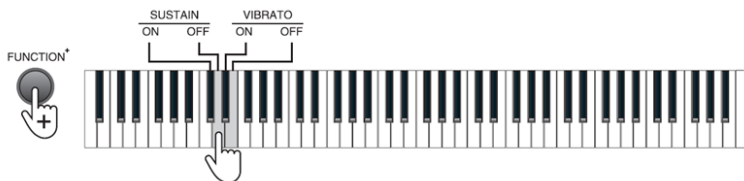


- The piano can add Sustain and/or Vibrato effects to the notes being played.
- To enable Sustain, press **Function+Sustain On**.
- To disable Sustain, press **Function+Sustain Off**.
- To enable Vibrato, press **Function+Vibrato On**.
- To disable Vibrato, press **Function+Vibrato Off**.

Transpose




- The piano has a transpose feature, which can adjust the pitch of all notes played by up to ± 6 semitones. This allows you to play a piece in one key, while producing notes in another key.
- To change the pitch up by one semitone, press **Function+X**, where **X** is the **Transpose +** key.
- To change the pitch down by one semitone, press **Function+X**, where **X** is the **Transpose -** key.
- To reset the pitch to the standard pitch, press **Function+X**, where **X** is both the **Transpose +** and **Transpose -** key at the same time.

 Touch Control

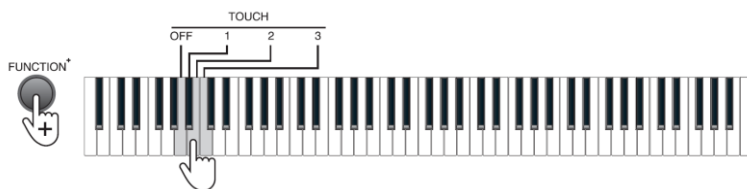


- The piano features up to 3 levels of touch sensitivity, which can change the volume of the notes played, depending on how hard the key is hit.
- To change the touch sensitivity, press **Function+X**, where **X** is the key corresponding to the desired **Touch** level.

 Split

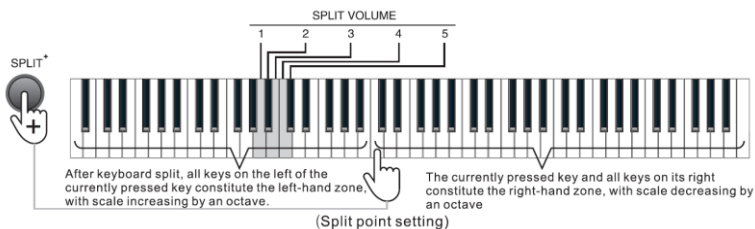


- The keyboard can be split into two zones, allowing you to play different timbres with each hand.
- When the keyboard is split, the scale of the left-hand zone is increased by one octave, while the scale of the right-hand zone is decreased by one octave.
- To set a split point, press **Split+X**, where **X** is the key that you want to be the left most key of the right-hand zone.
- Press the **Split** button again to disable keyboard splitting.
- When the keyboard is split, both zones will use the timbre that was active when the split was made. You can then use the **Timbre Selection** function to set a new timbre for the right-hand zone.
- While the split is active, you can change the volume of the left-hand zone by pressing **Function+Y**, where **Y** they key corresponding to the desired **Split Volume**.

 Dual Timbre

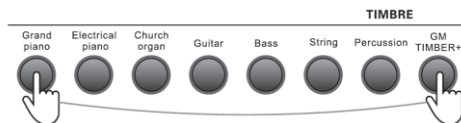


- The keyboard can be configured to play two timbres at the same time.
- One of the timbres must be one of the 7 timbre buttons, **Grand piano**, **Electrical piano**, **Church organ**, **Guitar**, **Bass**, **String**, and **Percussion**.
- To play two timbres, press two timbre buttons at the same time.
- If you want to play a timbre other than one of the named timbre buttons, first use the **Timbre Selection** function to select the desired timbre. Then press **GM Timbre+X**, where **X** is one of the 7 other timbre buttons.

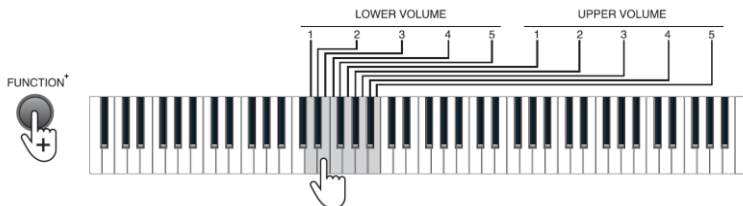 


- The first selected timbre is the upper level and the second timbre is the lower level. You can independently adjust the volume of each level.
- To change the volume of the lower level, press **Function+X**, where **X** is the key corresponding to the desired **Lower Level** volume.
- To change the volume of the upper level, press **Function+Y**, where **Y** is the key corresponding to the desired **Upper Level** volume.

 Lesson Mode

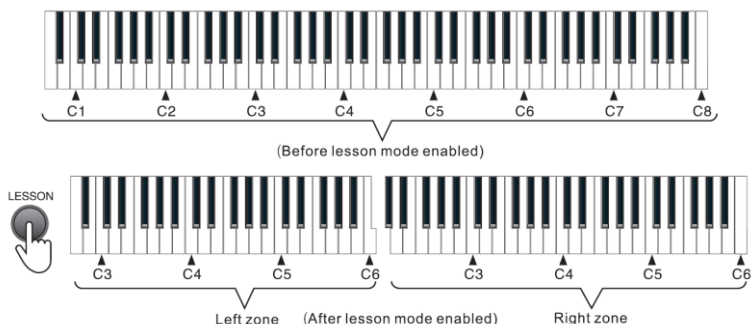

- Lesson Mode splits the keyboard into two equal zones with identical tone and timbre. This makes it easy for a teacher and student to sit side by side and play the same notes at the same time.
- To enable Lesson Mode, press the **LESSON** button. Press the **LESSON** button again to disable Lesson Mode.

 Octave Control

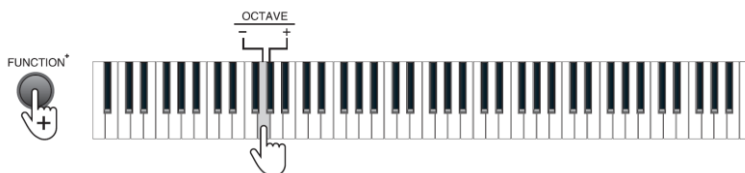

- While Lesson Mode is active, you can adjust the octave of each zone by ± 2 octaves.
- To change the octave, press **Function+X**, where **X** is the **Octave -** or **Octave +** key.

- To reset the octave to the default setting, press **Function+Y**, where **Y** is both the **Octave -** and **Octave +** keys at the same time.

Record Mode

 


- The piano has internal memory, which can store up to 700 notes for later playback.
- To start recording, press **Function+Rec**.
- To stop recording, press **Function+Rec** a second time.
- Recording will automatically stop after the internal memory is filled with 700 notes.
- When recording starts, the metronome is automatically enabled. You can adjust the metronome tempo using the **Tempo** function.
- To playback the recorded notes, press **Function+Play**.
- To stop playback of the recorded notes, press **Function+Play** a second time.


STAND ASSEMBLY (600044 only)

In addition to the base package contents, P/N 600044 also includes a Wooden Stand. Perform the following steps to assemble the stand.

1. Insert the **Iron Box Section (7)** into the groove in the bottom of the piano, then secure it in place using 2x **M5 Screws (1)**.

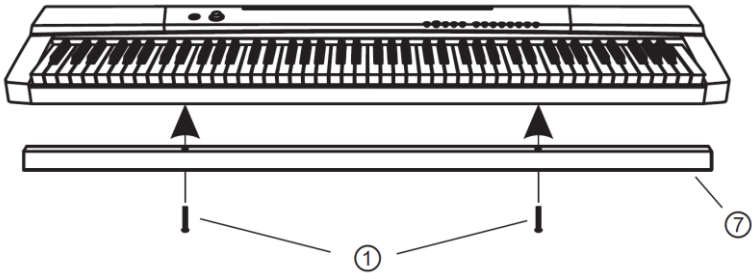


 2. Install 1x **Angle Iron Bracket (2)** to the **Left Baseboard (9)** using 2x **M6 Short Screws (3)**, then install 1x **Angle Iron Bracket (2)** to the **Right Baseboard (10)** using 2x **M6 Short Screws (3)**.

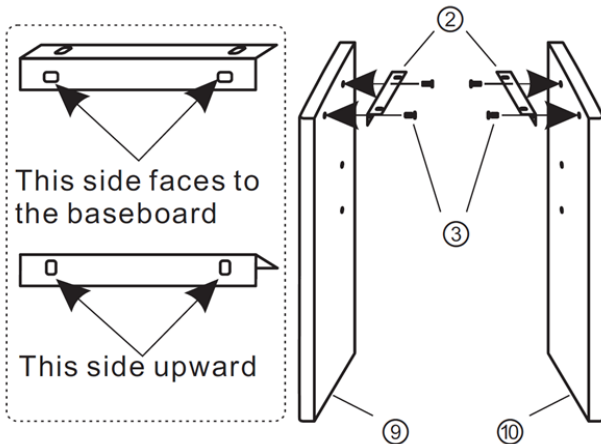


3. Insert 4x **Hammer Head Nuts (4)** into the holes on the non-front of the **Rung (8)**. Using a flat head screwdriver, adjust the direction of each **Hammer Head Nut (4)** so that the hole in the nut is aligned with the hole in the side of the **Rung (8)**.

 Insert 4x **M6 Long Screws (5)** through the holes in the **Left Baseboard (9)** and **Right Baseboard (10)**, into the holes in the sides of the **Rung (8)**, then screw them into the **Hammer Head Nuts (4)**.

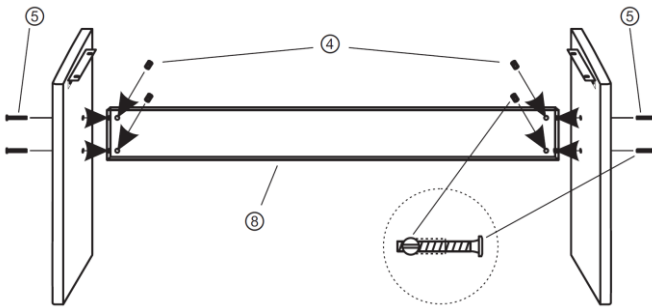

 4. Place the piano assembly onto the **Angle Iron Brackets**, then secure it in place using 4x **Plastic Head Screws (6)**.

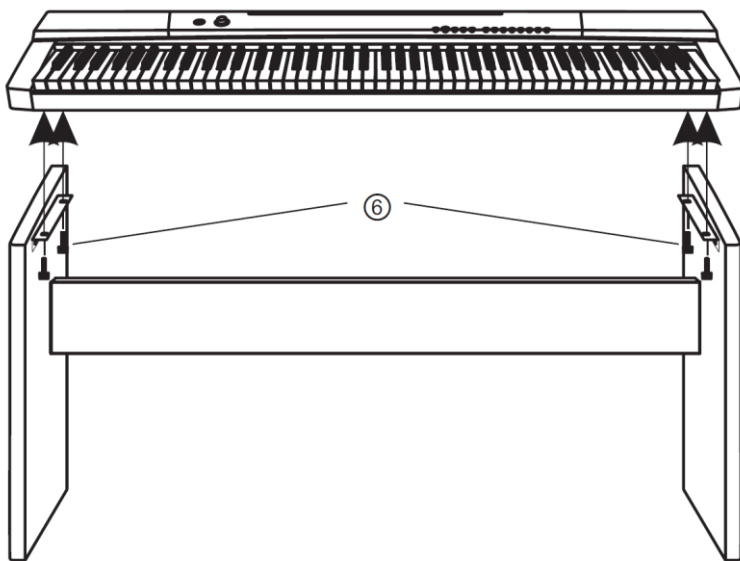

SPECIFICATIONS

P/N	600043, 600044
Keys	88 semi-weighted, 7/8th DS standard 140mm
Voices	Piano, electric piano, bass, guitar, organ, percussion
Timbres	140
Speakers	2x built-in
Metronome	Built-in
Pedal	Included
Stand	600043: available separately (602220) 600044: included
Connections	2x 1/4" headphones, 1x 1/4" pedal, 1x 1/4" line input, 1x 1/4" line output, 1x USB MIDI, 1x USB Disk
Controls	Volume, metronome, voices
Input Power	12 VDC
AC Adapter Input Power	100 ~ 240 VAC, 50/60 Hz
Dimensions	51.0" x 11.0" x 4.5"
Weight	14.7 lbs.

TECHNICAL SUPPORT

Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website www.monoprice.com or through email by sending a message to tech@monoprice.com. Check the website for support times and links.

To download the latest drivers, firmware, manuals, etc., go to www.monoprice.com and type the **P/N** into the search bar. If available, support files are linked at the bottom of the product page.

REGULATORY COMPLIANCE

Notice for FCC



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notice for Industry Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Monoprice™ and all Monoprice logos are trademarks of Monoprice Inc.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum. USB On-The-Go™ and OTG™ are trademarks of USB Implementers Forum.