


## Controls

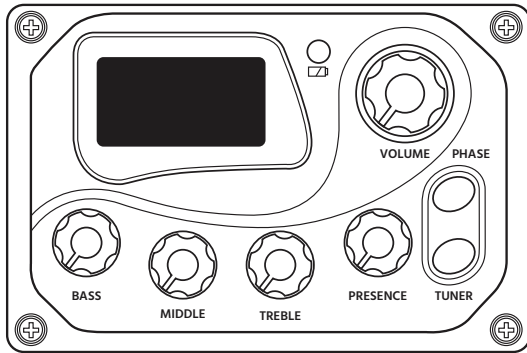

*Idyllwild*<sup>™</sup>  
Foothill

- Volume:** For the cleanest signal, set the volume knob as high as possible, without causing distortion or feedback.
- Bass:** Adjusts  $\pm 12\text{dB}$  @80Hz. Boost to add more depth and weight to the sound of the guitar.
- Middle:** Adjusts  $\pm 12\text{dB}$  @800Hz. Boost for more bite. Cut for a smooth, scooped sound.
- Treble:** Adjusts  $\pm 12\text{dB}$  @3kHz. Boost to cut through the mix. Cut to mellow and subdue the sound.
- Presence:** Adjusts  $\pm 12\text{dB}$  @10kHz. Boost to add sparkle to the sound. Cut to reduce finger noise.
- Phase:** Use the phase switch to improve bass response at low volume levels and suppress feedback at high volume levels.
- Tuner:** The tuner has a graphic LCD panel that indicates the note value with sharp and flat indicators. When the note is flat, the needle will be left of center. When the note is sharp, the needle will be right of center. When the note is exactly in tune, the needle will be centered and the LCD backlighting will change from blue to green.
- Battery LED:** When the battery LED illuminates, the battery should be replaced with a fresh 9V alkaline battery. In addition to the LED, a low battery level will cause the tuner to not be as accurate and the sound to be distorted. The battery is active whenever an instrument or XLR cable is plugged into the guitar. To conserve battery life, unplug the instrument cable whenever the guitar is not in use. A fresh 9V alkaline battery will last approximately 70 hours.

### Idyllwild Foothill Acoustic Electric Guitar with Pickup, Tuner, and Gig Bag

P/N 610060 | 610062 | 610063 | 610064

### Idyllwild Foothill Acoustic Guitar with Gig Bag

P/N 610010 | 610013

# Thank you for your order!

We are fully dedicated to **100% satisfaction** on our products and customer service

We would like to invite you to **Share Your Experience**.

- If you are happy with the product, please write a review online.
- If you have had any issues with the product or our service, please email us at **support@monoprice.com** or **tech@monoprice.com**

We will promptly work with you to resolve your issue, provide replacement product, or even facilitate a return.

For additional information about this product, please go to **www.monoprice.com** and enter **610060, 610062, 610063, 610064, 610010** or **610013** into the search field.

## Introduction

Your Idyllwild guitar has gone through a multipoint inspection and setup process. Our Master Luthier checks every guitar we sell to ensure that your guitar will look, feel, and sound as well as it can for years to come. To prevent damage during shipping, your guitar has been de-tuned to reduce the pressure from the guitar's string tension (over 160 lbs. when fully tuned).

All wooden products will have periods of expansion and contraction due to temperature and humidity. These atmospheric changes can greatly change the tone and playability of your guitar. Residents of areas with extreme weather swings may have to get their guitar setup by a professional luthier once or twice a year. We recommend the use of a guitar humidifier to alleviate some of those effects.

For models with pickups (610060, 610062, 610063, and 610064 only), please refer to the following operating instructions.

## Active Pickup Quick Start

1. **Set the Controls:** Turn the Volume knob fully counterclockwise, then set the four tone controls (Bass, Middle, Treble, and Presence) to the midpoint.
2. **Plug In:** Using a 1/4" instrument cable (not included) or a balanced XLR cable (not included), plug one end into your amplifier and the other end into the guitar. The guitar pickup automatically powers on whenever an instrument or XLR cable is plugged into the guitar.
3. **Tune Up:** Press the Tuner button to activate the tuner, then tune each string. Press the Tuner button again when tuning is complete.
4. **Turn Up:** Adjust the Volume and tone controls to your liking.