




Clip-On Guitar Tuner P/N 611211

- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.
- Remove the battery from the tuner if it will go unused for a long period of time.
- When installing the battery, take care to match the polarity markings in the battery compartment.

PRODUCT OVERVIEW

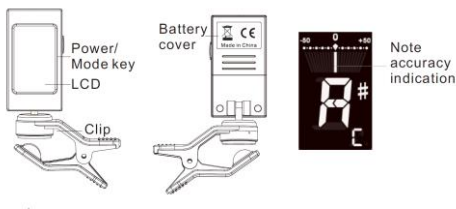

FEATURES

- Chromatic, Guitar, Bass, Violin, and Ukulele tuning modes
- B0 ~ B7 tuning range
- 440Hz A4 calibration
- 1% tolerance

PACKAGE CONTENTS

- 1x Tuner
- 1x CR2032 battery
- 1x User's manual

PREPARATION FOR USE

1. Remove the **Battery Cover** from the rear of the tuner.
2. Insert the included battery into the battery compartment, taking care to match the polarity with the markings inside the compartment.
3. Replace the **Battery Cover**.

BASIC OPERATION

- Press and hold the **Power/Mode** button for several seconds to turn the tuner on or off. The Note Accuracy Indicator will sit on the left side of the display, waiting for a note to be played.
- With the tuner powered on, momentarily press the **Power/Mode** button to cycle through the **Chromatic, Guitar, Bass, Violin, and Ukulele** tuning modes.
- The tuner will automatically power off if no signal is detected for 3 minutes.
- When in any tuning mode other than Chromatic, the tuner will attempt to identify the note being played.
- If the note listed on the display matches the note being played, increase or decrease pitch until the **Note Accuracy Indicator** is in the middle position.
- If the note listed on the display is not the same as the one being played, increase or decrease pitch until the proper note is displayed, then make minor changes until the **Note Accuracy Indicator** is in the middle position.
- In Chromatic tuning mode, the tuner will display the exact note being played, as detected. The displayed note will be either **C, C#, D, D#, E, F, F#, G, G#, A, A#,** or **B**. Adjust the pitch up or down until the displayed note is the same as the one being played, then make minor adjustments until the **Note Accuracy Indicator** is in the middle position.
- If the tuner will not respond to the **Power/Mode** button, remove the battery, wait 30 seconds, then reinstall the battery.

REGULATORY COMPLIANCE



Notice for FCC

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notice for Industry Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.