



Rechargeable Chromatic Clip-on Guitar Tuner



User's Manual

SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- This device contains a rechargeable Lithium battery. Dispose of this device only in accordance with local, state, or Federal regulations for electronic waste.
- Charge the battery before first use and at least once every three months.
- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.
- This device has no user serviceable parts. Do not attempt to open, service, or modify this device.

ONLINE SUPPORT

Monoprice is pleased to provide free online support. For order related issues, contact the Customer Service department through the Live Chat link on our website

www.monoprice.com during normal business hours (Mon-Fri: 5am-7pm PT, Sat-Sun: 9am-6pm PT) or via email at **support@monoprice.com**

For technical issues, contact the Technical Support department through the online chat button on our website **www.monoprice.com** during regular business hours, 7 days a week. You can also get assistance through email by sending a message to **tech@monoprice.com**

PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

1x Chromatic tuner

1x Micro USB charging cable

CHARGING



OPERATION

Power




- Press and hold the **MODE** button for 2 seconds to turn the tuner on or off.

Setup



- Press the **PITCH** button to step through the pitch settings. Pitch can be adjusted from 430Hz ~ 450Hz in 1Hz increments.
- The standard pitch is 440Hz and is the default.
- Press the **MODE** button to cycle through the five instrument modes (C=Chromatic, G=Guitar, B=Bass, U=Ukelele, V=Violin).

Preparation for Use

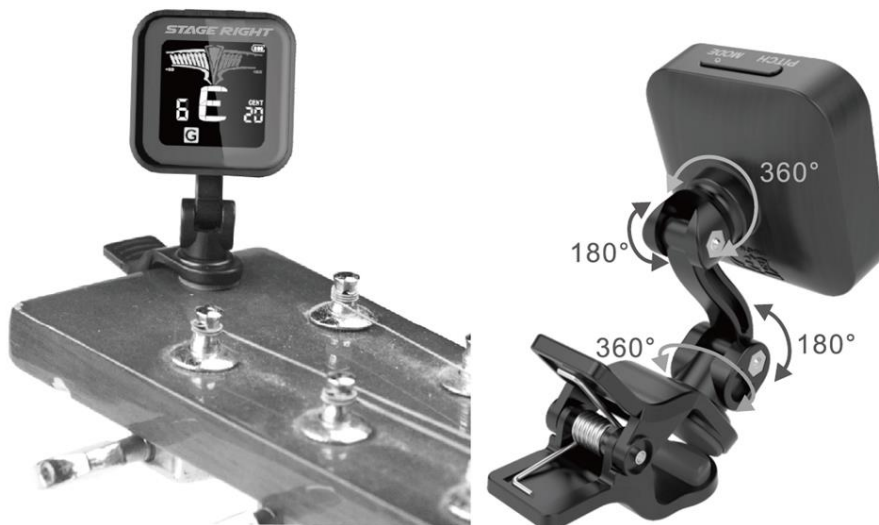

- Clip the tuner onto your instrument.

Tuning



Flat



In Tune



Sharp

- The tuner will recognize notes specific to the selected instrument modes.
- When using an instrument mode other than **Chromatic**, the tuner will show the detected string position and its associated note for normal tuning.
- When using the tuner in **Chromatic** mode, the tuner will recognize the following notes: C, C#, D, D#, E, F, F#, G, G#, A, A#, and B.
- When using the tuner in **Guitar** mode (6-string or 7-string), the tuner will recognize the following notes: 7B, 6E, 5A, 4D, 3G, 2B, and 1E.
- When using the tuner in **Bass** mode (4-string, 5-string, or 6-string), the tuner will recognize the following notes: LB, 4E, 3A, 2D, 1G, and HC.
- When using the tuner in **Ukelele** mode, the tuner will recognize the following notes: 4G, 3C, 2E, and 1A.
- When using the tuner in **Violin** mode, the tuner will recognize the following notes: 4G, 3D, 2A, and 1E.

SPECIFICATIONS

Operating Time: 1.5 hours

Dimensions: 3.2" x 1.4" x 1.2" (82 x 36 x 31 mm)

Weight: 2.0 oz. (58g)

REGULATORY COMPLIANCE

Notice for FCC



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notice for Industry Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.