



Stage Right Stage Wash 18x18W LED
PAR Stage Light with Zoom (RGBWA-UV)

P/N 612712

User's Manual

SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- This device is intended for indoor use only.
- Do not expose this device to water or moisture of any kind. Do not place drinks or other containers with moisture on or near the device. If moisture does get in or on the device, immediately unplug it from the power outlet and allow it to fully dry before reapplying power.
- Do not touch the device, the power cord, or any other connected cables with wet hands.
- Do not install this device on an unstable surface where it could fall and cause either personal injury or damage to the device and/or other equipment.
- When installing this device, ensure that the mount is sufficiently robust to support the weight of the unit and to prevent unwanted movement.
- Do not expose this device to excessive vibration.
- Do not expose this device to excessively high temperatures. Do not place it in, on, or near heat sources, such as a fireplace, stove, radiator, etc. Do not leave it in direct sunlight.
- This device ventilates excessive heat through the slots and openings in the case. Do not block or cover these openings. Ensure that the device is in an open area where it can get sufficient airflow to keep from overheating.
- Do not place or install this device in an area where it can be exposed to excessive amounts of dust, humidity, oil, smoke, or combustible vapors.
- Use only in a well-ventilated area. Do not use in close, confined spaces.
- Prior to operation, check the unit and power cord for physical damage. Do not use if physical damage has occurred.
- When installing this device, ensure that there are no flammable or combustible materials within about 2 feet on all sides. Ensure that there is at least 2 feet of clearance between the unit and the surface or object(s) being illuminated.

- Before plugging the unit into a power outlet, ensure that the outlet provides the same type and level of power required by the device.
- This device uses a grounded power cord and requires a ground connection for safe operation. Ensure that the power source has a proper ground connection. Do not modify the plug or use a "cheater" plug to bypass the ground connection.
- Disconnect the unit from the power source when replacing the fuse. Replace the fuse only with the same type.
- Unplug this device from the power source when not in use.
- Take care to prevent damage to the power cord. Do not allow it to become crimped, pinched, walked on, or become tangled with other cords. Ensure that the power cord does not present a tripping hazard.
- Never unplug the unit by pulling on the power cord. Always grasp the connector head or adapter body.
- Ensure that power is turned off and disconnected before making any electrical connections.
- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.
- This device has no user serviceable parts. Do not attempt to open, service, or modify this device.
- Avoid direct eye exposure to the light from this device.
- Do not connect this light to a dimmer pack.
- Do not look directly into the light source.
- This device should only be operated by qualified adults.
- In the event of serious operating problem, stop using the unit immediately.
- Keep away from corrosive materials.

INTRODUCTION

Thank you for purchasing this Stage Wash PAR Light! This light features eighteen 18-watt RGBWA-UV LEDs, 7- and 11-channel DMX control, built-in automatic and sound activated programs, and the ability to operate as a Master or Slave light when connected with other lights. The light can be operated using a DMX controller or stand-alone using the built-in programs. The light can be zoomed, with variable beam angles from 8 ~ 60°.

FEATURES

- Eighteen 18-watt RGBWA-UV LEDs
- 7-channel or 11-channel DMX control options
- Variable beam angle/zoom from 8 ~ 60°
- 100 ~ 240 VAC, 50/60 Hz input power
- Master or Slave mode options

CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website www.monoprice.com during normal business hours (Mon-Fri: 5am-7pm PT, Sat-Sun: 9am-6pm PT) or via email at support@monoprice.com

PACKAGE CONTENTS


Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

1x Stage Wash PAR Light

1x User's Manual

CONTROLS

1. **MENU:** Press the **MENU** button to cycle through the functions in the menu system. If editing a value, pressing the **MENU** button will cancel any changes made and will cycle to the next function in the list.
2. **UP:** Press the **UP** button to increase the displayed value.
3. **DOWN:** Press the **DOWN** button to decrease the displayed value.
4. **ENTER:** Press the **ENTER** button to save the displayed value.

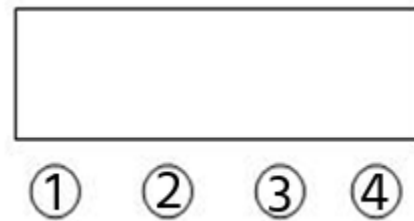

MASTER/SLAVE MODE

Multiple lights can be daisy-chained together using DMX cables. The first fixture should be set to the desired operating mode, with all other fixtures set to **A001**. For example, set the first fixture to **CC99** to use the color jumping mode at the fastest rate, then set all other fixtures to **A001**. All fixtures will then perform color jumping in unison.

MENU SYSTEM

Function	Values	Description
A###	001-512	11-channel DMX mode and address selection
d###	001-512	7-channel DMX mode and address selection
CC##	00-99	Color jumping mode (slow to fast)
CP##	00-99	Color gradient mode (slow to fast)
dE##	00-99	Color pulse variable mode (slow to fast)
bEb1	N/A	Sound activated mode with auto sensitivity
r###	000-255	Red dimmer (dark to bright)
G###	000-255	Green dimmer (dark to bright)
b###	000-255	Blue dimmer (dark to bright)
o###	000-255	White dimmer (dark to bright)
y###	000-255	Amber dimmer (dark to bright)
P###	000-255	Ultra-violet dimmer (dark to bright)
t###	000-255	Zoom (8° to 60°)

DMX MODE

11-Channel

Channel	Values	Function
1	0-255	Master dimmer (dark to bright)
2	0-255	Strobe (slow to fast)
3	0-40	No function
	41-60	Color jumping mode
	61-80	Color gradient mode
	81-100	Color pulse variable mode
	101-120	Sound control mode 1
	121-140	Sound control mode 2
	141-160	Color jumping mode (built-in program)
	161-180	Color gradient mode (built-in program)
	181-200	Color pulse variable mode (built-in program)
	201-220	Sound control mode 1 (built-in program)
221-255	Sound control mode 2 (built-in program)	
4	0-255	Program speed (slow to fast) or sound sensitivity (less to more)
5	0-255	Red dimmer (dark to bright)
6	0-255	Green dimmer (dark to bright)
7	0-255	Blue dimmer (dark to bright)
8	0-255	White dimmer (dark to bright)
9	0-255	Yellow dimmer (dark to bright)
10	0-255	Purple dimmer (dark to bright)
11	0-255	Zoom (8° to 60°)

7-Channel

Channel	Value Range	Function
1	0-255	Red dimmer (dark to bright)
2	0-255	Green dimmer (dark to bright)
3	0-255	Blue dimmer (dark to bright)
4	0-255	White dimmer (dark to bright)
5	0-255	Yellow dimmer (dark to bright)
6	0-255	Purple dimmer (dark to bright)
7	0-255	Zoom adjust (8° to 60°)

TECHNICAL SUPPORT

Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website www.monoprice.com during regular business hours, 7 days a week. You can also get assistance through email by sending a message to tech@monoprice.com

SPECIFICATIONS

Model	612712
Light Source	18x 18-watt RGBWA-UV LEDs
Beam Angle	8° ~ 60°
Control Modes	DMX, Auto Programs, Sound Activated, Master/Slave
DMX Channels	7 or 11
Input Power	100 ~ 240 VAC, 50/60 Hz
Power Consumption	300 watts
Dimensions	12.1" x 12.1" x 13.8" (308 x 308 x 350 mm)
Weight	7.7 lbs. (3.5 kg)