



**200-Watt 2-in-1 Warm & Cool White LED COB
Ellipsoidal Stage Light with Zoom**



P/N 625854

User's Manual

SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- This device is intended for indoor use only.
- Do not expose this device to water or moisture of any kind. Do not place drinks or other containers with moisture on or near the device. If moisture does get in or on the device, immediately unplug it from the power outlet and allow it to fully dry before reapplying power.
- Do not touch the device, the power cord, or any other connected cables with wet hands.
- When installing this device, ensure that the mount is sufficiently robust to support the weight of the unit and to prevent unwanted movement.
- Do not expose this device to excessive vibration.
- Do not expose this device to excessively high temperatures. Do not place it in, on, or near a heat source, such as a fireplace, stove, radiator, etc. Do not leave it in direct sunlight.
- This device ventilates excessive heat through the slots and openings in the case. Do not block or cover these openings. Ensure that the device is in an open area where it can get sufficient airflow to keep from overheating.
- Do not place or install this device in an area where it can be exposed to excessive amounts of dust, humidity, oil, smoke, or combustible vapors.

- Use only in a well-ventilated area. Do not use in close, confined spaces.
- Ensure that there are no flammable materials within about 3 feet of this device. Ensure that there is at least 20 inches of ventilation space around this unit.
- Prior to operation, check the unit and power cord for physical damage. Do not use if physical damage has occurred.
- Before plugging the unit into a power outlet, ensure that the outlet provides the same type and level of power required by the device.
- This device uses a grounded power cord and requires a ground connection for safe operation. Ensure that the power source has a proper ground connection. Do not modify the plug or use a "cheater" plug to bypass the ground connection.
- Unplug this device from the power source when not in use.
- Take care to prevent damage to the power cord. Do not allow it to become crimped, pinched, walked on, or become tangled with other cords. Ensure that the power cord does not present a tripping hazard.
- Never unplug the unit by pulling on the power cord. Always grasp the connector head or adapter body.
- Ensure that power is turned off and disconnected before making any electrical connections.
- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.

- This device has no user serviceable parts. Do not attempt to open, service, or modify this device.
- Avoid direct eye exposure to the light from this device.
- Do not connect this light to a dimmer pack.
- Do not look directly into the light source.
- This device should only be operated by qualified adults.

CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website **www.monoprice.com** or via email at **support@monoprice.com**. Check the website for support times and links.

PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.


1x 200-Watt 2-in-1 Warm & Cool White LED COB Stage Light

1x 3-pin DMX Signal Cable

1x AC Power Cable (NEMA 5-15 to NL4)


1x User's Manual

CONTROLS

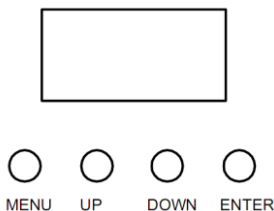

- **MENU:** Press the **MENU** button to cycle through the functions in the menu system. If editing a value, pressing the **MENU** button cancels any change made and cycles forward to the next function in the list.
- **UP:** Momentarily press the **UP** button to increase the displayed value. Press and hold the **UP** button to rapidly increase the displayed value,
- **DOWN:** Momentarily press the **DOWN** button to decrease the displayed value. Press and hold the **DOWN** button to rapidly decrease the displayed value.
- **ENTER:** Press the **ENTER** button to save the displayed value. The display will show **Set successf.**

DIMENSIONS DIAGRAM

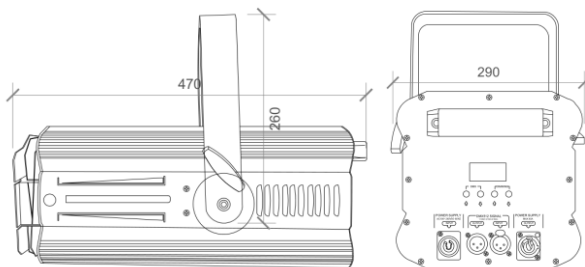

MENU FUNCTIONS

#	Function	Range	Description
1	DMX--6	001-512	6-channel DMX512 starting address
2	DMX--2	001-512	2-channel DMX512 starting address
3	Jump	000-099	Color jumping mode speed, slow to fast
4	Gchange	000-099	Color pulse variable mode speed, slow to fast
5	Pulse	000-099	Color pulse variable mode speed, slow to fast
6	Color W	000-255	Warm white color changing, dark to bright
7	Color Y	000-255	Cool white color changing, dark to bright

DMX512 MODES

2-Channel

CH	Function	Value Range
1	Warm white dimming, dark to bright	000-255
2	Cool white dimming, dark to bright	000-255

6-Channel

CH	Function	Value Range
1	Master dimmer	000-255
2	Strobe, slow to fast	000-255
3	No function	000-050
	Color jumping mode	051-100
	Color gradient mode	101-180
	Color pulse variable mode	181-255
4	Function speed, slow to fast	000-255
5	Warm white dimmer, dark to bright	000-255
6	Cool white dimmer, dark to bright	000-255

MASTER/SLAVE MODE

This light supports the Master/Slave mode, in which all lights in a chain duplicate the actions of the first light in the chain. To use Master/Slave mode, first connect multiple lights in a daisy chain using DMX512 signal cables. You then set the first light to either 2-channel or 6-channel DMX mode and issue commands using a DMX512 controller. All lights downstream of the first light are automatically set for Slave mode and will duplicate the functions of the first light in the chain.

This fixture features an AC power output connection, so you can daisy chain the power as well as the DMX signal, thereby reducing the need for additional power outlets.

TECHNICAL SUPPORT

Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website www.monoprice.com or through email by sending a message to tech@monoprice.com. Check the website for support times and links.

SPECIFICATIONS

Model	625854
Light Source	1x 200-watt white COB LEDs
Beam Angle	17-50°
Lamp Life	50,000 hours
Control Modes	DMX512, master-slave, auto
DMX Channels	2 or 6
Input Power	100 ~ 240 VAC, 50/60 Hz
Maximum Power Consumption	200 watts
Body Dimensions	18.5" x 13.4" x 11.4" (470 x 340 x 290 mm)
Weight	16.5 lbs. (7.5 kg)

REGULATORY COMPLIANCE

Notice for FCC



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notice for Industry Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Stage Right™ and the Stage Right logo are trademarks of Monoprice Inc.