Tablet Software

User Manual



Version: V 9.9

Release Date: 2009/9

INDEX

1٠	Intro	duction to Graphics Tablets	3
	1.1	Possible Applications	3
	1.2	System Requirements	3
	1.3	Introduction to Tablet Software	4
	1.4	Supporting Operation Systems	5
	1.5	Install Tablet Software	6
	1.6	Uninstall Tablet Software	8
2、	Table	et Software Operation Guide	9
2	2.1	Word Annotation Program	9
	2.1	1.1 "Access" Word Annotation Program	9
	2.1	1.2 Introduction to Annotation for Word	10
	2.1	1.3 Introduction to Pen and Fluorescent Marker Tool Bars	11
	2.1	1.4 Highlight	14
Ź	2.2	PenNotice	16
	2.2	2.1 "Access" PenNotice Program	16
	2.2	2.2 Introduction to PenNotice Toolbars	16
Ź	2.3	PenCommander	26
	2.3	3.1 "Access" PenCommander	26
	2.3	3.2 "Pause" PenCommander	26
	2.3	3.3 Application of PenCommander	26
	2.3	3.4 Tool Setup for PenCommander	28
	2.3	3.5 Symbol Definition for PenCommander	29
	2.3	3.6 How to use instructions of PenCommander	30
	2.3	3.7 Reset Functions of PenCommander	34
	2.3	3.8 Limitations of PenCommander	38
	2.3	3.9 Startup PenCommander with Windows System	39
	2.3	3.10Uninstall PenCommander	39
Ź	2.4	PenMail	40

2.4.1 "Access" PenMail	40		
2.4.2 Introduction to PenMail Toolbars	41		
2.4.3 Setup writing format	47		
2.4.4 Start to write	47		
2.4.5 Main Delivery	48		
2.5 PenSigner	49		
2.5.1 "Access "PenSigner	49		
2.5.2 Introduction to PenSigner ToolBars	50		
2.5.3 Introduction to Pen and Brush Pen Toolbars	51		
S · Frequently Asked Questions and Troubleshooting			
Take Care of Your Tablet	55		

1 · Introduction to Graphics Tablets

Tablet Software is able to write and draw, except this, user also can run many software, such as, Microsoft Office, Desktop or Internet Explorer. These programs support the functions of handwriting, drawing, notes taking, signature and Email.

1.1 Possible Applications

Software Support (Digital pressure output for WINTAB \cdot TABLET PC) $_{\circ}$ Tablet can be deployed in a wide area, for instance, minutes taking, business presentation, lectures......etc.

Hardware Support (MSN and SKYPE video meeting)

1.2 System Requirements

PC Windows XP/Vista; USB port; DVD-ROM drive

1.3 Introduction to Tablet Software



Word Annotation Annotate for Word


Allow you to handwrite and annotate on Microsoft Word documents and save the files.





PenNotice

You can catch up the pictures on the screen, and then put the annotations or insert the texts and pictures when doing the presentation, sending email or saving those pictures.

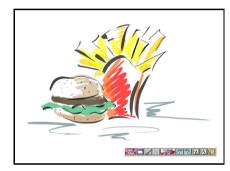



PenCommander


Allow you to write down the command symbols directly on the digital pen tablet to manipulate the computer to execute commands or open files.





PenMail

It can be used to send your mails with your own signature to your families or friends over the Internet.

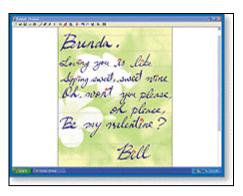



PenSigner

Insert signatures or hand drawn graphics into the document.



1.4 Supporting Operation Systems

Operating System	Windows XP	Windows XP 64	Windows Vista
PenNotice	v	v	v
PenMail	V	v	v
Annotate for Word	v	v	×
PenCommander	v	v	×
PenSigner	v	v	v

Word Annotatction: Suggestion! Windows Vista users are able to use the Annotation function from the MS OFFICE 2003 or 2007.

PenCommander: Suggestion! Windows Vista users are able to use the handwriting and input function that built-in under the Windows Vista system.

Install Tablet Software



To use the Tablet software, you need to install the Driver first and then install the PenSuite.(For more instructions about the installation of driver, refer to the Driver Installation Manual attached)

Open your computer and start the Windows • Step 1

Step 2 **Install Driver**

Place the CD disc into the driver and installation process will be automatically activated (See figure on the riaht).

Select "Driver Setup" and press Enter to start the driver installation.

Step 3 to install.

After the installation location is confirmed, press Confirm

After driver install completed, Step 4 pressing "confirm" to re-start your computer.



Install Tablet Software Step 5

> Select "Tablet Software Setup", and press the "Enter" key to start the Tablet Software installation.



Step 6 At the moment, the message box come out with the software selection. then select the software you want to install and confirm the install locations. After this.

the program starts to install.



Setup has installed the software successfully and added the

application(s) to the Program Manager.

the installation is Step 7 After completed, press Confirm key and complete software installation.



When installation is on Windows Vista, after finished the step 7, please wait until the message box come out and select this program installed correctly. After finished reading data from CD/DVD Rom, get the CD out and finish the installation.



OK

1.6 Uninstall Tablet Software

In order to uninstall the Tablet Software, start at the lower left corner of the screen 「Start」 ▶ 「All programs」 ▶ 「Tablet Software」 ▶ Uninstall



2 · Tablet Software Operation Guide

2.1 Word Annotation Program


Annotate for Word allows you to leave your handwritten annotations or hand drawn graphics at any place in a Microsoft Word file, while either your annotations or hand drawn graphics will become part of this file.




Support Microsoft Office Word 2003 or 2007

2.1.1 "Access" Word Annotation Program

At the lower left corner of the screen and access the 「Start」▶「All Programs」

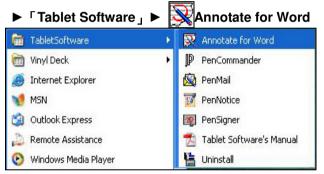

Activate the Microsoft Office Word application, and Annotate for Word will be automatically added into the Word tool bar (thus becoming an external program of Word)

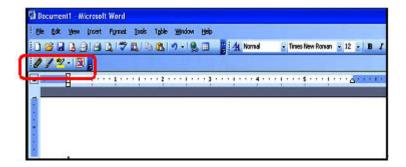

When using the Word 2003 application, you will be unable to use the external macro application at the time of activating the Annotate for Word because in Word 2003, the Macro Security is preset to High (Annotate for Word is an external Macro application). Therefore, please adjust the Macro Security from high to middle in Word as follows:

Setup Method:

- 1.Open Word→Tool→Macro→Security. (Set Security to Middle, and then reopen the Word)
- 2. When security is changed to Middle, there will be a dialog box asking whether to use the Macro at the time of opening the Word. As shown in the figure below, please press the Enable Macro button and you can use the Annotate for Word immediately.



Word 2007 Setup Method:

1.Open Word 2007→Add-Ins→Security Warning Macros have been disabled Options...→Enable this content→OK

2.1.2 Introduction to Annotation for Word





Pen

No pen pressure available. Used to annotate, sign and draw on a Word document.

You can make annotations or draw graphics at any part of the screen and can select the color or thickness of penpoint to highlight the handwriting recognition.



Fluorescent Marker



Highlight

About

No pen pressure available. Used to stress on or remind of the key points of an article, which are displayed in a translucent color.

Can be used to mark up the key text or character strings, and can be most suitable for the purpose of online viewing.



System information, version information and copyright statement for Annotate for Word.

2.1.3 Introduction to Pen and Fluorescent Marker Tool Bars

When you open a Word document, you can choose to press either of Pen or Fluorescent Marker buttons to start handwriting annotations.

- 1. **Select Pen:** The handwritings drawn will be same as those drawn by a pen or a ball point pen, where the thickness of each stroke will remain unchanged from start to end. You can also select the color or thickness of penpoint before starting to write.
- 2 **Select Fluorescent Marker:** The handwritings drawn are displayed in a transluscent color and similar to those drawn by a fluorescent marker. Fluorescent marker can be used to stress or the key areas of a document or highlight.





penpoint

Adjust the thickness of Move the lever from right to left in the " Adjust Thickness" slide board, thereby adjusting the thickness of penpoint. From next stroke, new thickness will be adopted for the handwriting. (Support the Microsoft Word2003)



penpoint

Current thickness of Thickness of penpoint currently displayed as a pixel, namely the minimum unit for image point on the screen.



Select the penpoint

color of You can select the color of penpoint according to any color chip available in the color field. From now on, the handwriting drawn will be changed into the selected color, until the color is replaced again next time. In a non-drawing mode, choice of color will be ignored.



Current color penpoint

of The left color chip below the color filed will display the current color of penpoint.



Restore

Cancel the last stroke. Press once to delete one stroke, until all handwritings are deleted.



Delete

Delete all handwritings.



Complete

When you complete annotations, press Complete to send out your handwritings. which can form a graphics object pasted in a Word document for editing.

Sending time can vary with different computer speeds and ram sizes.

Now, the drawing mode is already terminated. If you still want to make annotations or draw graphics, press Pen or Fluorescent Marker buttons again to re-annotate after the transmission of graphics is completed.

·@: If the file edition is not considered as a word document, paste of the graphics object will not be accepted and the graphics will be neither inserted into the file. At this time, the graphics will be temporarily saved on the clipboard, and you can use Paste to insert them into other files.




Close

Close annotation or drawing mode immediately and delete all handwritings that are not sent out.



If Annotate for Word cannot be automatically added into the Word tool bar, please solve the problem by the following procedures:

- After the Word is opened, check if the Annotate in the Tool Bar under the View is activated. If not activated, please click on Annotate to activate it.
- If there is no option of Annotate in the Tool Bar under the View, please use the Pen System CD to reinstall the Annotate for Word (Only reinstall the Annotate for Word).
- If you still cannot add the Annotate for Word into the Word tool bar, click on the "Options" under the "Tool" in the drop-down menu, and check the location of activation in the File Location (See figure below). Then, PenSuite\Annotate\cht\annotate.dot in the CD into that location. If that position is empty, designate the location to C:\Program Files\Microsoft Office\Office\Startup.

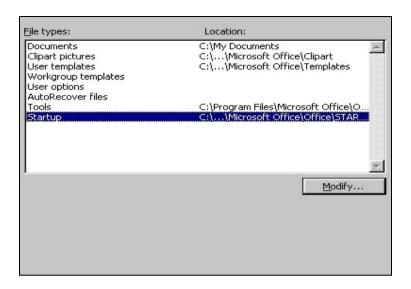

2.1.4 Highlight

Apply Highlight

 
Press down , and select the "text or graphics" to be highlighted.


Close Highlight

Press the button again, or press the [ESC] button.

Change Highlight Color


Press the arrow to the right of and then press the color to be used.



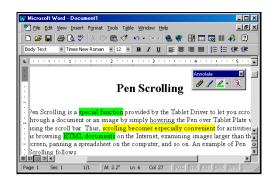

Remove All or A Part of Highlights in the File

 - 1. Select the highlighted text to be removed, or press CTRL+A to select all text in the file.
- 2. Press the arrow to the right of and then press None.



2.2 PenNotice


Under the 「**PenNotice**」 software, you can catch up the pictures on the screen, and then put the annotations or insert the texts and pictures when doing the presentation, sending email or saving those pictures.

2.2.1 "Access" PenNotice Program

In order to access the PenNotice, start on the lower left corner of the screen


「StartUp」▶「All programs」▶「TabletSoftware」▶

PenNotice

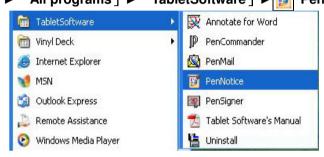

2.2.2 Introduction to PenNotice Toolbars

 2.2.2.1 Model Functions



Mouse Model Set the functional keys as mouse states.

White Board Model Functions same as traditional white board for

writing or drawing on windows.

Annotation Model Catch up pictures and annotate text on the desktop of screen.

2.2.2.2 Mouse Model



Mouse Set key f

Set key functions as mouse one.

Ž.

Page Up Same as Keyboard's PAGE Up function




Page Down Same as Keyboard's Page Down function

Examples





2.2.2.3 White board Model

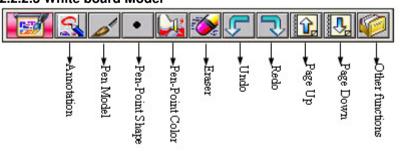



White Board Electronic White Board



Pen Model Change Pen's pattern. Left to right. (Brush, Pen, Fluorescent Marker

Brush Pen With pen pressure function and similar to a

Chinese brush pen, as there can be variations in the thickness of handwritings if pressure is too

low on one stroke.

Pen

No pen pressure available. Its touch is just like a

pencil.

 
Marker

Fluorescent It can be used to stress on or remind of the key points of an article, which are displayed in a

translucent color.

After selecting the Brush or Fluorescent Marker, you can annotate or draw anything on the screen. Before writing, you can set the color of pen point or adjust the thickness or shape of pen point, produce different creative drawing method.

Pen point and Shape- Adjust the thickness and shape of pen point. Styles of handwriting can be displayed in round shape, square shape and various marker pen shapes, and in 6 sizes, which can be combined to produce different creative drawing methods.




Select color of pen point - Able to select different colors of different pens. Select and change colors.



Select more different colors

Choose color and press the confirm key

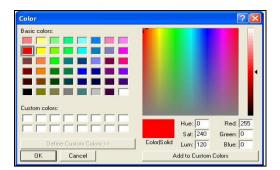

Eraser

Select the part you wish to delete and delete text stroke by stroke.



Undo

Return to previous action



Redo

Return to the action before last restoration.



Page Up

1. Same function as keyboard's Page Up

2. Back to last page.


Page Down

1. Same function as keyboard's Page down

2. Able to open new page or move to next one.



The selections for other functions as following:

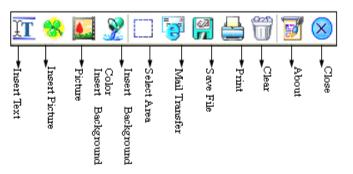




Insert Text

Able to insert any text in any applications, the function shows below:

1. After selecting the Insert Text button . click and select the location where you wish to insert text and drag an "Input Box" by yourself.

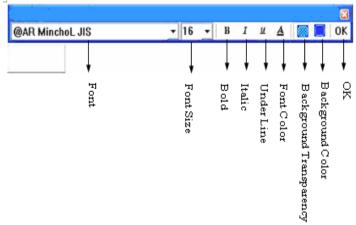

- 2. An Input Box will appear at the location where text is inserted, and an "Insert Text" tool bar will appear on top of this box.
- 3. Start to insert text. (If you want to leave the Insert Text application. press the "ESC" key to leave).
- 4. After confirming the inserted text, please click the (Close) button and stop inserting the text.
- 5. Now, text in the input box will form a text box at the location where the text is inserted.
- 6. Press the (Save) button and now a dialog box asking whether to save will pop up. When confirming the route and press the Save button, the inserted text will be saved at the location of insertion to become either a JPG or a Bitmap image file.

Various functions of Insert Text are based on the principle of consistency for the whole Input Box, while no separate adjustment is made for a single Line or a single Word. The size of Input Box will be flexibly adjusted in line with the text inserted. Below are the explanations for various functions:

- Westwood LET (Western) Font: You can change the fonts of inserted text.
- Font Size: You can change the font size of inserted text.
- **Bold:** you can change the inputted text into the bold fonts. 3. l
- Italic: you can change the inputted text into the bold fonts.
- **Underline**: You can underline the inputted text.
- Font color: You can change the color of inputted text.
- Background Transparency: You can change the background of inputted text into a transparent color.
- Background color: You can change the background color of inputted text.
- 9. **OK Input:** Insert the inputted text.

Insert picture Able to insert picture on the page.



Insert

Background Image Insert

Background Color Select more

colors

You can select and insert an image into the page as your background.

Select a color as background

Select more colors and insert the background color after confirming the selection.





Select Area: Select any part of picture for saving

After selecting any part of picture, you can press



or Email



If you feel dissatisfied with the selected field and want to re-select another field, you do not need to click on the function button or close the application, but can directly drag the newly selected field.



Delete All

Delete the added text and image drawn.

 


Save Files

If you would like to save all the handwriting into a file, then please select \ulcorner all the pages $_{\rfloor}$ or single one and press the confirm button.



All the files are able to save as JPG or BMP file.






Clear

Clear all the pages

After drawing on the desktop, select the and other functions, then the clear button will be come out.

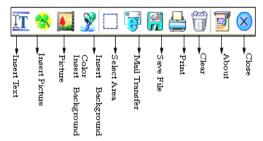



Print Print the current document



Display the \ulcorner PenNotice $_{\rfloor}$ system, version information

and copy right statement.


Example

About



Open the PenNotice software on windows, you can start the functions of whiteboard for writing or drawing.... etc.

2.2.2.4 Annotate Model

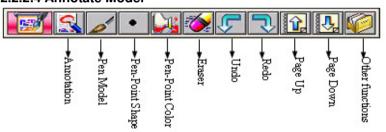



Annotation

Select and annotate the screen windows for any signs or words, then save the picture as a file.

23

Activate the Annotate from PenNotice and the cursor will change into the icon at the right side. Also, there will a yellow square frame line covering the whole screen to remind you that you are using Annotation; This frame line will disappear after you close the application and will not be left in your file. As long as the Annotate tool bar appears on the screen, you can start to annotate right away.



Pen Model

Same as section 2.2.2.3



Adjust the Same as section 2.2.2.3. thickness and shape of pen point



Select the

Same as section 2.2.2.3.

color of

Pen point

You can select the colors of brush pen and pen inks.



Eraser

Same as section 2.2.2.3.



Undo

Same as section 2.2.2.3.



Redo Same as section 2.2.2.3.



Page Up

 
Same as section 2.2.2.3



Page Up Same as section 2.2.2.3



The selections for other functions as following:





Insert Text

Same as section 2.2.2.3



Insert Picture Same as section 2.2.2.3



Select Area:

Same as section 2.2.2.3

Select any part of picture for saving or sending out.



Mail Transfer

Send an Email to Outlook that included the picture shows in the computer screen.

The function not supported yet by Vista windows Email.

 


Save Files Same as section 2.2.2.3



Clean Clear all the data pages.

> After drawing on the desktop, select the and other functions, then the clear button will be come out.





Print

Same as section 2.2.2.3



About

Same as section 2.2.2.3



Esc | Same as section 2.2.2.3 Close

Examples






Open the MS Office on windows, you can start the functions of PenNotice for writing, annotating or drawing.

2.3 PenCommander

PenCommander allows you to rely on handwritten symbols on the pen tablet to open any program or document, Internet, and virtual buttons or play wav files, insert text, and use menu functions or system commands.

2.3.1 "Access" PenCommander

In order to press the button at the lower left corner of screen, 「Start」 ▶ 「All programs」 ▶ 「Tablet Software」 ▶ PenCommander

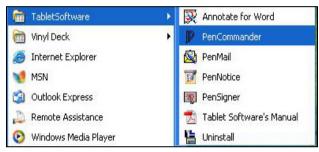

After acesssing the PenCommander, the small icon for PenCommander will be appeared on the tool bar at the lower right corner of the screen. When you write or draw anything on the digital tablet, the cursor will be change into the icon

2.3.2 "Pause" PenCommander

Select the small icon on the tool bar at the lower right corner of the screen. Now, this icon will be changed into , which means pausing the PenCommander. Click again, and the small icon will be changed back into , and you can start to use PenCommander.


2.3.3 Application of PenCommander

Open the Microsoft Word by PenCommander.

From the upper-left corner, write a W, while the handwritten symbol shall be correctly recognizabled. The small icon at the lower right corner will change into

a blue color , make a tick sound and open the Microsoft Word.



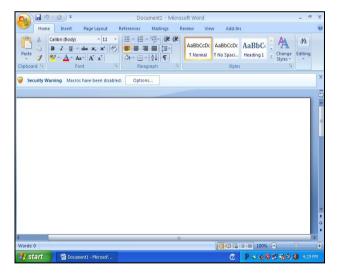

2.3.4 Tool Setup for PenCommander



Setup

You can set up the ink button, ink width and ink color for pen commanded calligraphy.

Move the cursor to the small icon for PenCommander on the tool bar at the lower right corner of the screen. Press the UP button on the digital pen (equivalent to the Right Mouse Key), and select the option of Reset Function. Then, move the

cursor to the Setup Button, and this button will change into Press the Setup Button, and there will be a setup of the following screen:



- (1) **Ink Button:** You can only write symbols by pressing down the ink button. You can rely on your personal habits to set up the ink button as penpoint(left mouse key), or as second pen button(right mouse key).
- (2) Ink Width: You can set up the ink width with its unit as pixel. The larger the number, the thicker the pen written stroke.
- (3) **Ink Color:** You can set up the color of pen-commanded



- (4) Activate PenCommander When Windows System Is Started: When this option is selected, the PenCommander will be activated when Windows system is started.
- (5) **About Button:** Press About Button and system information, version information and copyright statement for PenCommander will be displayed.
- (6) **Default Value:** When Default Value Button is pressed, PenCommander will be reset to the initial setup value when the driver was just installed.



Move the cursor to Close and this button will change into Press the Close button and you can close the defining screens for all symbols.

X Uninstall

2.3.5 Symbol Definition for PenCommander


Customize

At the time of first use, please refer to definition screens for all symbols. There are two ways of reset function as below:

1. Reset Function: Write a capital Z from top to bottom, and then draw a line back to the starting point.

2. Unload PenCommander Reset Function: Move the cursor to the small

icon for PenCommander on the tool bar at the lower right corner of the screen. Press the UP button on the digital pen (equivalent to the Right Mouse Key), and click and select the option of Reset function. The definition screen for all symbols will appear as shown below:

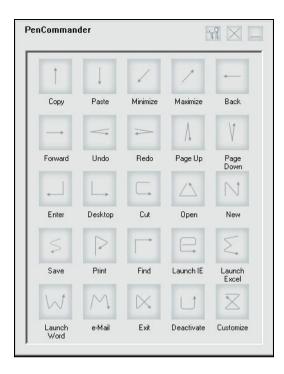

2.3.6 How to use instructions of PenCommander

 
When you write or draw anything on a digital tablet, the cursor will be changed into the icon as the right. When written symbols are recognized, the small icon will be changed into a blue color, and make a tick sound to execute the designated commands. When written symbols are not recognized, the small icon will change into the red color, and make a beep. Now, there will be no execution.



The computer will only make a tick sound or a beep when its volume is opened.


(1) Cut and Paste

: Copy: Draw a direct line like the capital numeric1 from bottom to top.



: Cut: Draw a curve like a lying block capital U from top left to right.

 (2) Minimize and Maximize the Window



: Maximize: Draw a direct line from lower left to top right. When restoring the maximized window to its original size, please re-draw the symbol signifying Maximize.

Desktop: Minimize all windows, and draw a direct line from top to bottom, and then turn it to right for 90 degrees. If you wish to restore all windows after minimizing them, please re-draw the symbol for desktop.

(3) Browse

: To next page, draw a direct line from right to left (designed for Internet Explorer).

: To next page, draw a direct line from right to left (designed for Internet Explorer).

: First page, draw a direct line from top to buttom and then turn back following the original line.

: Last page, draw a direct line from bottom to top and then turn back following the original line.

To scroll pages, please hold on first pen button (button near the penpoint), and move the penpoint on the digital tablet up and down in the air (pen type scrolling).

(4) Edition

Restore, to PreRestore in such text editors as Word, Excel and WordPad, draw a direct line from right to left and then turn back following the original line.

: Redo, draw a direct line from right to left and then turn back following the original line.

: Input, draw a direct line from top to bottom and turn the line to left for 90 degrees.

: Search, draw a direct line from top to bottom and turn the line to right for 90 degrees.

(5) Access and stop programs

Open the Word to activate the Microsoft Word, draw a curve like a lying, block capital W from top left corner to lower right.

Open the Excel to activate the Microsoft Excel, draw a curve like a lying, block capital W from top right corner to lower left.

: Email, to active e-mails, draw a curve like a block capital M from lower left to top right.

Open IE, to activate the Internet Explorer, please draw a curve like a small letter e in block from the middle.

End, to leave the application program, draw a diagonal from top right to lower left, and then draw a direct line upwards and finally draw another diagonal from top left to lower right to end.

: To pause PenCommander, draw a curve like a block capital U

from top to bottom.

(6) File Commands

: To open an old file, draw a counterclockwise triangle from the middle at top left.

: To open a new file, draw a curve like a block capital N from lower left and upwards.

: To save a file, draw a curve like a block capital S from lower right and downwards.

: To print a file, draw a curve like a block capital P from lower left and upwards.

2.3.7 Reset Functions of PenCommander

By pressing various pen command buttons, you can implement the PenCommander edition, where each PenCommander application can have seven functional options, but can only execute one function each time. Detailed instructions are as the follows:



Execute

Execute Button: You can open any application program or document.

You can either type in the route and file name directly, or click the browse button to select.


Except for application programs or files, you can also designate the directory location at the start of execution and provide the parameter value for executing the applications.

For example: select the browse button, and find out the Pclassic.exe, the execution file for Painter Classic to start Painter Classic as shown in the figure below:



Internet


Internet Button: select internet services such as web sites and emails. For instance, when you try to select a web site under the Service Categories, you enter the web address www.yahoo.com to connect the yahoo site as show in the figure below.

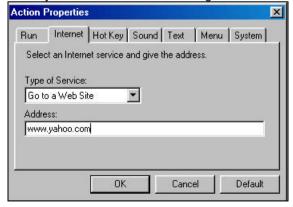

Shortcut Key


Shortcut Key: Virtual button combinations can be available in any PenCommander application.

For instance: press the copy button and set up the Ctrl+C compound button to execute the copy action.

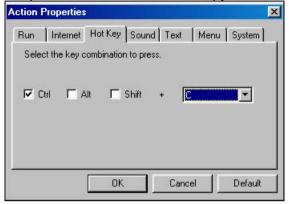


Sound

Sound Button: you can play any wav file.

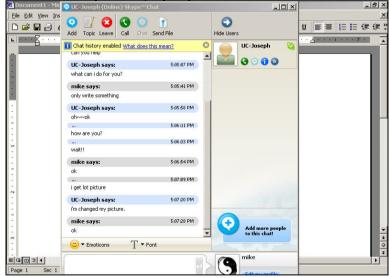

You can either type in the route and file name directly, or click the browse button to designate the playing features. For example:

select the browse button , and find the Chimes.wav to play.

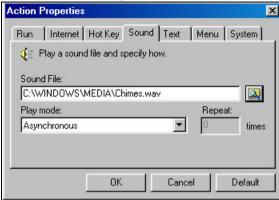

Text Text Button: text that can be entered into the edition area.

For example: enter a Text.a



Menu

Menu allows you to enter the underline characters into the blank spaces below so that you can use the menu functions. For instance: entering FS to execute the File/Save File function.



System

System Key: allows you to set up one system function, as well as the parameter value for this system function. For example, if you choose Maximize the Window, you will maximize the window in using as shown in the figure below.



2.3.8 Limitations of PenCommander



PenCommander shall be used in combination with the digital tablets that UC-Logic Technology Corp produces, and shall not be applicable to the digital tables or mice on the market, which are produced by other manufacturers.

2.3.9 Startup PenCommander with Windows System

Move the cursor to the small icon for PenCommander on the tool bar at the lower right corner of the screen. Press the UP button on the digital pen (equivalent to the Right Mouse Key), select the

Reset Function Unload PenCommander, and press the Setu of PenCommander.

STEP-2 Tick Activate PenCommander When Windows System Is Started, and press the Confirm button. Laterly, PenCommander will be activated when the Windows system is started.



2.3.10 Uninstall PenCommander

There are two methods:

Step 1

Move the cursor to the small icon for PenCommander on the tool bar at the lower right corner of the screen. Press the UP button on the digital pen (equivalent to the Right Mouse Key), and select the Uninstall

Unload PenCommander

PenCommander

to terminate the

PenCommander.

Step 2


Move the cursor to the Uninstall PenCommander button and this button will change into . Press the Uninstall PenCommander button and this application can be uninstalled.

2.4 PenMail


PenMail allows you to deliver your autograph letters to your families and friends over the Internet, where the recipients can receive the mails with your genuine handwritings rather than those with impassible printed characters. Besides, you can freely select background and insert computer text& images to enrich the contents of your letters.

2.4.1 "Access" PenMail


At the lower left corner of the screen, press in succession Start►All Programs►PenSuite►PenMail

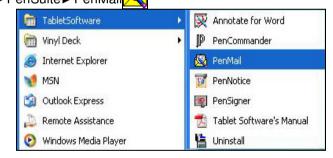

Now, the PenMail tool bar will appear on the screen and the cursor will turn out to be as shown in the right figure.

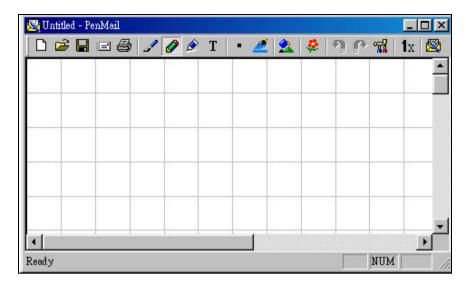

2.4.2 Introduction to PenMail Toolbars

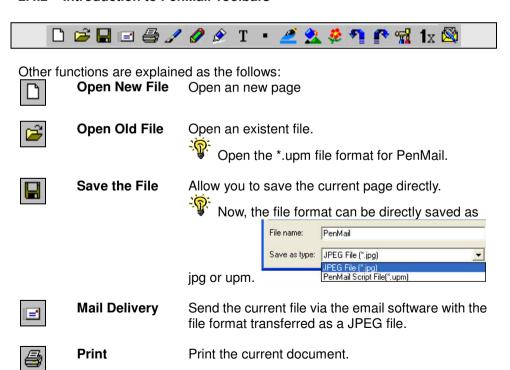



Brush Pen

With pen pressure available. But similar to a Chinese brush pen as there can be variations in the thickness of handwritings if pressure is too low on one stroke.



Pen

No pen pressure available. Its touch is just like a pencil.

While selecting brush pen/pen for handwritten graphics, you can make annotations or draw graphics at any part of the screen and can select the color or thickness of penpoint to adjust the features of next stroke.



White-Out

 
White-out can be used to correct the wrong words, images or paper background, and grid lines can be likewise deleted (grid lines are used for ensuring the calligraphic orderliness, and recipients will not see them after the mail is transferred). If a background image is selected as the paper background, the white-out would be in the white color; If a background color is selected as the paper background, the white-out would vary in accordance with such a color.




Insert Text

You can insert computer textin any application program.


After selecting the T Insert Text button, click and select the location where you wish to insert text and drag the "Input Box" to the appropriate input area



- An Input Box will appear at the location where text is inserted, and an "Insert Text" tool bar will appear on top of this box.
- Start to insert text. (If you want to leave the Insert Text application, press the "ESC" key to leave).
- After confirming the inserted text, please click the (Close) button and stop inserting the text.
- Now, text in the input box will form a text box at the location where the text is inserted.
- > Press the (Save) button and now a dialog box asking whether to save will pop up.
- When confirming the route and press the Save button, the inserted text will be saved at the location of insertion to become either a JPEG or a Bitmap image file.

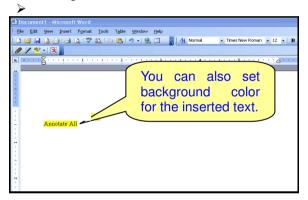


Various functions of Insert Text are based on the principle of consistency for the whole Input Box, while no separate adjustment is made for a single Line or a single Word. The size of Input Box will be flexibly adjusted in line with the text inserted. Below are the explanations for various functions:

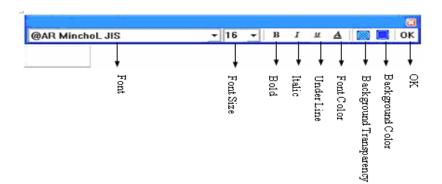

- Westwood LET (Western) Font: You can change the fonts of inserted text.
- Font Size: You can change the font size of inserted text. 2.
- 3. **Bold:** you can change the inputted text into the bold fonts.
- **Italic:** you can change the inputted text into the bold fonts. 4.
- 5. **Underline:** You can underline the inputted text.
- Font color: You can change the color of inputted text. 6.
- Background Transparency: You can change the background of inputted text into a transparent color.
- Background color: You can change the background color of inputted text.
- Close: Insert the inputted text.

Adjust the thickness and shape of penpoint

 
Styles of handwriting can be displayed in round shape, square shape and various marker pen shapes, and in 6 sizes, which can be combined to produce different creative drawing methods.





Select the color of penpoint -- You can select the colors of brush pen and pen inks.

Select the confirmed color and press the Confirm button.

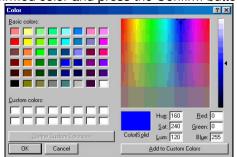



1. Insert Background Color 🎱

for background.

2. Insert Background Image 🏝

You can select the image you enjoy as the background.

<u>'@</u> If you choose to insert the Background Image, please select a You can select the color image similar to a letter paper in size as much as possible. If the size of the selected image is smaller than the letter paper, then the image will be processed by way of Cutting Off the Portion over the Size of Letter Paper after the Constrained Scale-Up.



Insert Images

Please select the image that is smaller than the letter paper. If the image you wish to insert is larger than the letter paper, the image will be processed by way of Constrained Scale-down.



Restore (Ctrl+Z)

Return to the previous action.



Cancel Restore (Ctrl + Y)


Return to the action before restoration.



Setup

You can set up the sizes of grid lines and whether the papers can be automatically scrolled (See figure below) Grid lines are used for ensuring the calligraphic orderliness, and recipients will not see them after the mail is transferred




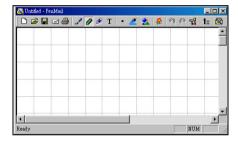

1x

Display Scale

 Display the scales of current handwriting with five scales available, while high multiples can be used in case of calligraphy and low multiples can be applied in case of check.




About

Display the system information ,version information and copyright statement for PenMail.

2.4.3 Setup writing format

Select paper size

There are four paper sizes for choice, namely A4, A5, Legal and Letter. After the setup is complete, paper size used last time will be automatically loaded when opening the PenMail next time.

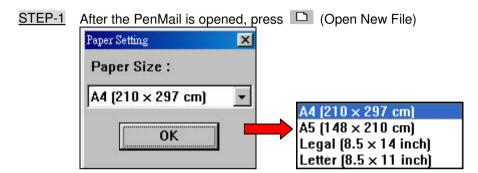

Set up the shape, width and color of handwritings as well as the paper background color

Please refer to the explanations for tool bar in the last section 3-4-2


2.4.4 Start to write

When PenMail is opened, you can change the background and select the appropriate pen and pen color to write or insert images (See figure below). When you write more than one page, the number of pages will be automatically increased up to a maximum of five pages.



2.4.5 Main Delivery

After you finish the writing, press the Mail Transfer button, which will automatically open your preset email software and append the letter you just made in the form of an attachment to the email. Then, please enter the email address you choose and the mail can be sent out.

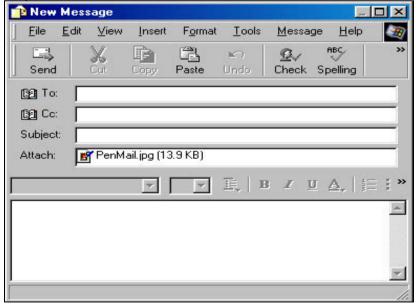

2.5 PenSigner

PenSigner can be used in combination with the text processing software, e-mail software and other application programs allowing image post. PenSigner will automatically transfer the handwritings in it into the file you are editing.

2.5.1 "Access "PenSigner

At the lower left corner of the screen, click in succession Start►All Programs►TabletSoftware►PenSigner



The PenSinger tool bar will be appeared on the screen.



2.5.2 Introduction to PenSigner ToolBars





Pen

No pen pressure available. Its touch is just like a pencil.



Brush Pen

With pen pressure available. But similar to a Chinese brush pen as they can be variations in the thickness of handwritings if pressure is too low on one stroke.

While selecting brush pen/pen for handwritten graphics, you can make annotations or draw graphics at any part of the screen and can select the color or thickness of pen point prior to any stroke to adjust the features of next stroke.

Shown in the figure below is the tool bar for both pen and brush pen. Please refer to section 2.5.3 for detailed explanations.





System

options as described at the right:



1.Settings:



• Auto Send after Timeout:

If you tick this option, the PenSigner will automatically transfer the handwritings to the file when you wait for a while after you pen up. You can set the time of waiting in the Wait Option on the right with the unit as a millisecond If you do not tick this option, you

must select the "Complete" button after you sign so that the handwritings can be sent out.

• Send then close this application:

If you tick this option, PenSigner will be automatically closed after the handwritings are sent out.

2. About:

Display the system information, version information and copyright statement for PenSigner.

3. Close:

This option is used to close the PenSigner.

Display in English:

This option is applied to select the applicable language when PenSigner uses an interface. You system must support all languages. Otherwise, there may be garbled codes.



Close

Close the PenSigner software

2.5.3 Introduction to Pen and Brush Pen Toolbars

When any application software is activated, you can choose either Pen or Brush Pen button to start to execute the handwritten signature or graphics.

1. Choose Pen: The handwritings drawn will be as same as are those drawn by a pen or a ball point pen, where the thickness of each stroke will remain

unchanged from start to end. You can choose the thickness of penpoint before penning down to write.

2. Choose Brush Pen: Handwritings drawn will exhibit pen pressure and will be similar to fonts drawn by a Chinese Brush Pen.





Adjust the thickness of Move the lever from left to right in the Adjust Thickness sliding board so that penpoint

the thickness of penpoint can be adjusted. From next stroke, new thickness will be adopted for the

handwriting.

3

Current thickness of penpoint

Thickness of penpoint currently displayed with its unit as pixel, namely the minimum unit for image point on the screen



Select the color of penpoint

You can select the color of penpoint according to any color chip available in From now on, the the color field. handwriting drawn will be changed into the selected color, until the color is replaced again next time. non-painting mode, choice of color will be ignored.



penpoint

Current thickness of The color filed will display the current color of penpoint.

52



Recover

Cancel the last stroke. Press once to delete one stroke, until all handwritings

are deleted.

Delete

Delete all handwritings and beina available for you to resign or redraw

graphics.

Complete

When you complete a signature, press Complete button to send out your handwritings, which can form a graphics object pasted in the current application

software.

Close

Close the drawing mode immediately

53

and delete all handwritings that are not

sent out.

3 · Frequently Asked Questions and Troubleshooting



After installed the Driver, why the Tablet Software is not working?

If the cursor can not move and follow the digital pen on the working area of tablet and no icon () displays on the lower right corner of system tray, that outcome means the driver of installation failed. Please check the following steps:

- 1. Please pull off the tablet's USB plug from the computer.
- 2. Remove the Tablet driver from the system.
- 3. Re-connect the Tablet's USB to the computer.
 - 3.1 Check whether the tablet's LED is blinking or not? If the LED unlighted, that means your tablet is fault.
 - 3.2 Test your wireless stylus pen on tablet working area, if it can work as a mouse, which means the hardware is OK. If it doesn't work, please change the battery with a new one.
- 3.3 After changed a new battery for the pen, if it still not working, that means the hardware is fault.
- 4. You can free download the latest version of driver directly from our website.
- 5. Setup the new version of driver; it will require you to restart your computer.
- 6. After restart your computer, on bottom right of the screen, you can find the tablet icon (③) within there.
 - 6.1 If you can't find the tablet icon () on the bottom right of the screen, it means the driver fail in startup, It might cause by a incompatible issue.
 - 6.2 Check from [My Computer] ▶ [Properties] ▶ [Hardware] ▶ [Device Manager], if there is an exclamation mark occurs, it means the installed driver of tablet is incompatible with the windows system. If you have this problem, please contact us for more service.
- 7. By clicking the tablet icon () on the bottom right of the screen, you can test the pressure sensitivity to see whether the pen pressure function works or not.
 - ☆ If your tablet does not have the pen pressure, it means the pen might be faulty.

Take Care of Your Tablet

To ensure the long life of the pen tablet you use, please effectively observe the following maintenance principles:

- When the pen tablet is not in use, please put the pen into the pen holder (or place the pen flatly) to avoid the direct touch of refill on the panel and prevent the subsequent consumption of electricity.
- Store the product in a cool, dry place. Avoid placing it in a high temperature environment or putting a heavy object on it to cause damages to the panel.
- As this is an electronic product, please prevent the severe drop and shock of this product.
- Never soak this electronic product in any fluid.
- Never store this electronic product under an extremely high or a sharply cold temperature, or in a place with relatively high humidity.
- Never disassemble the equipment discretionarily. Any damage thus incurred will not be remedied in our after-sale service.