

ASSEMBLY INSTRUCTIONS

FOR FIXED FLAT PANEL WALL MOUNT

This product is designed to mount flat panel televisions weighing up to 75kg to a vertical firm wall.

Safety Warning: Be careful to make sure there are no missing or defective parts. Never use defective parts. Improper installation may cause damage or serious injury.

Note: The included hardware is for mounting on walls. If you are uncertain about the nature of your wall, consult an expert. Please consult your hardware or installation professional for proper mounting to other types or walls. The supplied hardware is not for steel.


Forbidden Instruction: Do not mount onto plasterboard or paneled walls.

a		x1	b		x1	c		x1	d		x4
e		x4	f		x4	i		x4	k		x4
l		x4	m		x4	n		x4	o		x4
q		x4	SUP PLIED PART S: Supplied joint parts are exclusive for using in this product. Other joint parts are forbidden to use on this product. If any parts are missing or faulty, telephone the special franchiser for a placement.								

1 FIX TO WALL




Note: This product should be mounted to solid brick, concrete or hard wood batten/studs wall.

SOLID BRICK AND CONCRETE BLOCK MOUNTING: Use the Wall Plate (a) as a template to mark 4 holes locations on the wall, two in the top row slots and two more in the bottom row. Make sure these holes are level and there is at least 110mm between any two holes. Pre-drill these holes with a 10mm masonry bit to at least 60mm in depth. Insert a Concrete Anchor (f) into each of these holes. Attach the Wall Plate to the wall using 4 Lag Bolts (e) and 4 M4 / M5 / M6 Washers (d).

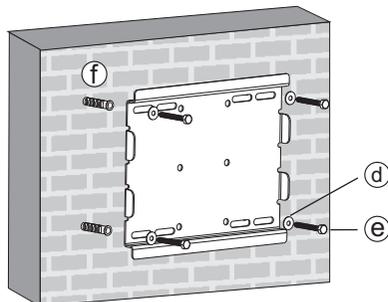

2 FIT SCREEN

2.MOUNT THE TV RAILS TO THE BACK OF YOUR FLAT PANEL TV: Make sure the TV Rails (b and c) are mounted at an equal distance from the top of the TV and as close to the center as possible as shown in diagram 2-A. Safety screws should face the outside of the television. M4, M5, M6 and M8 bolts are provided. Plastic Spacers (l) are provided for use with M4, M5, M6 and M8 TV mount bolts on TV's with curved or recessed back panels as shown in diagram 2-B. If you are mounting to a television with a flat back you will not need a plastic spacer as shown in diagram 2-C. **Make sure these bolts are right!** Some televisions have shallow threaded inserts; we have provided 4 extra washers you may use to offset this if the provided bolts are too long.

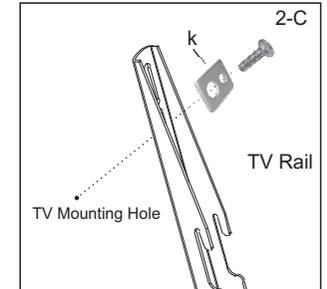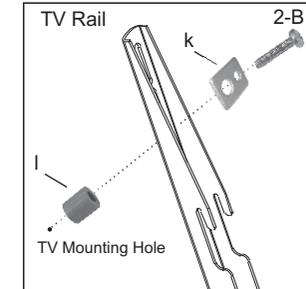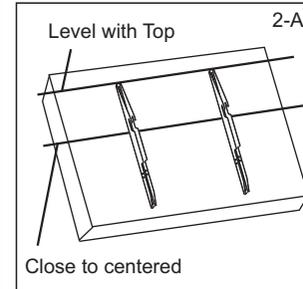

3 HANG ONTO THE WALL

3. HANG THE TV ONTO THE WALL PLATE:

First hook the TV Rails (b and c) over the top of the Wall Plate (a) as showed in diagram 3-A.

Then tighten the Safety Screws as showed in diagram 3-B.


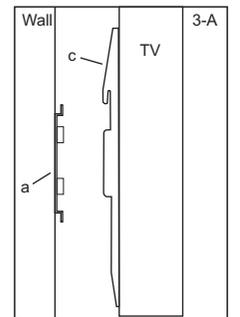


Diagram 4-A: Front view of the fixed plasma mount assembled.

Diagram 4-B: Safety screws tightened.

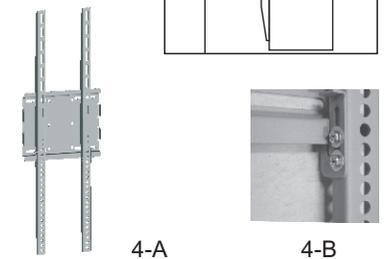

TENDING INSTRUCTION

Please check whether screws are fixed well each two months.

IF YOU HAVE ANY DOUBTS REGARDING INSTALLATION CONSULT OUR SPECIAL FRANCHISER.