

## IR USER QUICK GUIDE

### Introduction:

1. IR HDMI Adapter out-port (Male port) plug into DVD source, IR receiver (transmitter) plug into adapter (IR RX port).
2. IR HDMI adapter in-ports (Female port) connect with HDMI Cable (Male-to-Male HDMI cable).
3. Another IR HDMI adapter in-port (Female port) connects with HDMI cable, and the out-port (Male port) plug into HDMI port of TV set, plug the IR Receiver into the adapter (IR RX port).
4. Keep the IR Sender pointed to the DVD-IR-receiver, use the DVD remote control and point to IR receiver then you can control the DVD player, as you desire in front of the TV set.

Please refer to the below diagram

### Note:

1. Choose the IR channel on the IR Adapter, when use the IR back/forward function

