Shared Command	
	Enquiry the linked source&sink device, and tell which port the link between the
QS	source and the sink device through
ON	Turn on Power
OFF	Turn off Power
	Let Source and Sink end auto decide their link according to the serial Nowhich
AU	is the same as the auto link when turn on the MHSS0402E device
Sink A Choose Input relation Command	
A1	Choose No.1 Input source
A2	Choose No.2 Input source
A3	Choose No.3 Input source
A4	Choose No.4 Input source
Sink B Choose Input relation Command	
B1	Choose No.1 Input source
B2	Choose No.2 Input source
B3	Choose No.3 Input source
B4	Choose No.4 Input source
Sink C Choose Input relation Command	
C1	Choose No.1 Input source
C2	Choose No.2 Input source
C3	Choose No.3 Input source
C4	Choose No.4 Input source
Sink D Choose Input relation Command	
D1	Choose No.1 Input source
D2	Choose No.2 Input source
D3	Choose No.3 Input source
D4	Choose No.4 Input source
Turn Off Sink signal	
CA	Turn Off Sink A signal, Not let sink A device display
СВ	Turn Off Sink B signal, Not let sink A device display
CC	Turn Off Sink C signal, Not let sink A device display
CD	Turn Off Sink D signal, Not let sink A device display

Matrix 4x4E device RS232 Commands List

Note : command not differentiate the capital or the lowercase