


4. Attach the Display to the VESA Plate \oplus (D--М Lift the display and match the holes on your display with the hole on the mount. Secure your display to the mount by tightening screws. €⊃ 0⊃--0--

5. Adjustment

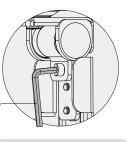

Tighten all screws but do not over tighten.




Adjust to desired location.

For saving the space, you can fold display by pushing display back until it fits in place.

Maintenance

- Check that the bracket is secure and safe to use at regular intervals(at least every three months).
- Please contact your dealer if you have any questions.

Under-cabinet / Ceiling Mount

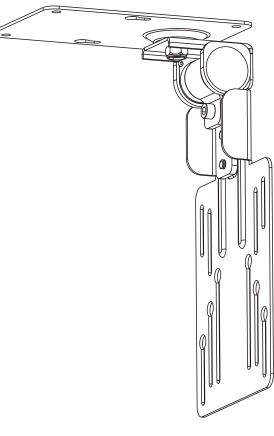



CAUTION: DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!




NOTE: Read the entire instruction manual before you start installation and assembly.

- Do not begin the installation until you have read and understood the instructions and warnings contained in this installation sheet. If you have any question regarding any of the instruction or warning, please contact your local distributor.
- This mounting bracket was designed to be installed and utilized ONLY as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone of good mechanical ability, with basic building experiences and fully understanding of this manual.
- Make sure that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.
- Always use assistant or mechanical lifting equipment to safely lift and position equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can damage the items, greatly reducing their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.


Component Checklist

IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installing. If any parts are missing or faulty, telephone your local distributor for a replacement.

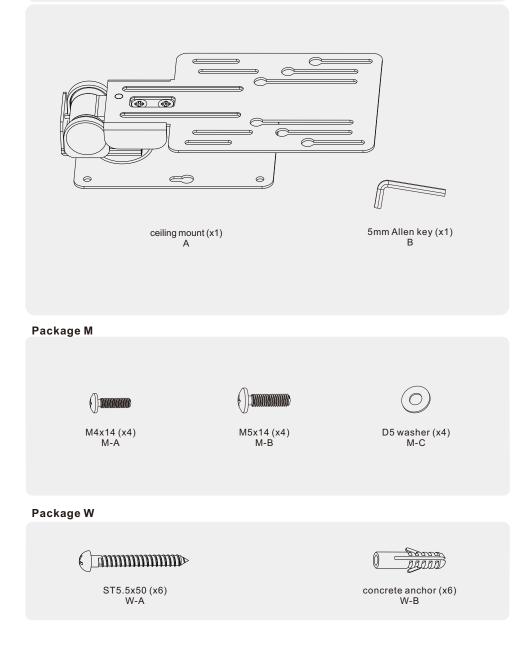

3a. Mount on Wooden Ceiling



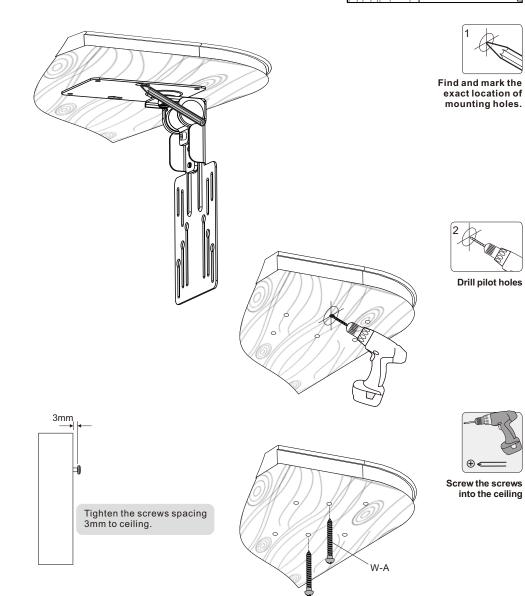


50mm |\

ø 4mm

(ø 5/32")

(2")

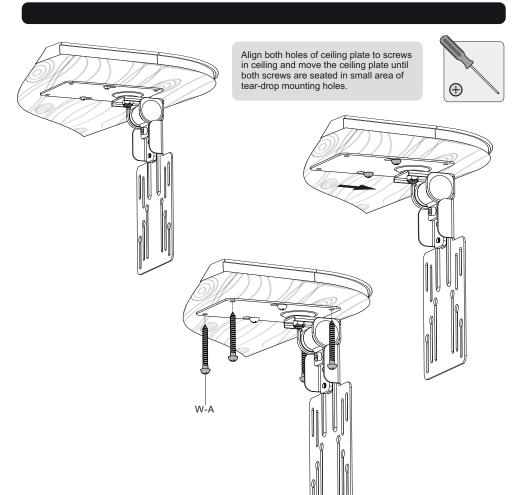

Fix the ceiling plate using the four other screws and then tighten all screws.

• Installers are responsible to provide hardware for other types of mounting situations.

Installers must verify that the supporting surface will safely support the combined load of the
equipment and all attached hardware and components.

3b. Mount on Solid Brick and Concrete Block

