


INSTALLATION GUIDE

STEP 1

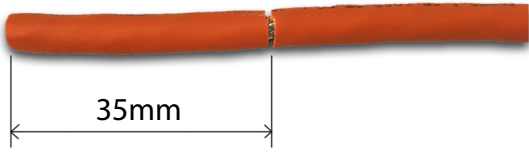


Strip the cable jacket by 35mm.

STEP 2




Remove the stripped cable jacket.

STEP 3

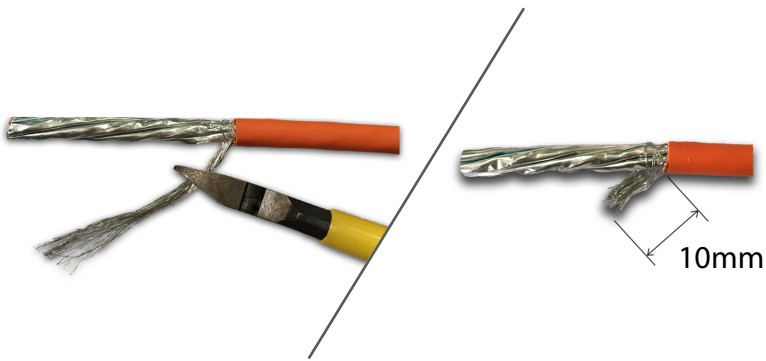


Cut the braided shield at 10mm and push it back over the cable jacket.

STEP 4

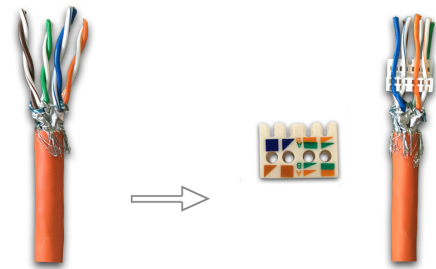


Cut back the foil shielding, fan out all four twisted wire pairs, and allocate each conductor into the proper slot following the color coding on the wires and wiring cap.

STEP 5

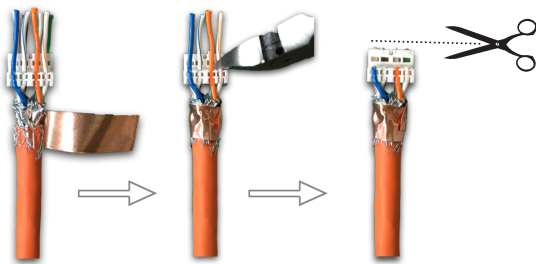


Wrap the aluminum foil, woven mesh, and ground wire with copper foil tape, then trim the ends of the conductors.

STEP 6

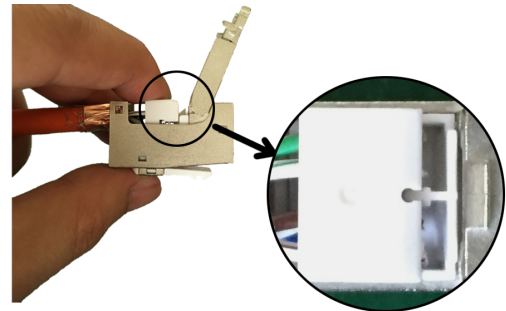


Place the wiring cap into the keystone jack.

STEP 7

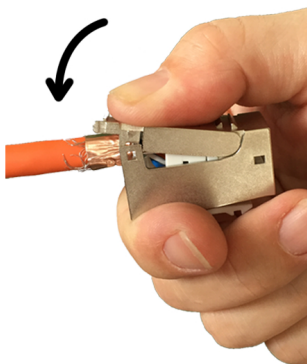

Close the keystone jack cover.

STEP 8

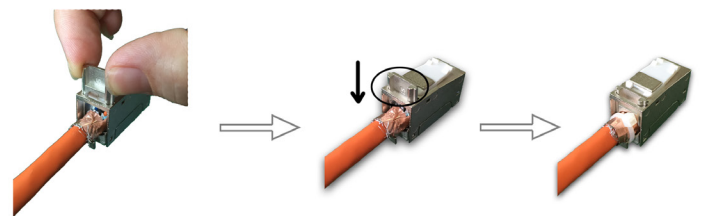

Push the sliding block into the keystone jack and tighten the copper foil tape. Make sure the drain wire is in proper contact with the grounding clip on the keystone jack then fasten the supplied cable tie to secure the grounding contact.