




Monoprice™ 1 PAIR of High-Quality
Gold Plated Speaker Banana Plugs, Closed Screw Type

P/N **2801**
Quick Installation Guide


- 1** Strip the jacket off the tip of the wire to expose the bare wire.

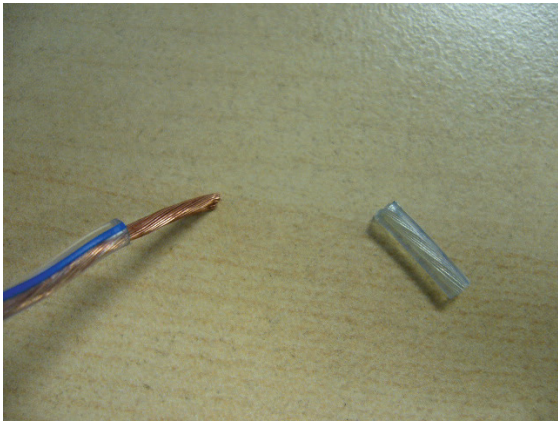


- 2** Unscrew and remove the back of the banana plug.



- 3** Insert the bare wire through the hole in the back of the piece you just removed until it pokes out the other side.

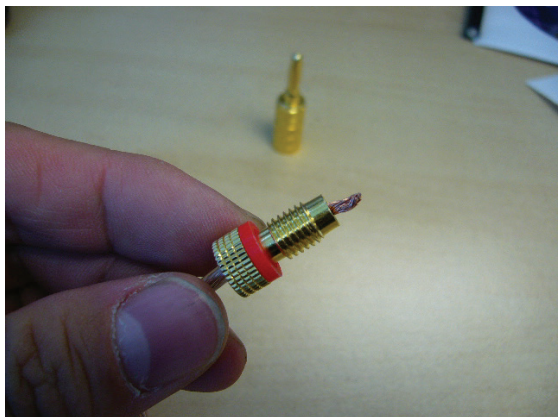

- 4** Spread out the strands of the wire and bend them over the gap at the tip of the screw making sure not to cover the actual threads of the screw.

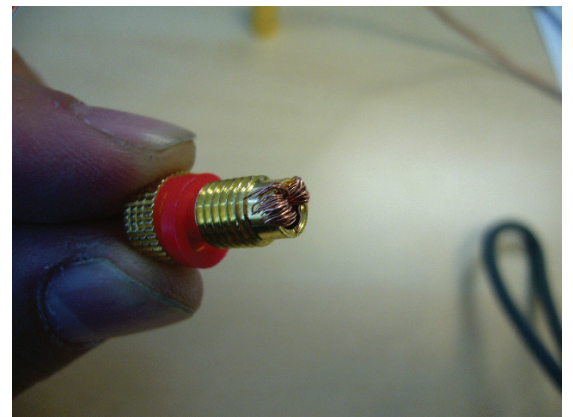

- 5** Reinsert the back piece into the plug and screw down firmly.



- 6** Give a slight tug to make sure the wire is securely fastened.



7

Repeat for all ends of the wire.

8

Plug into speakers and amp giving proper regard to polarity. You're done!



www.monoprice.com

Need Help? We're here for you!

Contact us: www.monoprice.com/contactus

Product pictures are for reference only.

Specifications described herein are subject to change without prior notification.

Monoprice™ and all Monoprice logos are trademarks of Monoprice Inc.

Copyright © 2025 Monoprice, Inc. All rights reserved.

Monoprice, Inc.

1 Pointe Drive, Suite 400

Brea, CA 92821 – USA

www.monoprice.com