


MONOPRICE®

Best Quality Products at the Lowest Price - Always!

11701 6th Street, Rancho Cucamonga, CA 91730

Tel: (909) 989-6887 Fax: (909) 989-0078

 <http://www.monoprice.com/>

Product ID : 7090 7091 7092

Surface Mounted Box

1



Unshielded




Half shielded



Full shielded

2

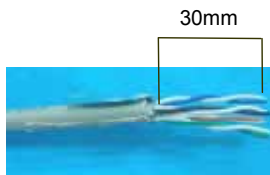

Strip approximately 30mm of the cable jacket, and separate the wires into 4 pairs.

3



Surface box series provides two entrances for cables, please pre-insert the cables before installation.

4

T568A		T568B	
Pin 1	White/Green	Pin 1	White/orange
Pin 2	Green	Pin 2	Orange
Pin 3	White/Orange	Pin 3	White/Green
Pin 4	Blue	Pin 4	Blue
Pin 5	White/Blue	Pin 5	White/Blue
Pin 6	Orange	Pin 6	Green
Pin 7	White/Brown	Pin 7	White/Brown
Pin 8	Brown	Pin 8	Brown

Complete wiring instruction for T568A & T568B.

5



Follow the wiring instruction and IDC color-coding to punch the wires by 110 or KRONE punching tool.

6



Fasten the cable holder and make sure the foil or braid shield makes contact with the cable holder.

7



Place the upper cover to complete the installation.