

MONOPRICE®

Best Quality Products at the Lowest Price - Always!

11701 6th Street, Rancho Cucamonga, CA 91730

Tel: (909) 989-6887 Fax: (909) 989-0078

 <http://www.monoprice.com/>

Product ID : 7090 7091 7092

Surface Mounted Box

1



Unshielded




Half shielded



Full shielded

2

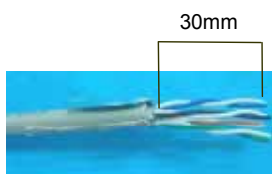

Strip approximately 30mm of the cable jacket, and separate the wires into 4 pairs.

3



Surface box series provides two entrances for cables, please pre-insert the cables before installation.

4

T568A

Pin 1 White/Green
Pin 2 Green
Pin 3 White/Orange
Pin 4 Blue
Pin 5 White/Blue
Pin 6 Orange
Pin 7 White/Brown
Pin 8 Brown

T568B

Pin 1 White/orange
Pin 2 Orange
Pin 3 White/Green
Pin 4 Blue
Pin 5 White/Blue
Pin 6 Green
Pin 7 White/Brown
Pin 8 Brown

Complete wiring instruction for T568A & T568B.

5



Follow the wiring instruction and IDC color-coding to punch the wires by 110 or KRONE punching tool.

6



Fasten the cable holder and make sure the foil or braid shield makes contact with the cable holder.

7



Place the upper cover to complete the installation.