

STEP 12 Place your TV face down on a soft blanket or towel and attach the two TV Suspension Brackets (B) to the back of the TV, as shown below.

12-1

For TVs with a flat back design.

12-2

For TVs with curved or sloping backs, use the appropriate combination of spacers to produce a secure TV and Bracket assembly.

FINAL STEP


Loosen the Safety Bolts on the two TV Suspension Brackets. With the help of an assistant, lift the TV and hook the top of the Suspension Brackets to the top of the TV Suspension Plate. Ensure the TV securely hangs in place. Tighten the Safety Bolts to secure the TV in place.

MONOPRICE®

User's Manual

High Quality TV Stand w/ Mount


for Flat Panel TVs up to 55-Inches

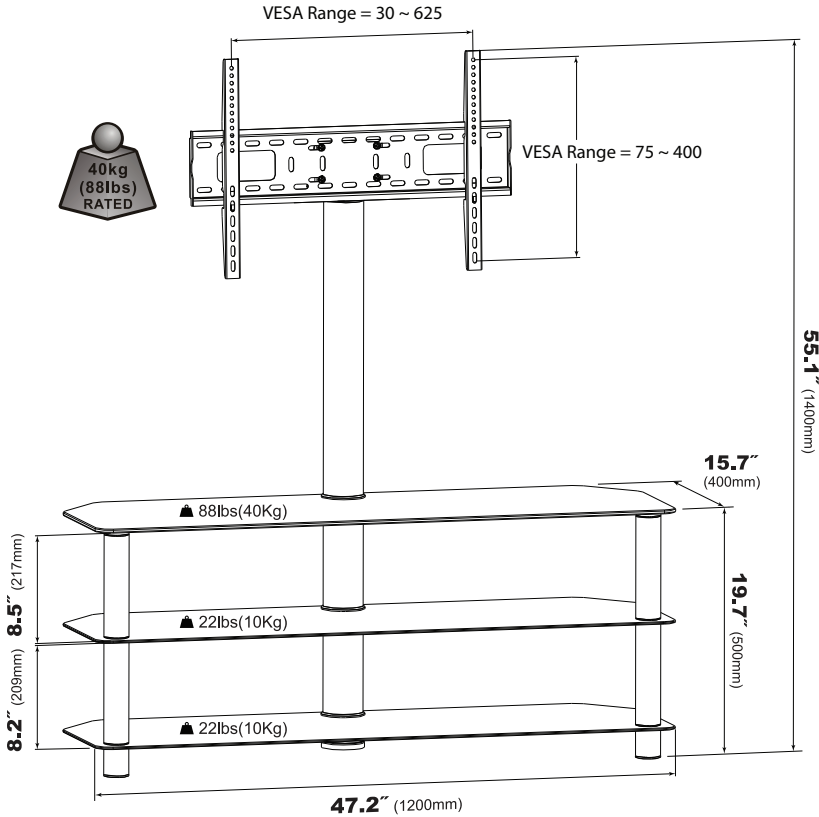


Assembled Dimensions

PID	NET WEIGHT	GROSS WEIGHT	PRODUCT SIZE L x W x H
10906	max 60.63lbs(27.5kg)	max 66.60lbs(30.3kg)	47.2in x 15.7in x 55.1in (1200mm x 400mm x 1400mm)

Thank you for purchasing the Monoprice 10906 TV Stand! Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

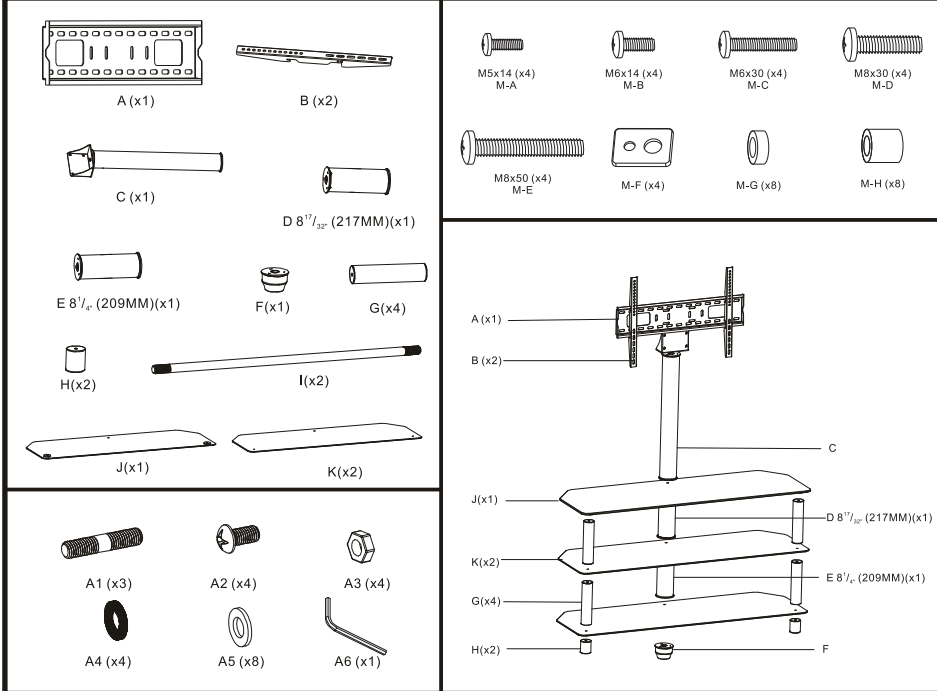


STEP5

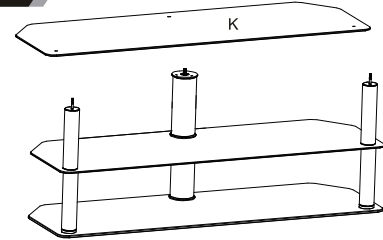


Slide the other Lower Shelf (B) over the two Threaded Rods (I) and the exposed Double Threaded Stud (A), as shown above. Make sure that the dull side is up, so that the finished side is on top when the final assembly is inverted for use.

STEP6

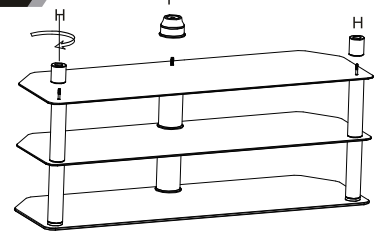


Screw the two Feet (H) onto the outer Threaded Rods (I). Screw the Foot (F) onto exposed Double Threaded Stud (A). Twist to tighten, but do not overtighten.

STEP7

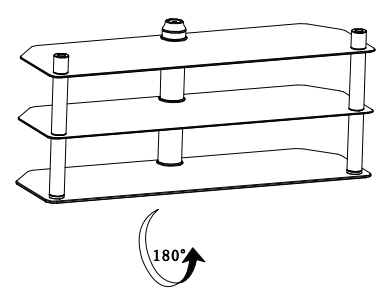


With the help of an assistant, lift the assembled TV Stand off the floor, invert it, and set it back down on its feet.

STEP8

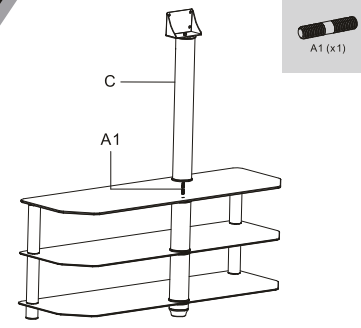


Screw the remaining Double Threaded Stud (A) into the top of Spacer (D) as shown above. Next, screw the TV Riser (C) onto the exposed Double Threaded Stud (A) Hold Spacer (E) and twist TV Riser (C) to tighten. Do not overtighten.

STEP9

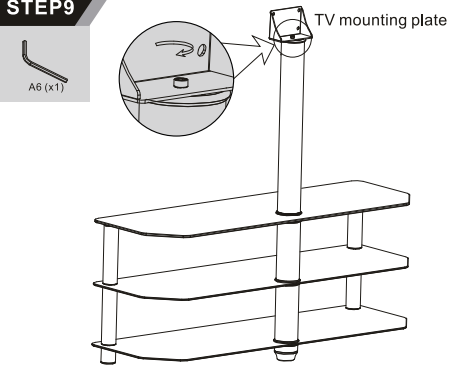


Using the included Allen wrench (A6) loosen the bolt holding the TV Mounting Plate to the TV Riser (C) and adjust the plate so that the face is parallel to the front and back of the shelves. Tighten the bolt, but do not overtighten.

STEP10

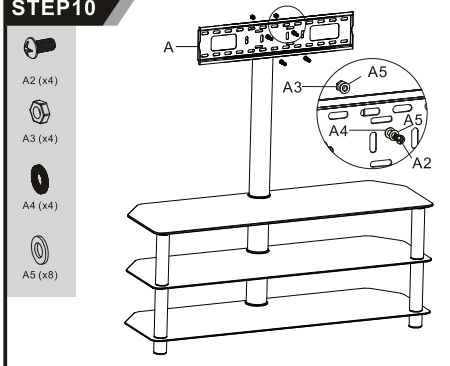


Using the hardware shown above, attach the Suspension Plate (A) to the TV Mount Plate. The screws (A2) are inserted from the front. Follow the order shown above: Screw (A2), Silver Washer (A5), Black Washer (A4), Suspension Plate (A), TV Mount Bracket on TV Riser (C), Silver Washer (A5), and Nut (A3). Use a Phillips or slotted screwdriver and a wrench to tighten the assembly together.

STEP11

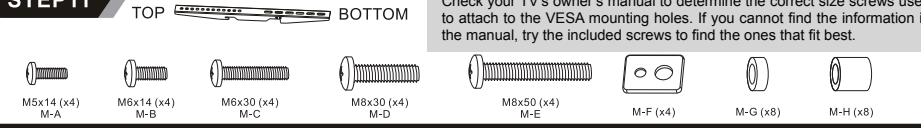


Check your TV's owner's manual to determine the correct size screws used to attach to the VESA mounting holes. If you cannot find the information in the manual, try the included screws to find the ones that fit best.


For best results, assemble the TV stand on a soft blanket or towel to protect the finish while it is being assembled.

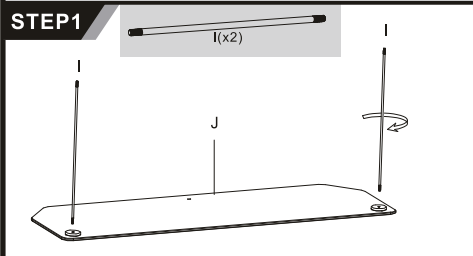


Place the Top Shelf (J) upside down on top of a soft blanket or towel. Screw the two Threaded Rods (I) into the sockets on the bottom of the top shelf, as shown above. Twist to tighten, but do not overtighten.

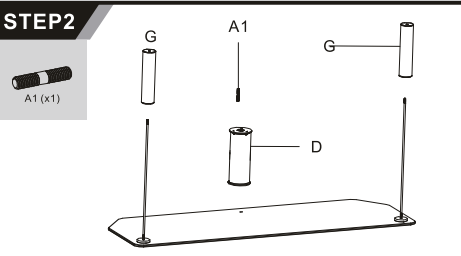

Slide the two Spacers (G) over the two Threaded Rods (I). Set the Spacer (D) over the hole in the center-rear of the shelf. Screw one of the Double Threaded Studs (A) into the Spacer (D), as shown above.

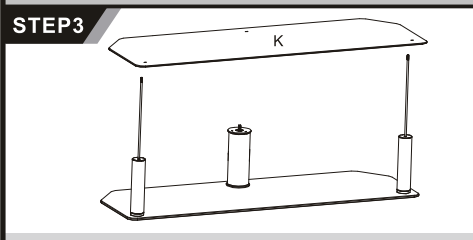

Slide a Lower Shelf (K) over the two Threaded Rods (I) and over the exposed Double Threaded Stud (A), as shown above. Make sure that the dull side is up, so that the finished side is on top when the final assembly is inverted for use.

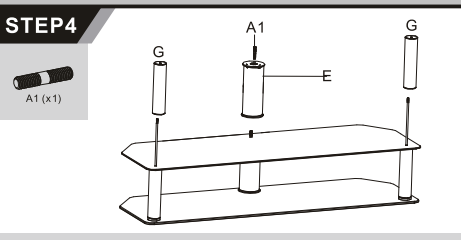

Slide the two Spacers (G) over the two Threaded Rods (I). Screw the Spacer (E) onto the exposed Double Threaded Stud (A). You will need to hold Spacer (D) while twisting Spacer (E) to tighten the two together. Screw another Double Threaded Stud (A) into Spacer (E).